

CMT-CP333

SERVICE MANUAL

Ver 1.0 2003.02

*US Model
Canadian Model
AEP Model
UK Model
E Model*

- CMT-CP333 is composed of following models.
As for the service manual, it is issued for each component model, then, please refer to them.

COMPONENT MODEL NAME

	CMT-CP333
COMPACT DISK DECK RECEIVER SYSTEM	HCD-CP333
SPEAKER SYSTEM	SS-CCP333

SPECIFICATIONS

General

Power requirements
North American model: 120 V AC, 60 Hz
European model: 230 V AC, 50/60 Hz
Other models: 110 - 120 V or 220 -
240 V AC, 50/60 Hz
Adjustable with voltage
selector

Power consumption
European model
70 W
0.4 W (at the power
saving mode)
Other models: 70 W

Dimensions (w/h/d) Approx. 225 × 273 ×
385 mm incl. projecting
parts and controls

Mass Approx. 7.3 kg

Supplied accessories Remote commander (1)
AM loop antenna (1)
FM wire antenna (1)
Batteries (2)

Design and specifications are subject to change
without notice.

PARTS LIST

Part No.	Description	Remark
ACCESSORIES *****		
1-476-705-12	COMMANDER, STANDARD (RM-SCP300)	
1-501-374-32	ANTENNA, LOOP (AM)	
1-501-659-62	ANTENNA (FM)(US,CND,E51)	
1-569-008-12	ADAPTOR, CONVERSION 2P (E51)	
1-754-060-13	ANTENNA (FM)(AEP,UK)	
4-233-757-16	MANUAL, INSTRUCTION (ENGLISH)	
4-233-757-24	MANUAL, INSTRUCTION (FRENCH, SPANISH) (AEP)	
4-233-757-34	MANUAL, INSTRUCTION (FRENCH)(US,CND)	
4-233-757-44	MANUAL, INSTRUCTION (SPANISH)(E51)	
4-233-757-54	MANUAL, INSTRUCTION (GERMAN, DUTCH, ITALIAN)(AEP)	
4-233-757-64	MANUAL, INSTRUCTION (SWEDISH, POLISH)(AEP)	
4-235-505-01	COVER, BATTERY (FOR RM-SCP300)	

- Abbreviation
CND : Canadian model.
E51 : Chilean and peruvian model.

MICRO HI-FI COMPONENT SYSTEM

HCD-CP333

SERVICE MANUAL

Ver 1.1 2003.11

US Model
Canadian Model
AEP Model
UK Model
E Model



- HCD-CP333 is the Amplifier, CD player, Tape Deck and Tuner section in CMT-CP333.

CD Section	Model Name Using Similar Mechanism	HCD-CP300
	CD Mechanism Type	CDM63K-K6BD44
	Optical Pick-up Type	KSM-213D
Tape deck Section	Model Name Using Similar Mechanism	HCD-CP300
	Tape Transport Mechanism Type	CMBL6Z511A

SPECIFICATIONS

Amplifier section

For the U.S. model

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 6-ohm loads, both channels driven, from 120 - 10,000 Hz; rated 40 watts per channel minimum RMS power, with no more than 10% total harmonic distortion from 250 milliwatts to rated output.

North American model

Continuous RMS power output (reference):
40 + 40 W
(6 ohms at 1 kHz, 10% THD)

Total harmonic distortion less than 0.07% (6 ohms at 1 kHz, 32 W)

European model

DIN power output (rated): 32 + 32 W
(6 ohms at 1 kHz, DIN)
Continuous RMS power output (reference):
40 + 40 W
(6 ohms at 1 kHz, 10% THD)

Music power output (reference):
100 + 100 W

Other models

The following measured at 230 V AC, 60 Hz
DIN power output (rated): 30 + 30 W
(6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):
38 + 38 W
(6 ohms at 1 kHz, 10% THD)

The following measured at 220 V AC, 60 Hz
DIN power output (rated): 27 + 27 W
(6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):
35 + 35 W
(6 ohms at 1 kHz, 10% THD)

Inputs

AUDIO IN MD (VIDEO) (phono jacks):
Sensitivity 500/250 mV,
impedance 47 kilohms

Outputs

CD DIGITAL OUT OPTICAL:
Optical

PHONES:

Accepts headphones with
an impedance of 8 ohms
or more
6 ohms

SPEAKER:

CD player section

System Compact disc and digital
audio system

Laser

Semiconductor laser
($\lambda = 780 \text{ nm}$)
Emission
duration: continuous
780 - 790 nm
20 Hz - 20 kHz ($\pm 0.5 \text{ dB}$)

Wavelength
Frequency response

Tape player section

Recording system 4-track 2-channel stereo
Frequency response 50 - 13,000 Hz ($\pm 3 \text{ dB}$),
using a Sony TYPE I
cassette

Tuner section

FM stereo, FM/AM superheterodyne tuner

FM tuner section

Tuning range
North American model: 87.5 - 108.0 MHz
(100-kHz step)
Other models: 87.5 - 108.0 MHz
(50-kHz step)
Antenna FM wire antenna
Antenna terminals 75 ohm unbalanced
Intermediate frequency 10.7 MHz

— Continued on next page —

MICRO HI-FI COMPONENT SYSTEM

9-877-051-02

2003K16-1

© 2003.11

Sony Corporation

Home Audio Company

Published by Sony Engineering Corporation

SONY®

AM tuner section	
Tuning range	
North American model:	530 - 1,710 kHz (with the tuning interval set at 10 kHz) 531 - 1,710 kHz (with the tuning interval set at 9 kHz)
European model:	531 - 1,602 kHz (with the tuning interval set at 9 kHz)
Other models:	530 - 1,710 kHz (with the tuning interval set at 10 kHz) 531 - 1,602 kHz (with the tuning interval set at 9 kHz)
Antenna	AM loop antenna, external antenna terminal
Intermediate frequency	450 kHz
General	
Power requirements	
North American model:	120 V AC, 60 Hz
European model:	230 V AC, 50/60 Hz
Other models:	110 - 120 V or 220 - 240 V AC , 50/60 Hz Adjustable with voltage selector
Power consumption	
European model	70 W 0.4 W (at the power saving mode)
Other models:	70 W
Dimensions (w/h/d)	Approx. 225 × 273 × 385 mm incl. projecting parts and controls
Mass	Approx. 7.3 kg

•Design and specifications are subject to change without notice.

TABLE OF CONTENTS

1. SERVICING NOTES	4
2. GENERAL	5
3. DISASSEMBLY	7
3-1. Cover (Upper)	8
3-2. Front Panel Section	8
3-3. Tape Mechanism Deck-1	9
3-4. Tape Mechanism Deck-2	9
3-5. LED Board, CONTROL Board	10
3-6. Back Panel Sub Assy, JACK Board	10
3-7. MAIN Board	11
3-8. POWER Board	11
3-9. CD Mechanism Deck (CDM63K-K6BD44)	12
3-10. CD Board	12
3-11. Base Unit (BU-K6BD44)	13
3-12. Tray Assy	13
3-13. Silder (Loading)	14
3-14. TRAY SENSOR Board, MOTOR Board	14
3-15. IN OUT SW Board	15
3-16. Stocker Assy	15
3-17. CD Base Unit Assy, DISC SENSOR Board	16
4. TEST MODE	17
5. ELECTRICAL ADJUSTMENTS	18
6. DIAGRAMS	20
6-1. Note For Printed Wiring Boards And Schematic Diagrams	20
6-2. Block Diagrams	21
6-3. Circuit Boards Location	23
6-4. Printed Wiring Board – CD Board –	24
6-5. Schematic Diagram - CD Board -	25
6-6. Printed Wiring Board – TC Board –	26
6-7. Schematic Diagram – TC Board –	27
6-8. Printed Wiring Board – MAIN Board –	28
6-9. Schematic Diagram – MAIN Board (1/3) –	29
6-10. Schematic Diagram – MAIN Board (2/3) –	30
6-11. Schematic Diagram – MAIN Board (3/3) –	31
6-12. Printed Wiring Board – CONTROL Section –	32
6-13. Schematic Diagram – CONTROL Section –	33
6-14. Printed Wiring Board – DRIVER Section –	34
6-15. Schematic Diagram – DRIVER Section –	35
6-16. Printed Wiring Board – POWER Board –	36
6-17. Schematic Diagram – POWER Board –	37
6-18. Printed Wiring Board – LCD Section –	38
6-19. Schematic Diagram – LCD Section –	38
6-20. IC Pin Function Description	39
6-21. IC Block Diagrams	41
7. EXPLODED VIEWS	44
7-1. Cover Section	44
7-2. Front Panel Section	45
7-3. Chassis Section	46
7-4. CD Mechanism Deck-1	47
7-5. CD Mechanism Deck-2	48
7-6. KSM-213D	49
8. ELECTRICAL PARTS LIST	50

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.


Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

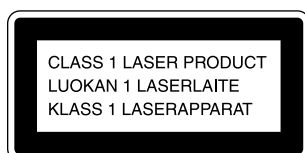

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer: Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

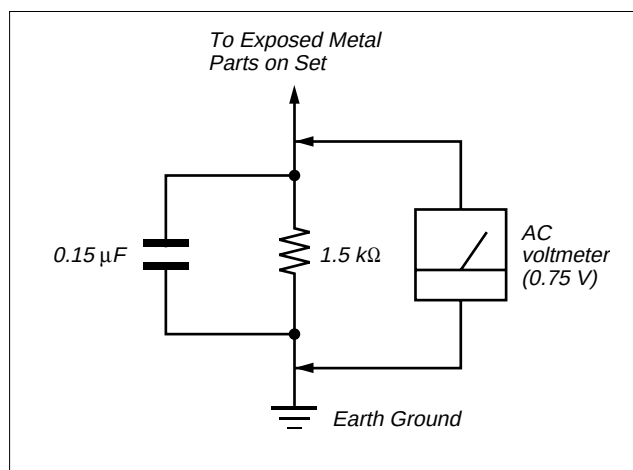


Fig. A. Using an AC voltmeter to check AC leakage.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE $\triangle$ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1
SERVICING NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP
BLOCK OR BASE UNIT


The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK


The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

MODEL IDENTIFICATION
— BACK PANEL —

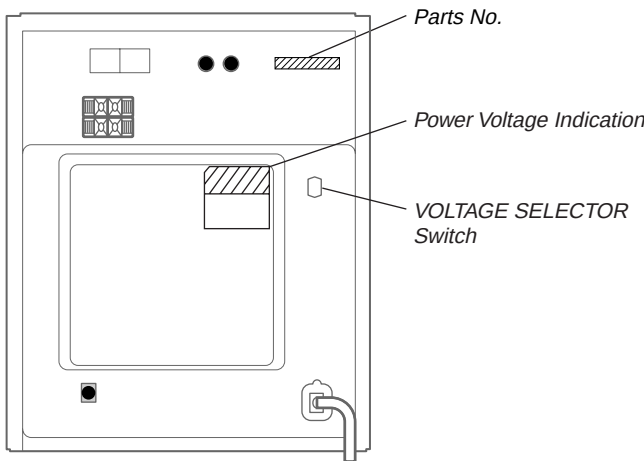

SERVICE POSTION

In checking the CD block, prepare jig (extension cable J-2501-011-B).

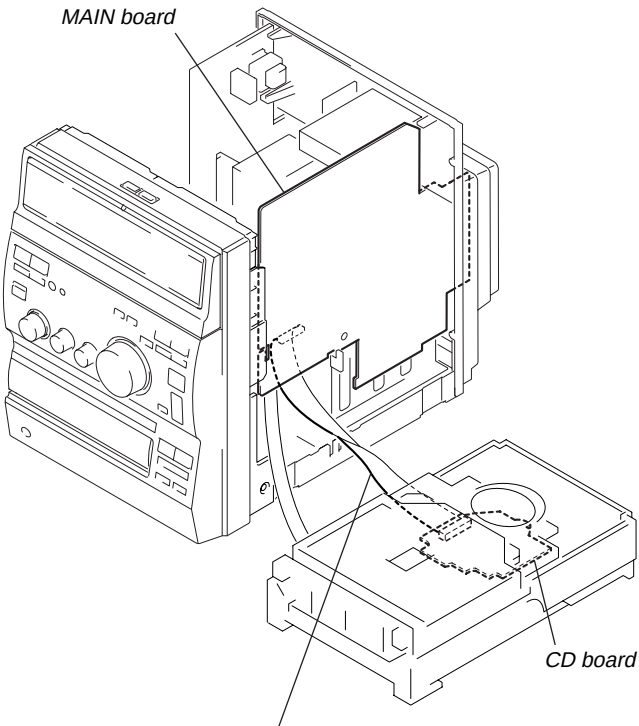


MODEL	PARTS No.	POWER VOLTAGE INDICATION
AEP model	4-233-470-3□	AC:230V 50/60Hz 70W
UK model	4-233-470-3□	
US model	4-233-470-4□	AC:120V 60Hz 70W
Canadian model	4-233-470-4□	
E model	4-233-470-5□	AC:110-120/220-240V 50/60Hz 70W

SECTION 2 GENERAL

This section is extracted
from instruction manual.

Main unit

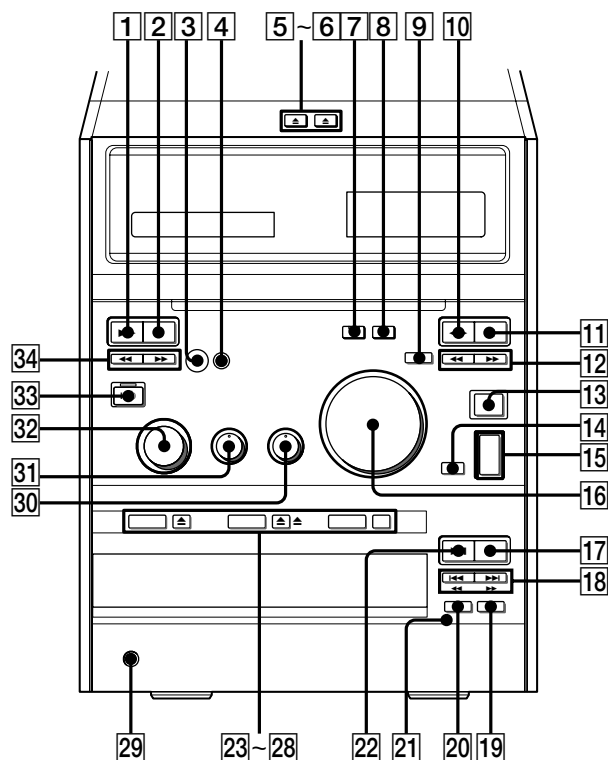

1 DISC indicator **21**
 BASS **31**
 CD 1 **23**
 CD 1 ▲ **24**
 CD 2 **25**
 CD 2 ▲ **26**
 CD 3 **27**
 CD 3 ▲ **28**
 CD SYNC **7**
 CD ►|| **22**
 CD ■ **17**
 CD ◀◀/▶▶ **18**
 CD ◀◀/▶▶ **18**


DECK A EJECT ▲ **5**
 DECK B EJECT ▲ **6**
 DSG **4**
 FUNCTION **32**
 PHONES jack **29**
 PLAY MODE **20**
 Remote sensor **3**
 REPEAT **19**
 TAPE A ► **1**
 TAPE B ◀ **10**
 TAPE A ■ **2**
 TAPE B ■ **11**

TAPE A ◀◀/▶▶ **34**
 TAPE B ◀◀/▶▶ **12**
 TAPE REC ● **8**
 TAPE || **9**
 TREBLE **30**
 TUNER BAND **13**
 TUNING MODE **14**
 TUNING +/- **15**
 VOLUME **16**

BUTTON DESCRIPTIONS

I/P (power) **33**

Remote Control

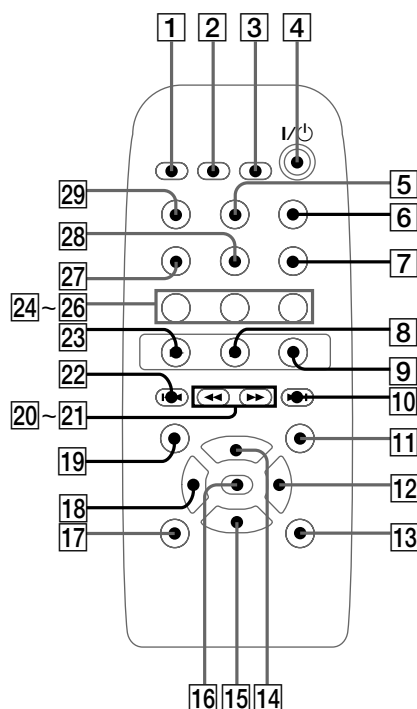

BASS/TREBLE **19**
 CD **27**
 DIRECTION **17**
 DISC1 **24**
 DISC2 **25**
 DISC3 **26**
 DISPLAY **12**
 DSG **11**
 ENTER **16**
 FUNCTION **5**
 MEMORY **18**

PLAY MODE **29**
 SLEEP **1**
 STEREO/MONO **13**
 TAPE A/B **28**
 TIMER SELECT **2**
 TIMER SET **3**
 TUNER/BAND **7**
 TUNING MODE **6**
 VOL + **14**
 VOL - **15**

BUTTON DESCRIPTIONS

▶ **23**
 || **8**
 ■ **9**
 ◀▶ **22**
 ▶▶ **10**
 ◀◀ **20**
 ▶▶ **21**
 I/⏻ (power) **4**


Setting the time

- 1 Turn on the system.**
- 2 Press TIMER SET on the remote.**
 If you are setting the clock for the first time,
 go to step 5.
- 3 Press ◀◀/▶▶ on the remote repeatedly until "CLOCK" appears in the display.**
- 4 Press ENTER on the remote.**
 The hour indication flashes.
- 5 Press ◀◀/▶▶ on the remote repeatedly to set the hour.**
- 6 Press ENTER on the remote.**
 The minute indication flashes.
- 7 Press ◀◀/▶▶ on the remote repeatedly to set the minute.**
- 8 Press ENTER on the remote.**
 The clock will begin operating.

To reset the system clock
 Start over from step 1.


SECTION 3 DISASSEMBLY

- The equipment can be removed using the following procedure.

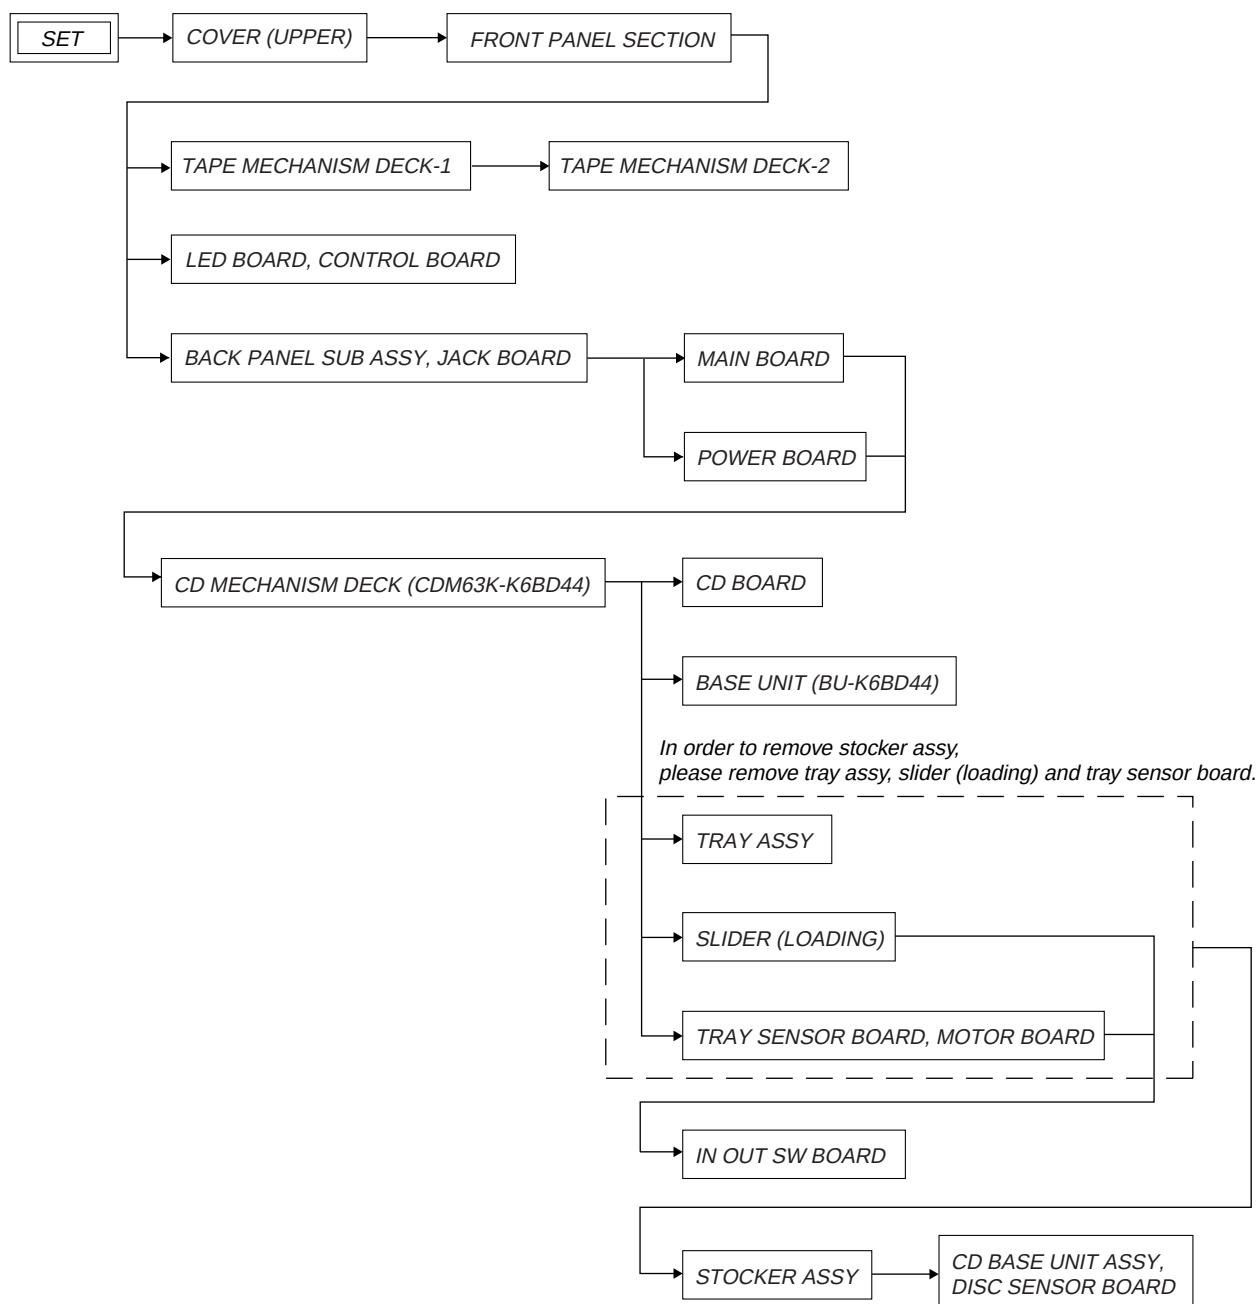


Note : Follow the disassembly procedure in the numerical order given.


3-1. Cover (Upper)

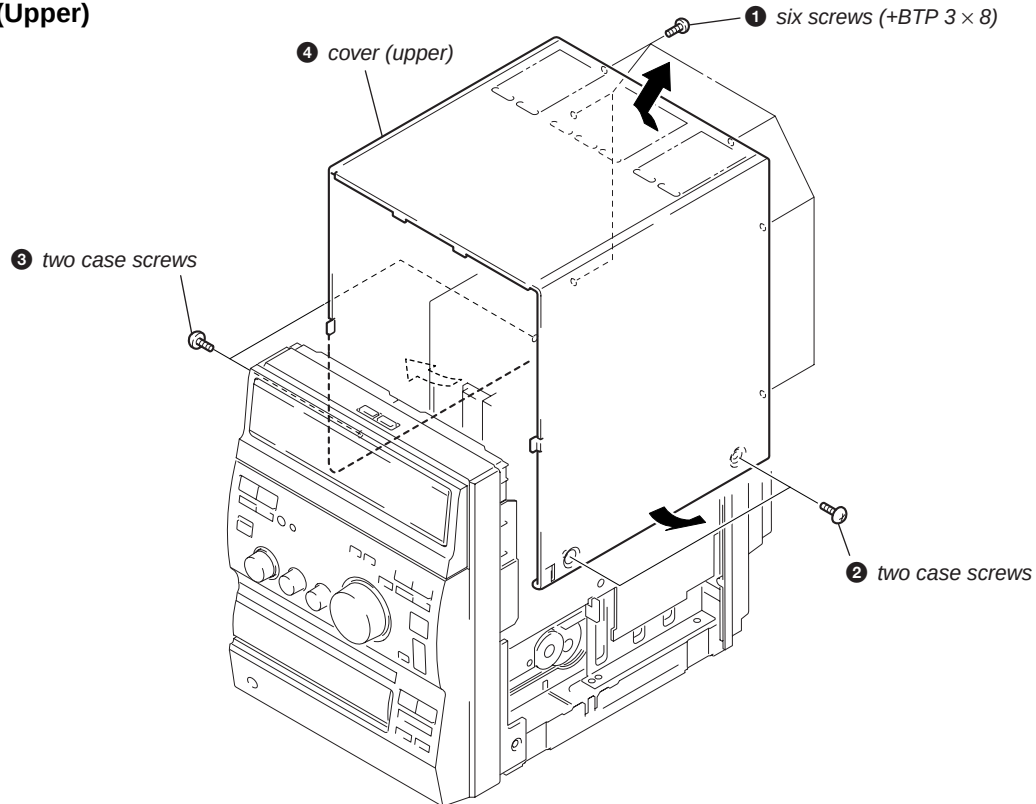


3-2. Front Panel Section

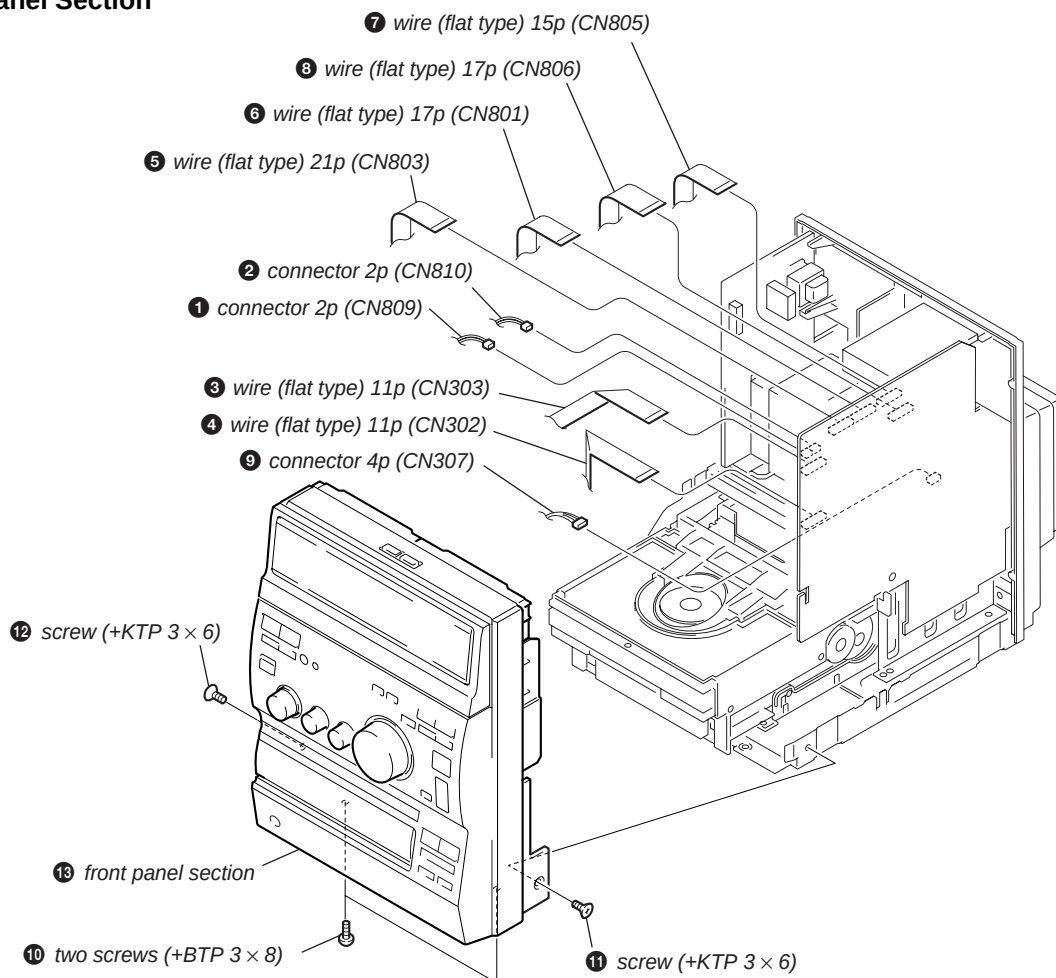


3-3. Tape Mechanism Deck-1

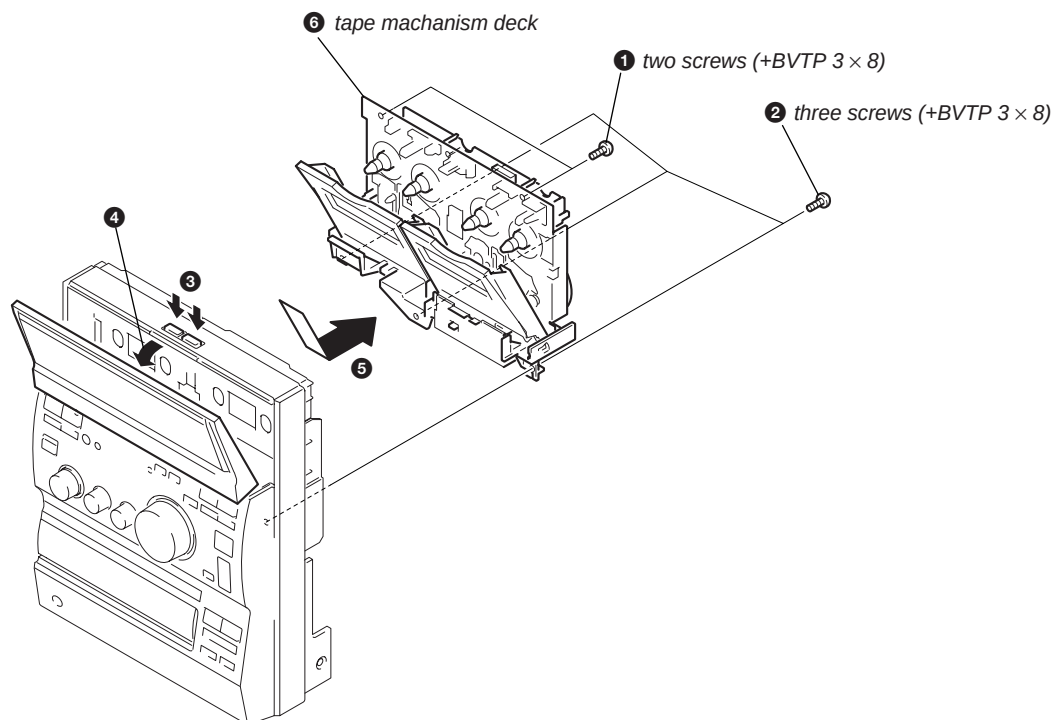


3-4. Tape Mechanism Deck-2

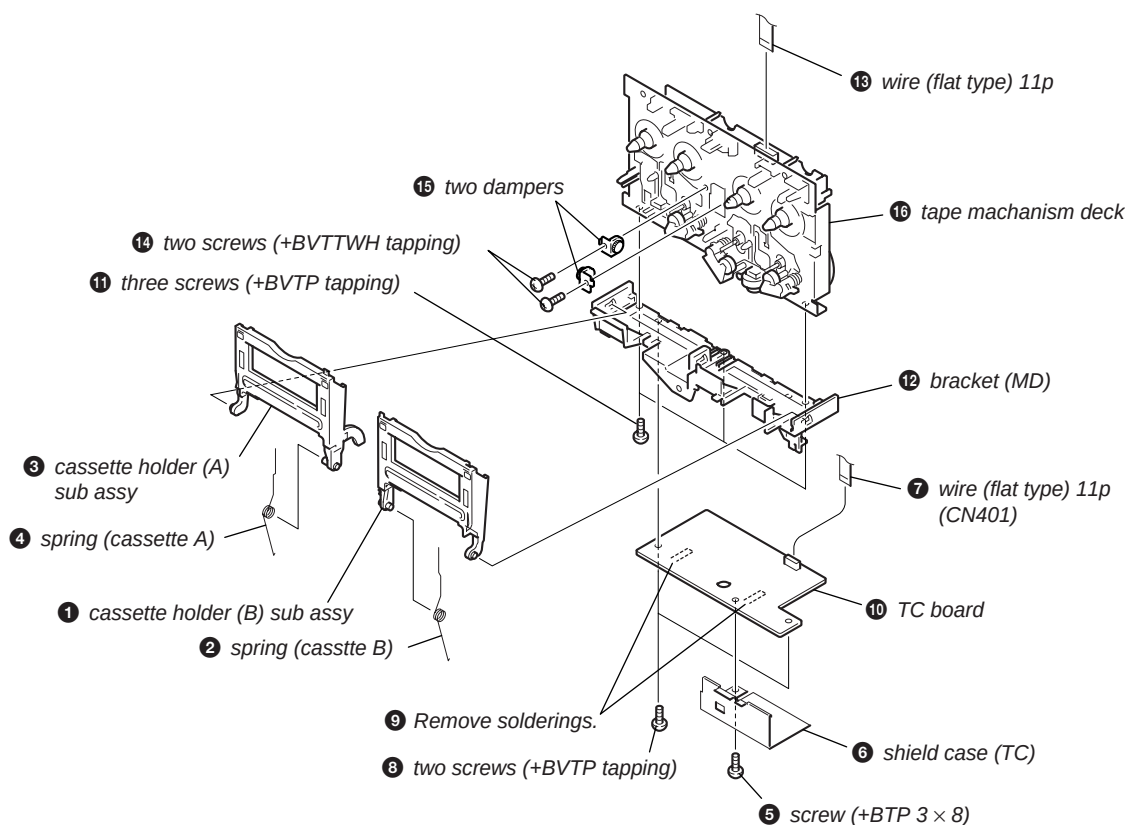


3-5. LED Board, CONTROL Board

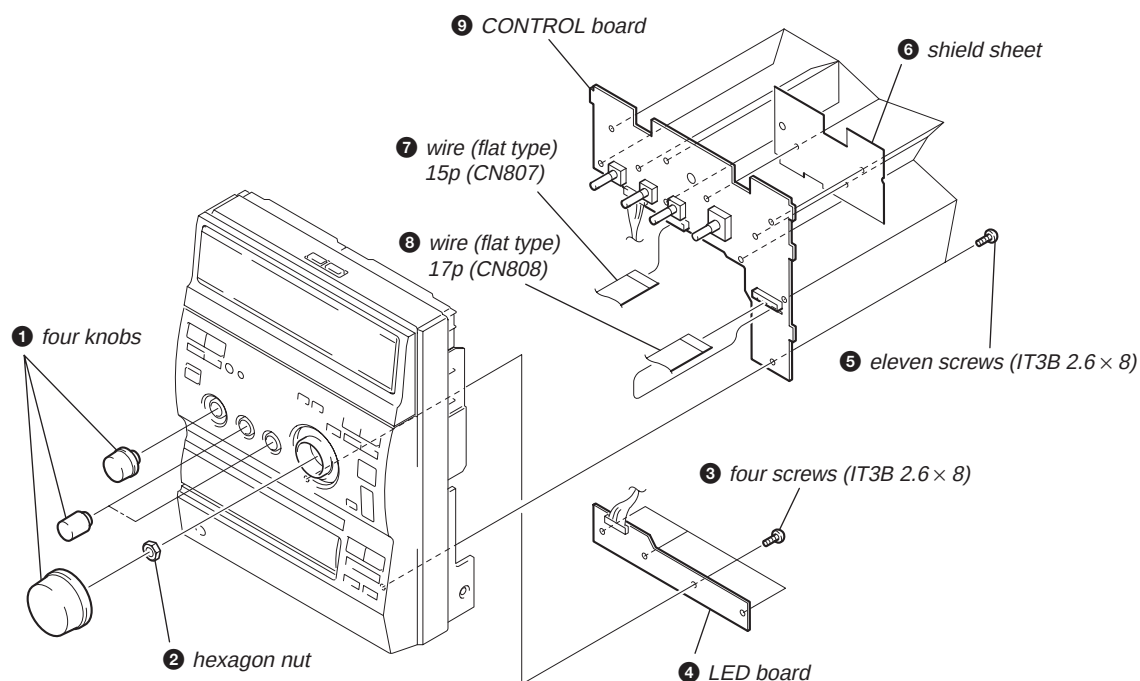


3-6. Back Panel Sub Assy, JACK Board

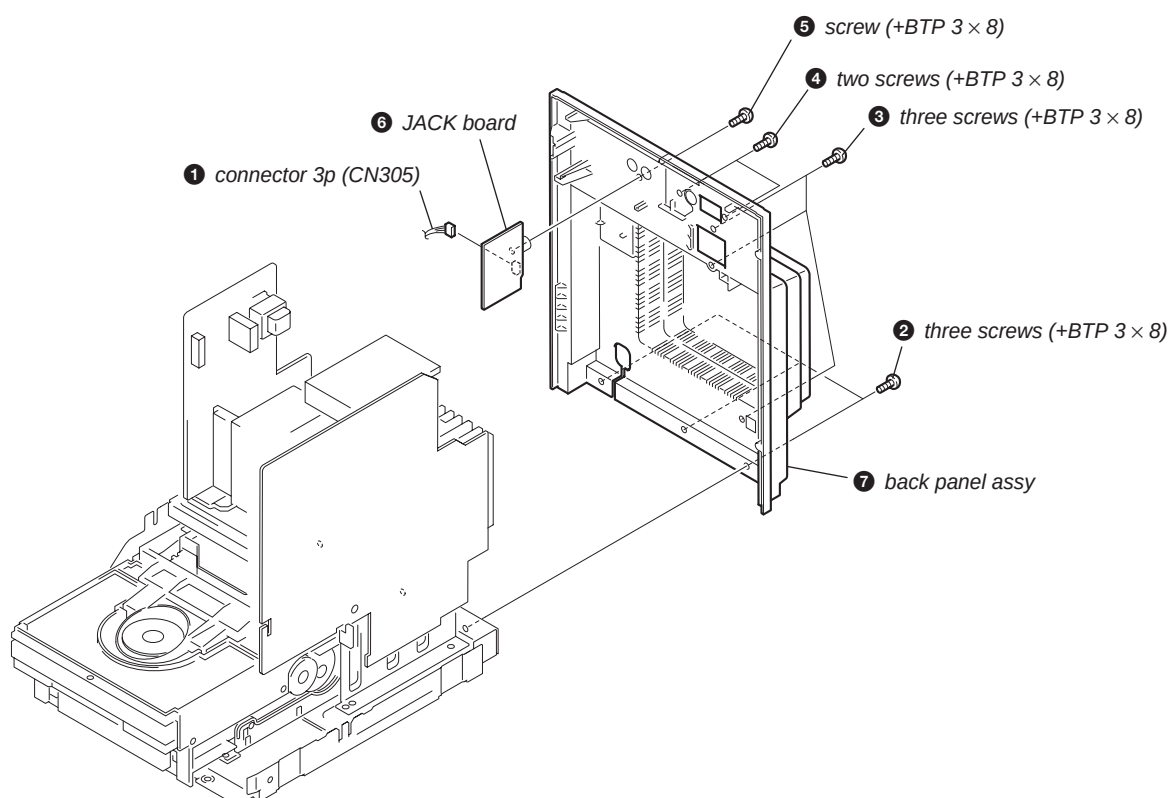


3-7. MAIN Board

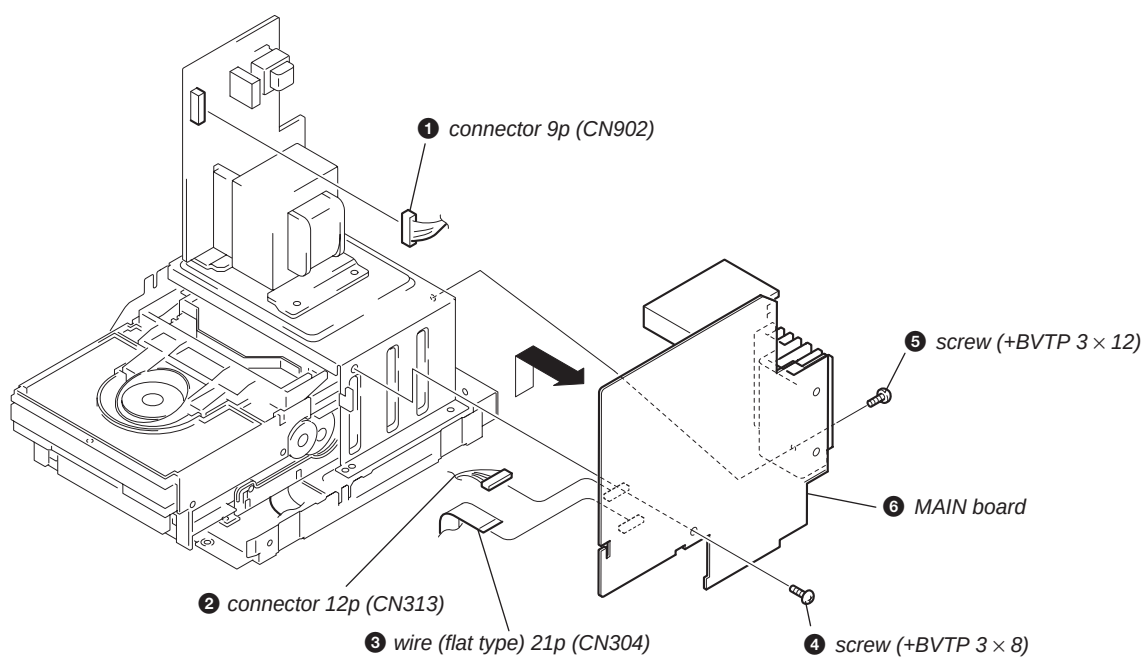


3-8. POWER Board

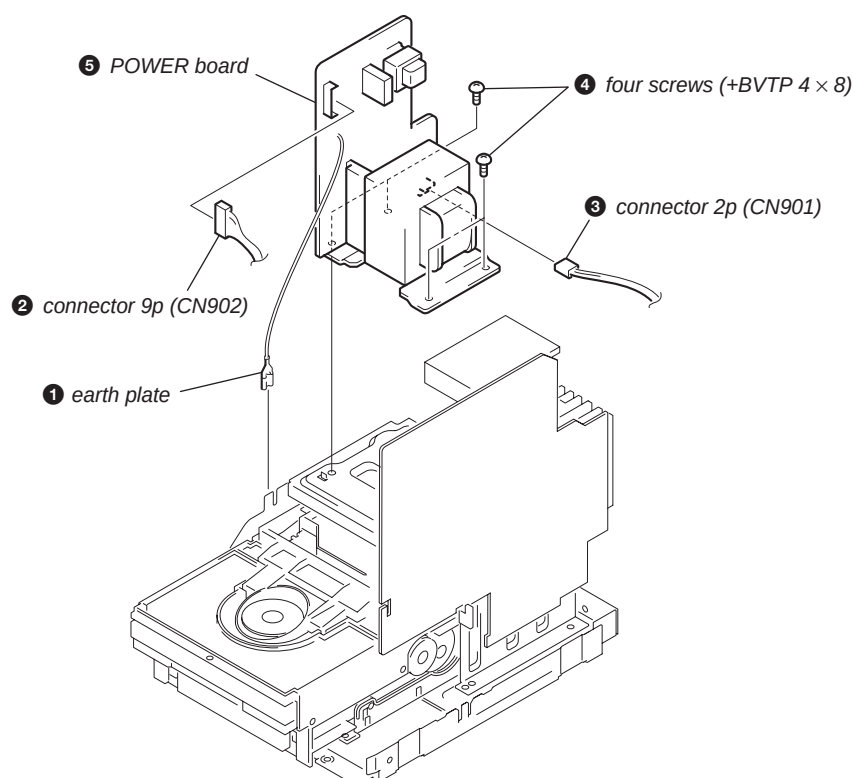


3-9. CD Mechanism Deck (CDM63K-K6BD44)

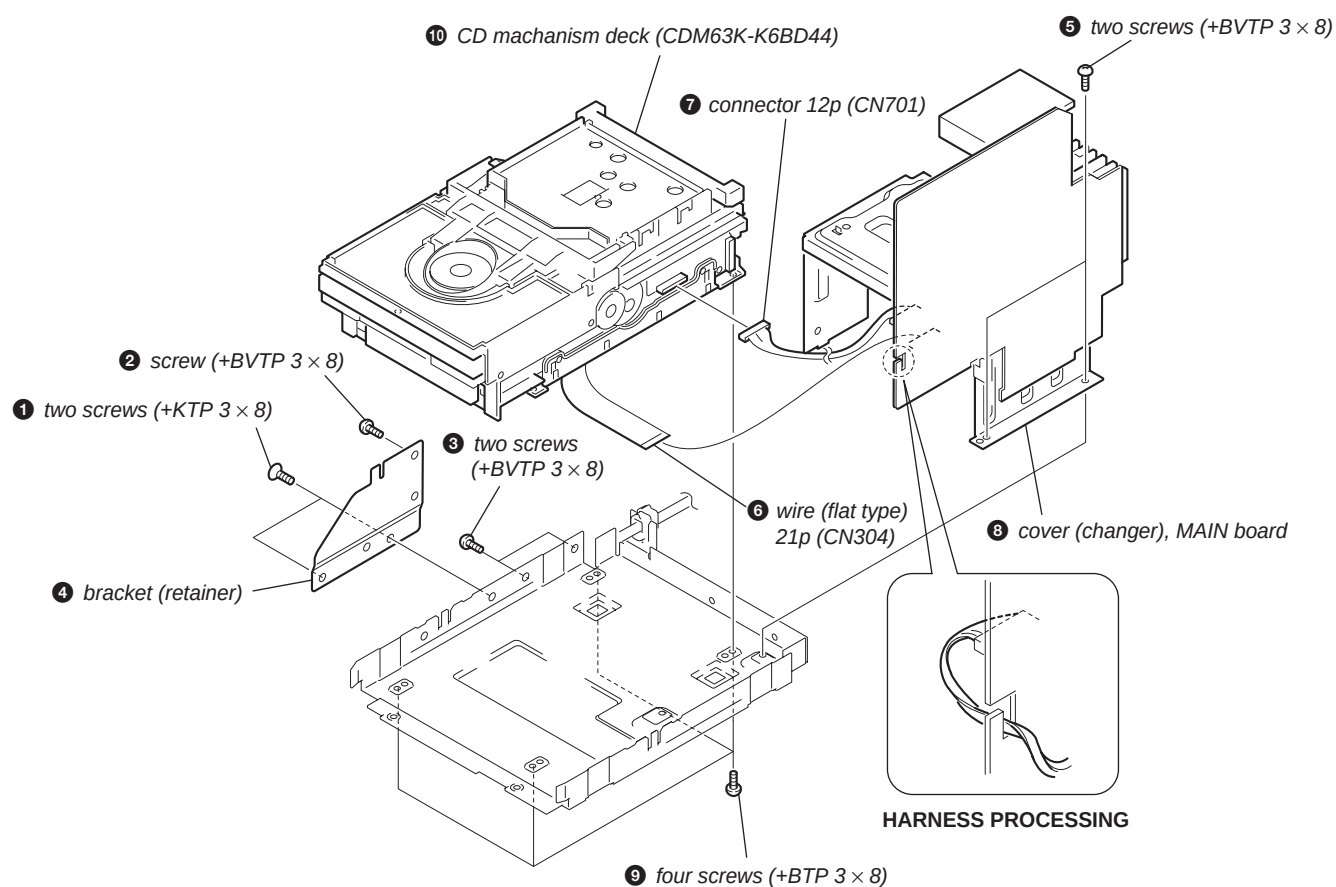


3-10. CD Board

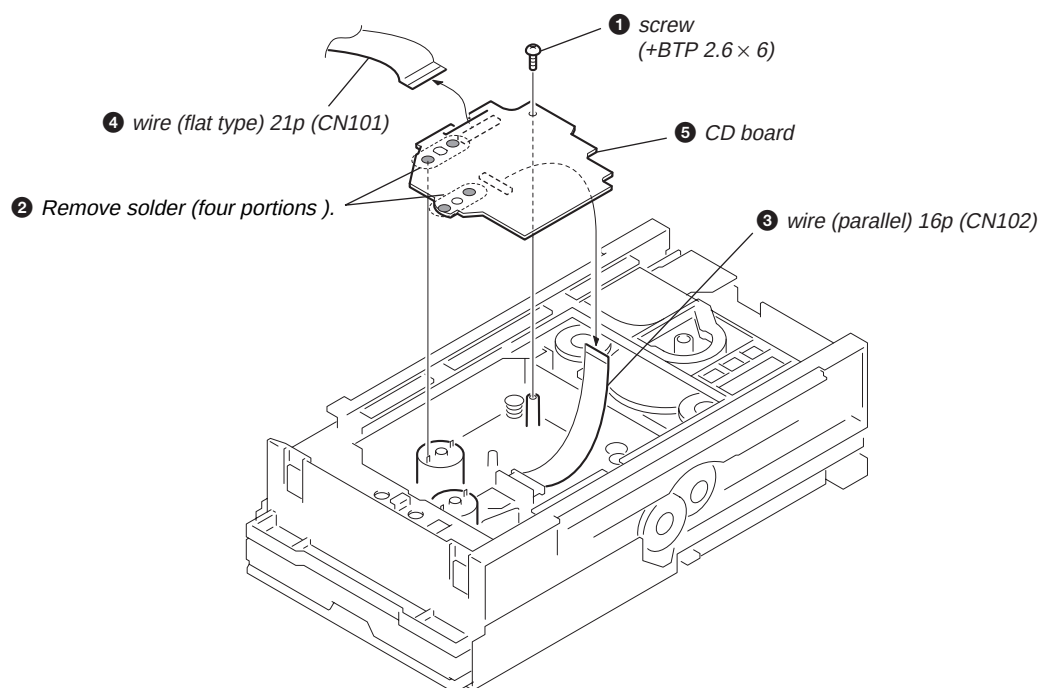


3-11. Base Unit (BU-K6BD44)

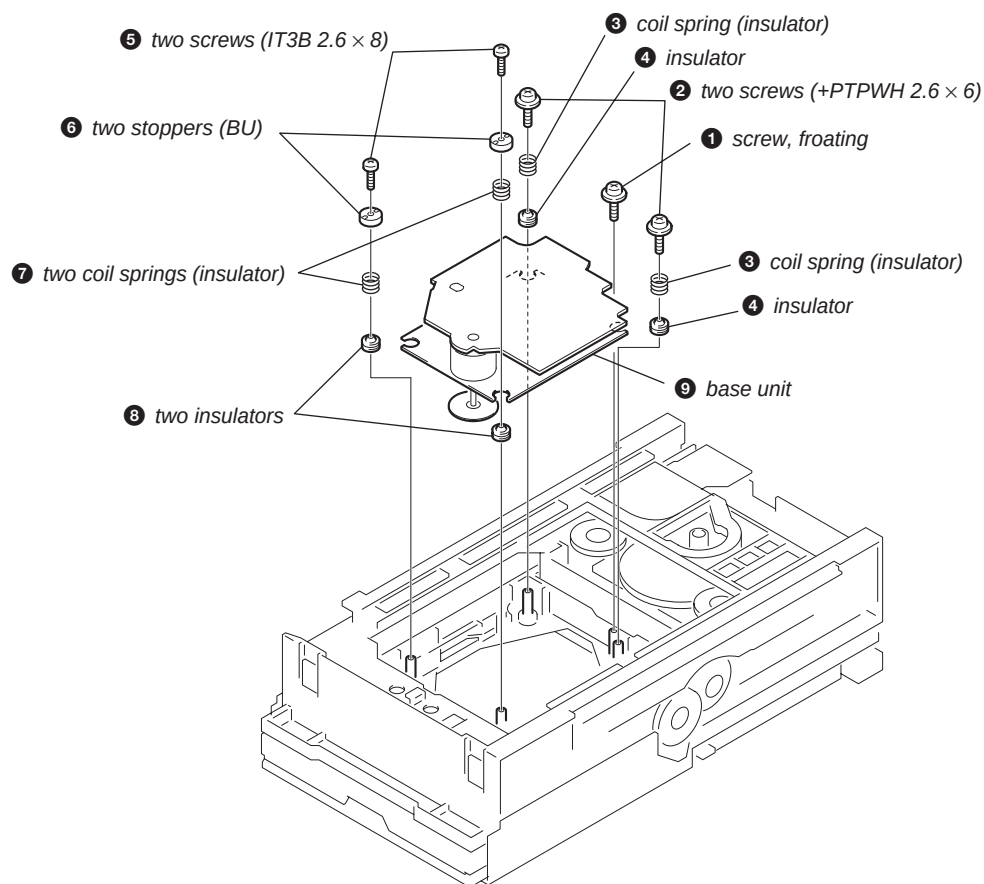


3-12. Tray Assy

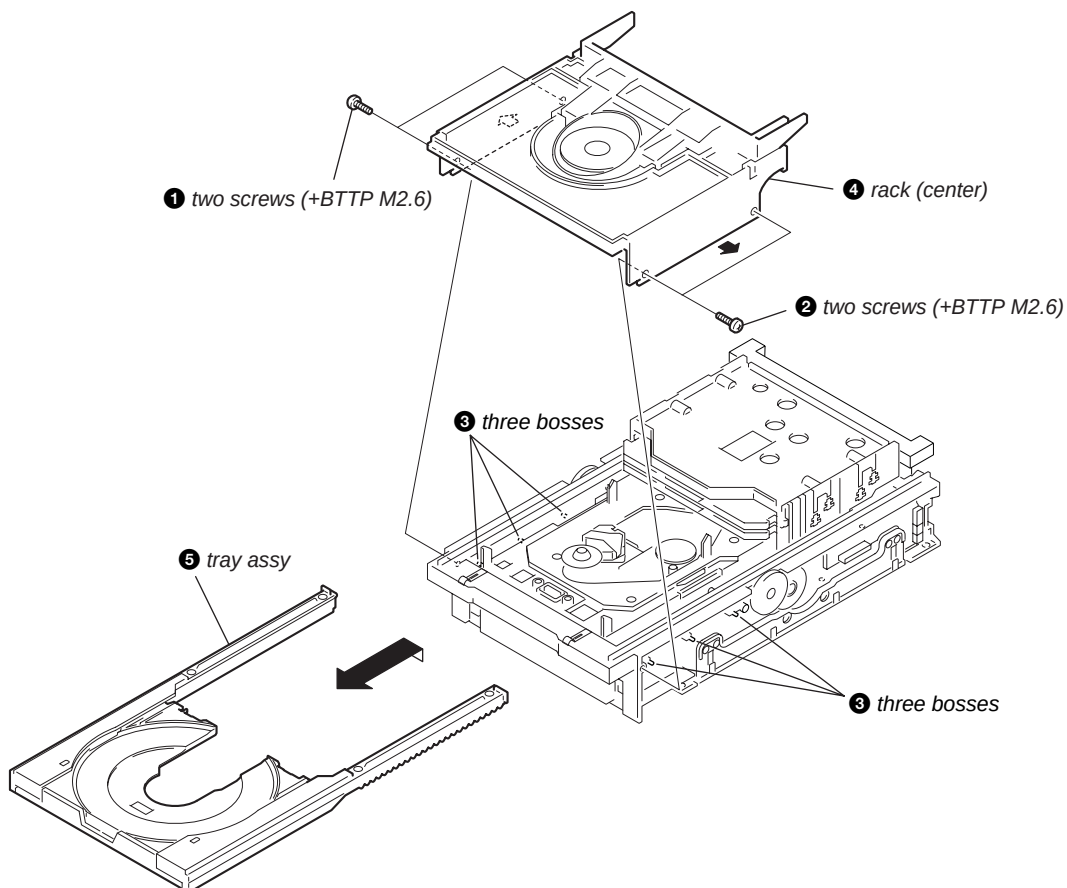


3-13. Silder (Loading)

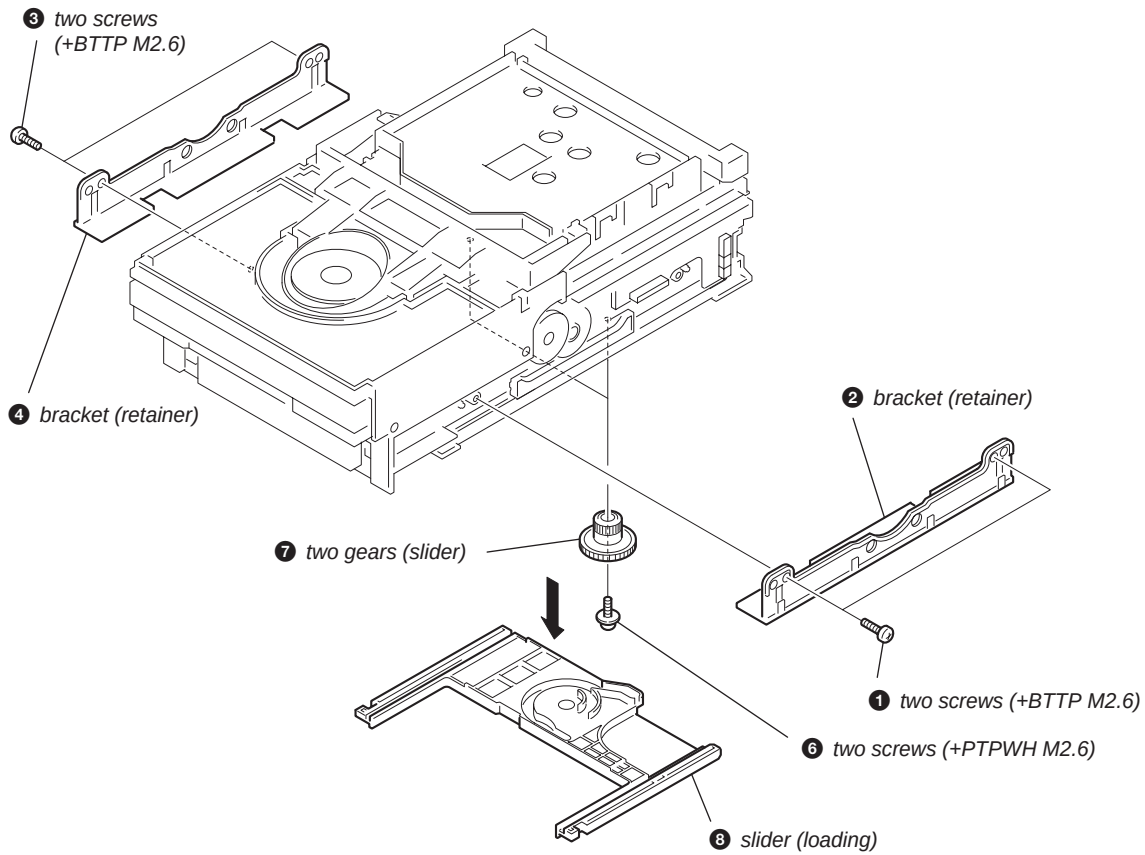


3-14. TRAY SENSOR Board, MOTOR Board

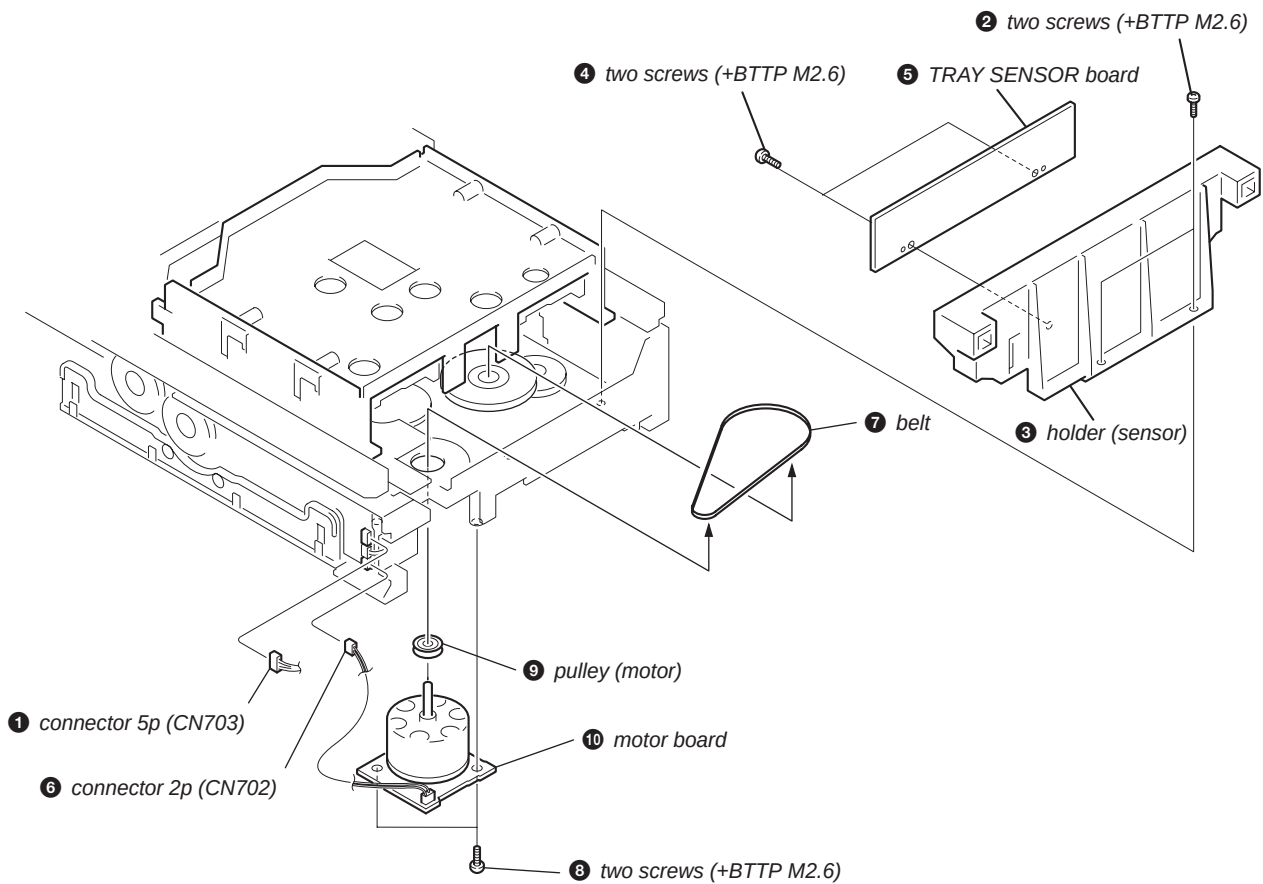


3-15. IN OUT SW Board

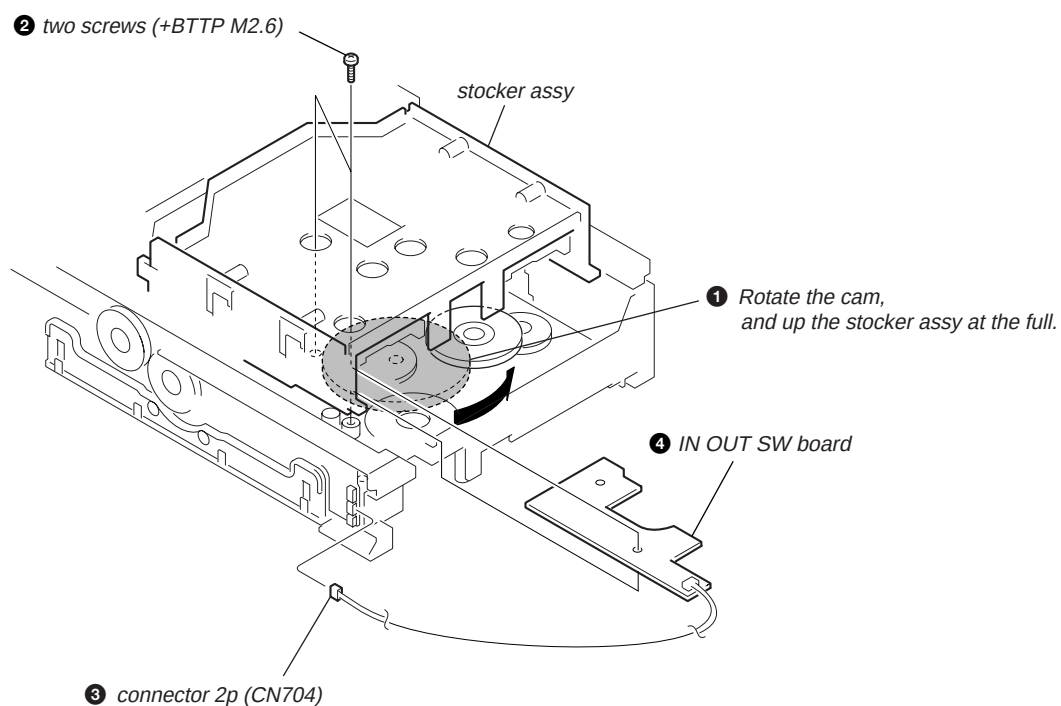

3-16. Stocker Assy

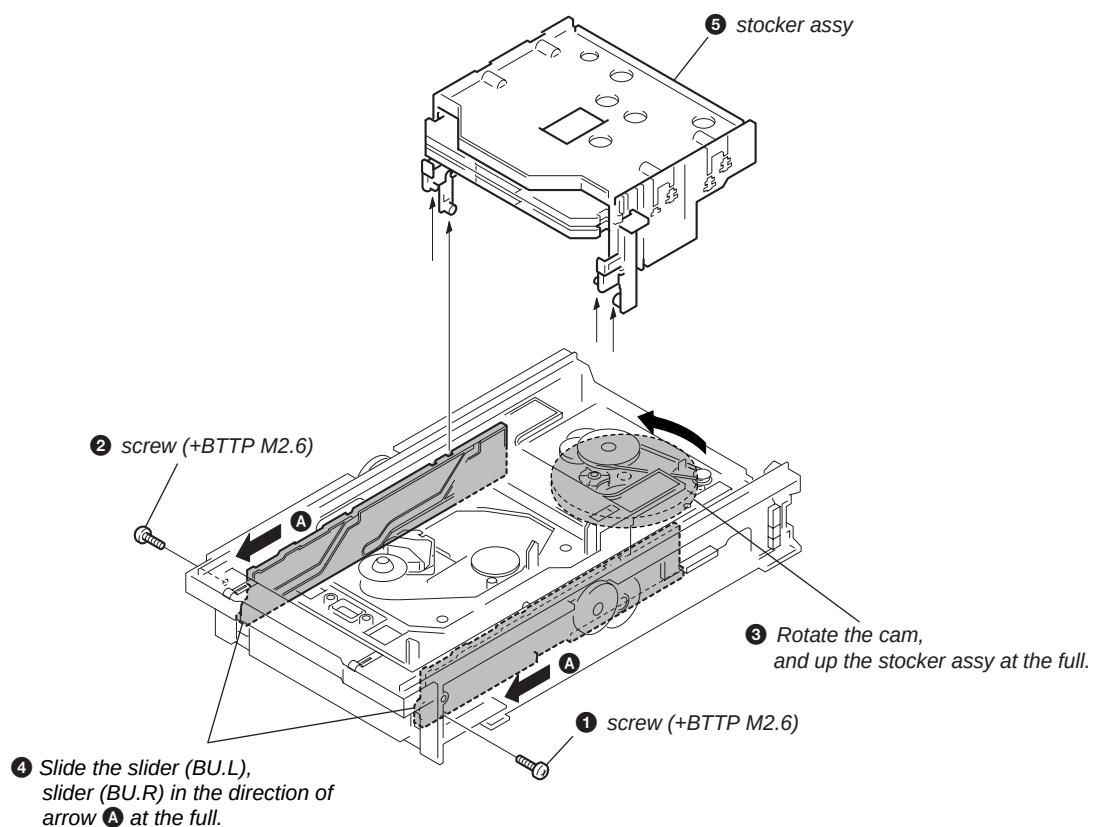

3-17. CD Base Unit Assy, DISC SENSOR Board

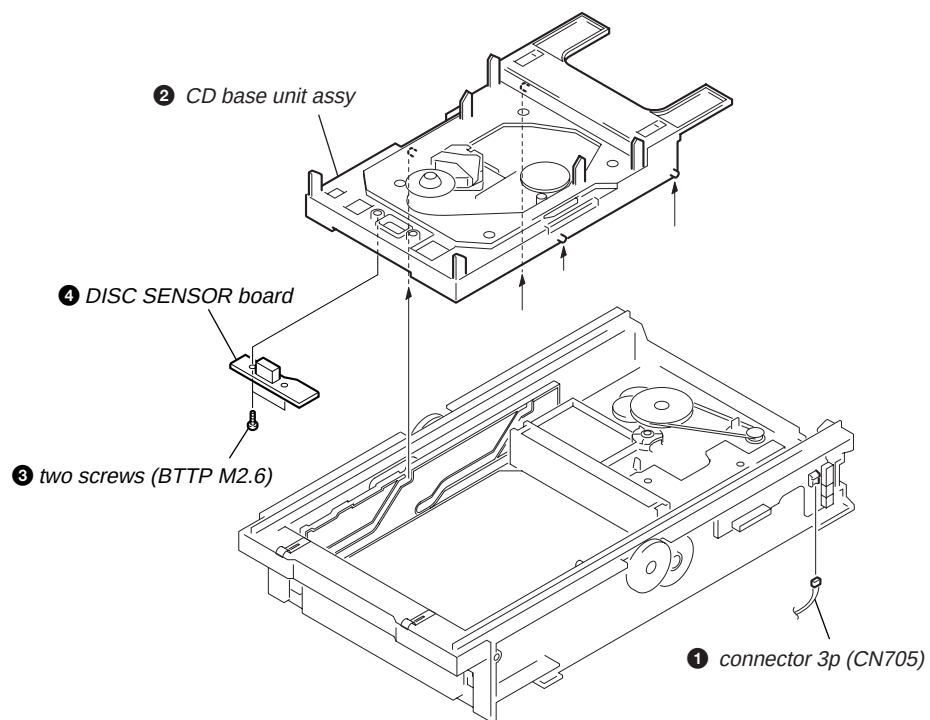

SECTION 4

TEST MODE

[CD Ship Mode]

- This mode moves the optical pick-up to the position durable to vibration. Use this mode when returning the set to the customer after repair.

Procedure:

1. Press the  button to turn the set ON.
2. Press three buttons  (TAPE A),  (CD), and  (CD1) simultaneously.
3. After the “STANDBY” display blinks six times, a message “LOCK” is displayed on the liquid crystal display, and the CD ship mode is set.

[GC Test Mode]

- This mode is used to check the software version, liquid crystal display and keyboard.

Procedure:

1. Press three buttons  (TAPE A),  (CD) and  simultaneously.
2. Segments of the liquid crystal display are all turned on.
3. When you want to enter the software version display mode, press the  button . The model number and destination are displayed.
4. Each time the  button is pressed, the display changes starting from MC version, GC version, CD version, CDD version, CDMA version, CDMB version, BDA version, BDB version , ST version, TA version, TM version, TC version and MD version in this order.
5. Press the  button, and the key check mode is activated.
6. In the key check mode, “K 0 J 0 V 0” is displayed. Each time a button is pressed, “K 0” value increases. However, once a button is pressed, it is no longer taken into account. “V 0” value increases like 1, 2, 3 ... if rotating the  knob clockwise, or it decreases like 0, 9, 8 ... if rotating counterclockwise. “J0” value increases if rotating the ,  or  knob clockwise, or it decreases if rotating counterclockwise.
7. To exit from this mode, press three buttons in the same manner as step 1, or disconnect the power cord.

[CD Ship (Memory Clear) Mode]

- Set the CD ship mode and set the default setup when shipped from the factory at the next AC power on.

Procedure:

1. Press the  button to turn the set ON.
2. Select the function “CD ”.
3. Press three buttons  (TAPE A),  (CD), and  (CD1) simultaneously.
4. After the “STANDBY” display blinks six times, a message “LOCK” is displayed on the liquid crystal display, and the CD ship mode is set.

SECTION 5 ELECTRICAL ADJUSTMENTS

DECK SECTION

0 dB=0.775 V

Note: Confirm each contents of this section first of all. If the results are not satisfied, do the adjustment.


1. Demagnetize the record/playback head with a head demagnetizer.
2. Do not use a magnetized screwdriver for the adjustments.
3. After the adjustments, apply suitable locking compound to the parts adjust.
4. The adjustments should be performed with the rated power supply voltage unless otherwise noted.
5. The adjustments should be performed in the order given in this service manual. (As a general rule, playback circuit adjustment should be completed before performing recording circuit adjustment.)
6. The adjustments should be performed for both L-CH and R-CH.
7. Switches and controls should be set as follows unless otherwise specified.

• Test Tape


Tape	Signal	Used for
P-4-A63J	10 kHz, -10 dB	Azimuth Adjustment

Record/Playback Head Azimuth Adjustment**Procedure:**



1. Mode: Playback

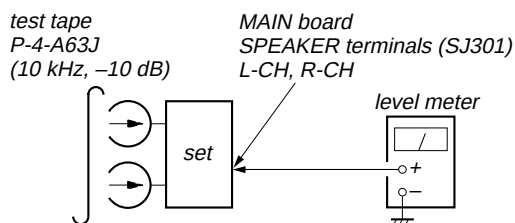

2. Turn the adjustment screw and check output peaks. If the peaks do not match for L-CH and R-CH, turn the adjustment screw so that outputs match within 1dB of peak.

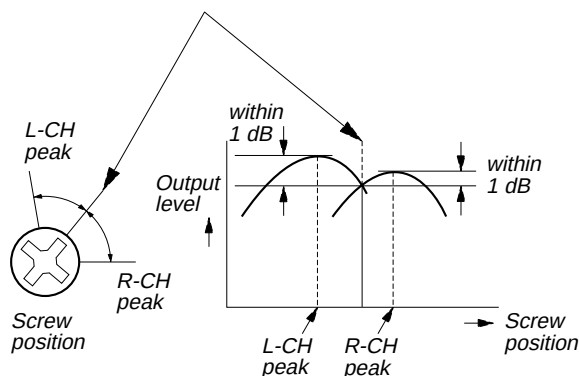


3. Mode: Playback

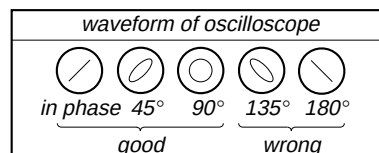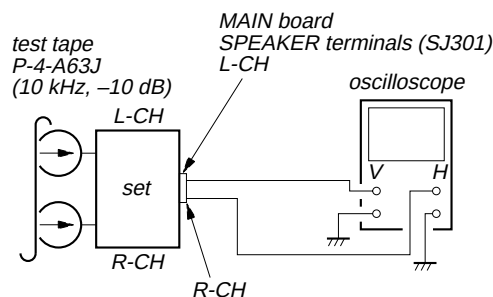

4. Repeat step 1 to 3 in playback (REV) mode.
5. After the adjustments, apply suitable locking compound to the parts adjusted.



CD SECTION**Note:**

1. CD Block is basically constructed to operate without adjustment.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10 M Ω impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.
5. Check the focus bias check when optical block is replaced.

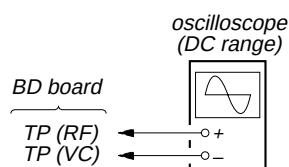Focus Bias Check**Procedure :**

1. Connect oscilloscope to TP (RF) and TP (VC) on the CD board.
2. Press the button to turn the power on, and press the (CD) button to open the CD disc tray.
3. Put disc (YEDS-18) in and press the (CD) button to play-back.
4. Confirm that oscilloscope waveform is as shown in the figure below. (eye pattern)

A good eye pattern means that the diamond shape ($\diamond$) in the center of the waveform can be clearly distinguished.

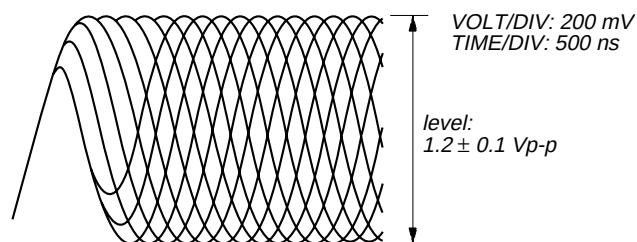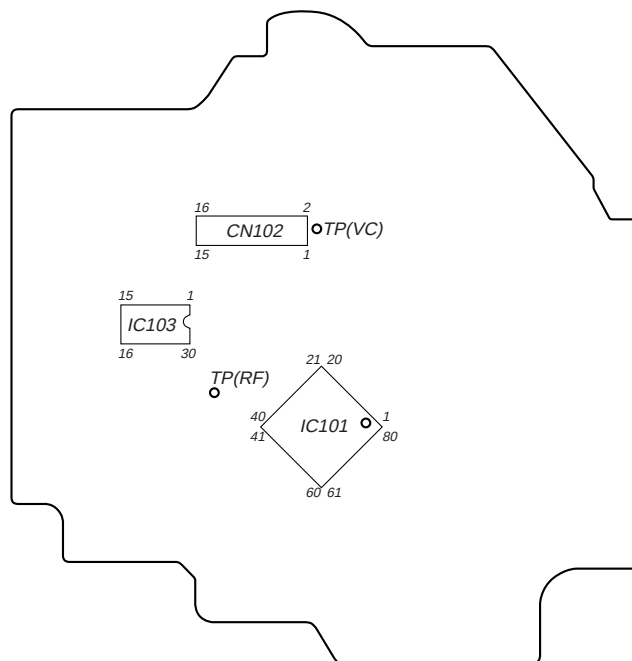**Checking Location:****– CD BOARD (Conductor Side) –**


SECTION 6
DIAGRAMS

6-1. Note For Printed Wiring Boards And Schematic Diagrams

Note on Printed Wiring Boards:

- — : parts extracted from the component side.
- : parts extracted from the conductor side.
- ← : indicates side identified with part number.
- : Pattern from the side which enables seeing.
- Indication of transistor.

Caution:
Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
(Side A)
Parts face side: Parts on the parts face side seen from the parts face are indicated.
(Side B)

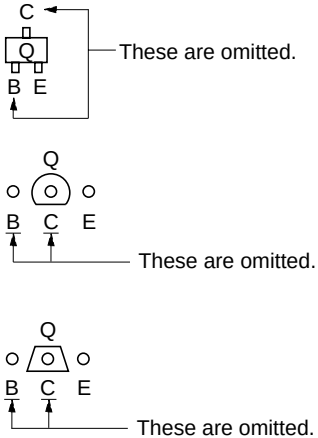


Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF : $\mu\mu\text{F}$ 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- Δ : internal component.
- : panel designation.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.	Note: Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	---

- : B+ Line.
- - - : B- Line.
- : adjustment for repair.
- Voltag es are taken with a VOM (Input impedance 10 $\text{M}\Omega$). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 - ⇒ : FM
 - ⇒ : PB (DECK A)
 - ⇒ : PB (DECK B)
 - ⇒ : REC (DECK B)
 - ⇒ : CD
 - ⇒ : DIGITAL OUT
 - ⇒ : MD
- Abbreviation
 - CND : Canadian model
 - E51 : Chilean and peruvian model



6-2. Block Diagrams – TUNER/CD Section –

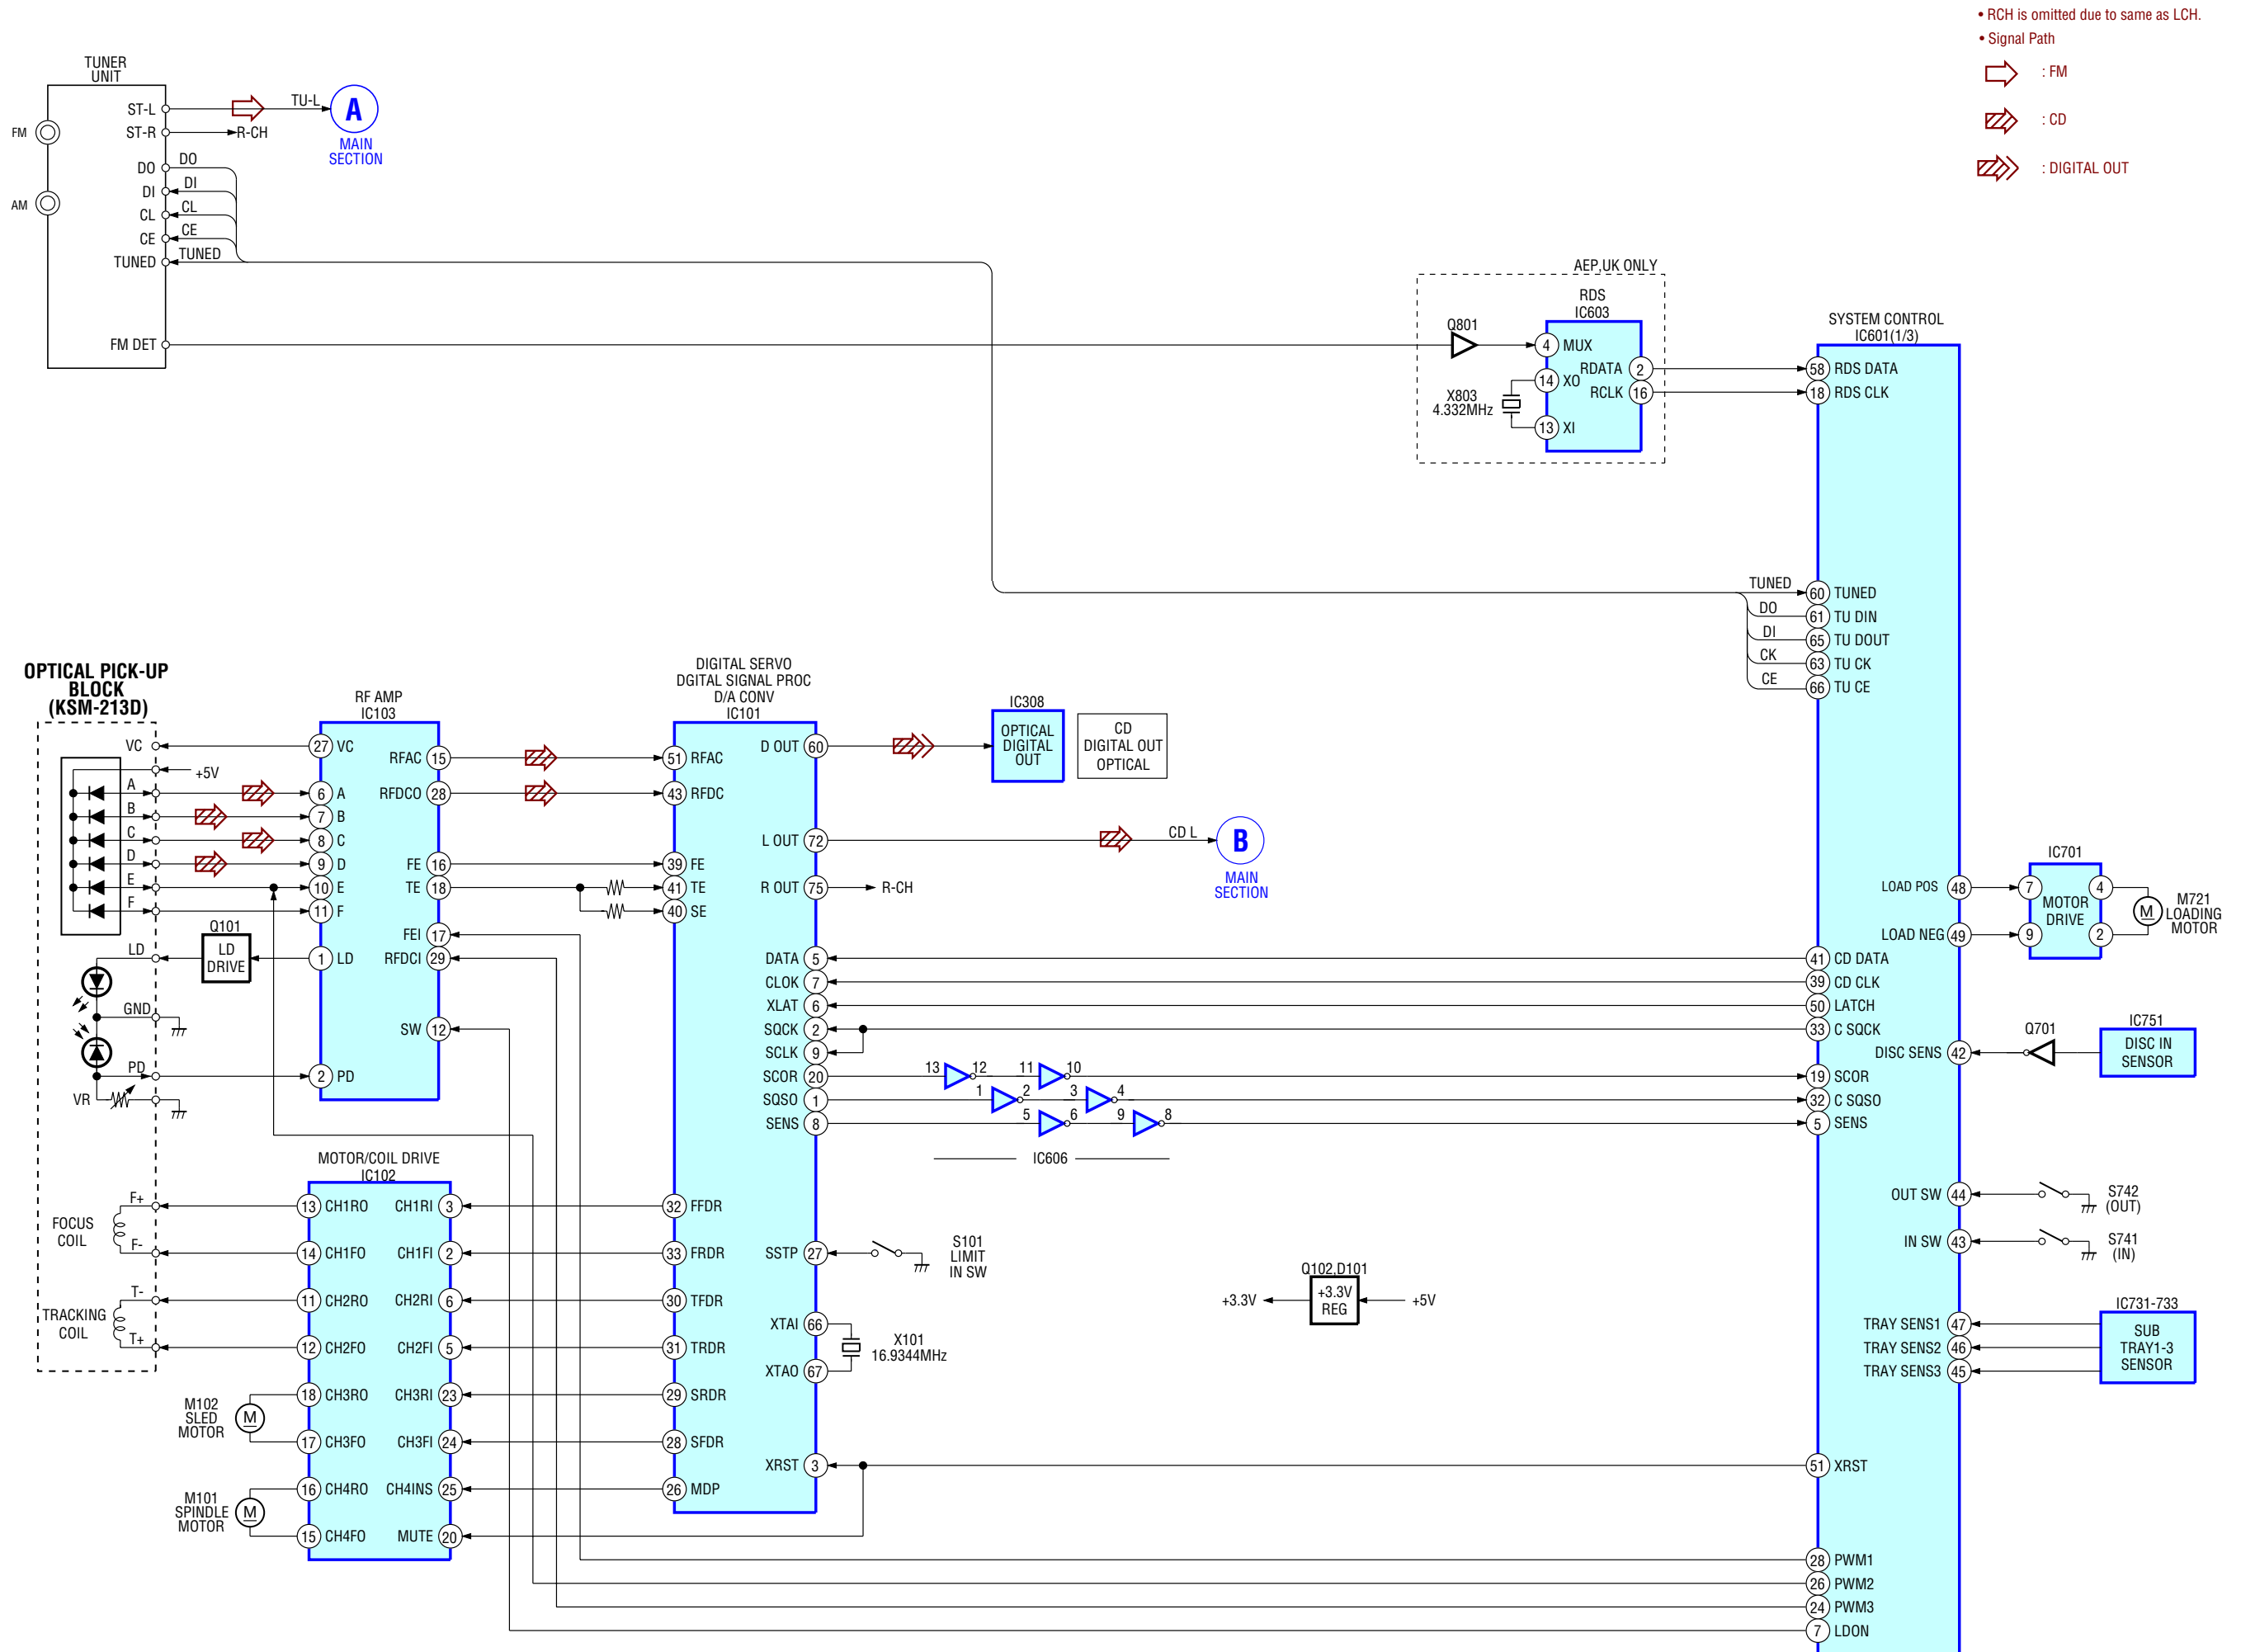

– MAIN Section –




6-3. Circuit Boards Location

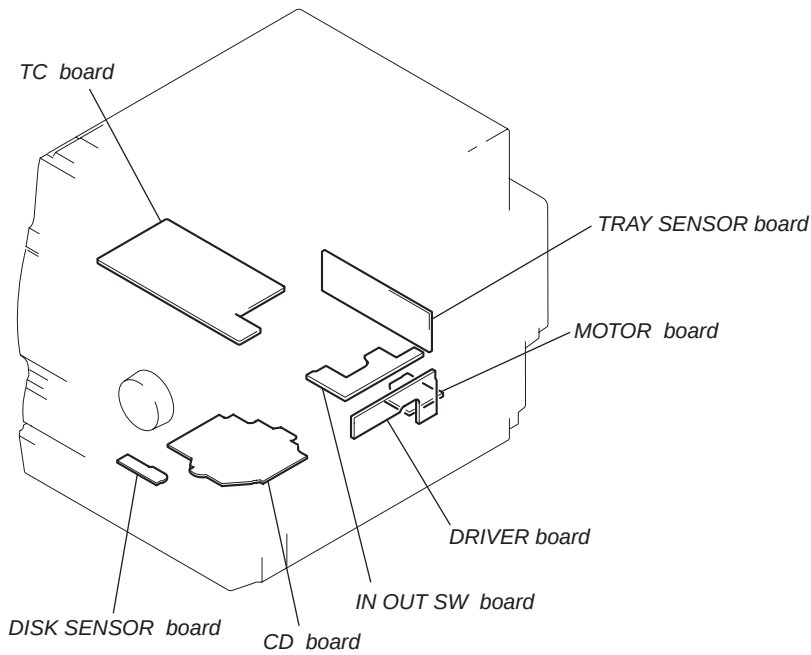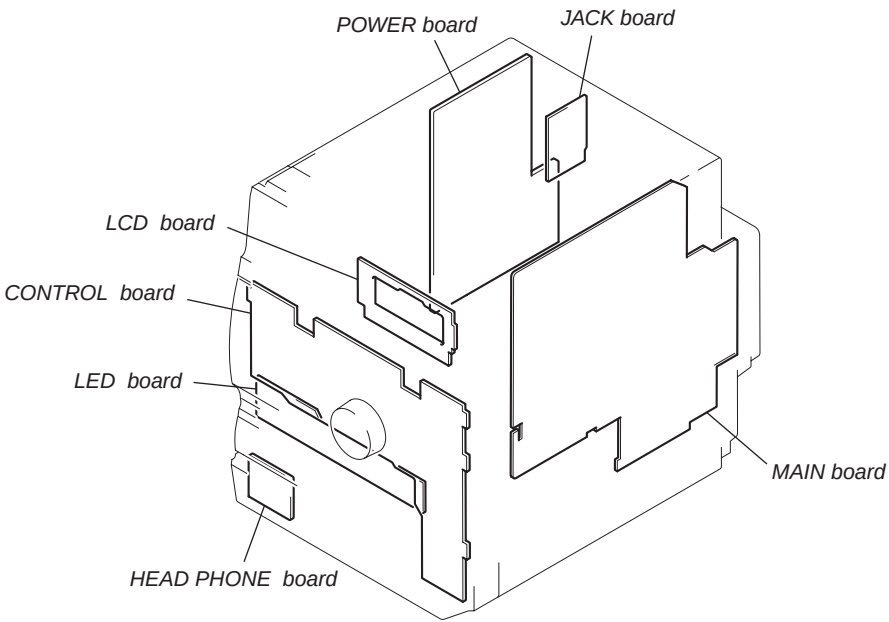


• WAVEFORMS


– CD Board –

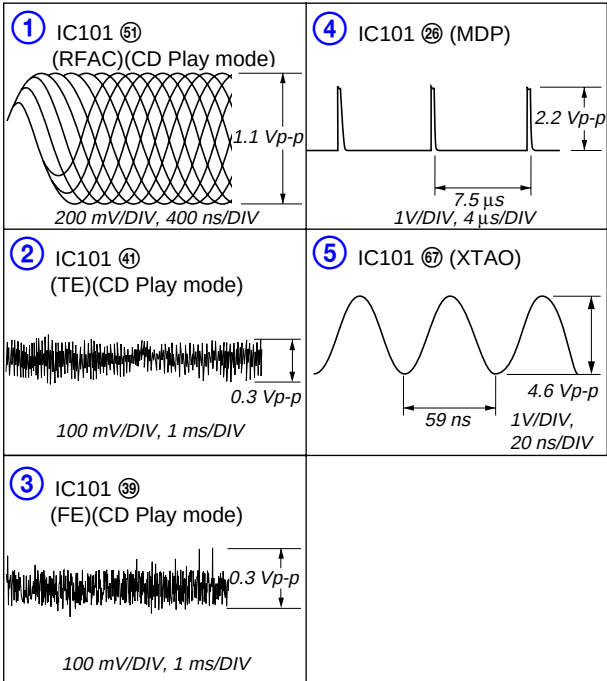


– MAIN Board –

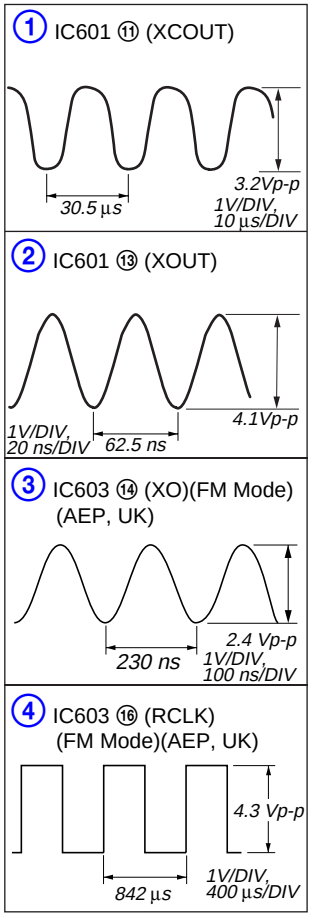


– TC Board –

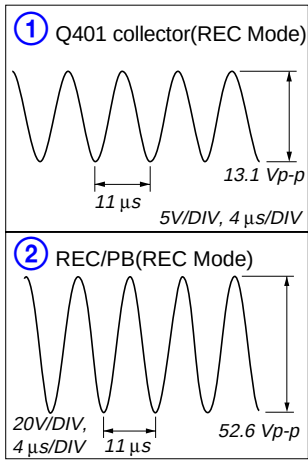


【 CD BOARD 】

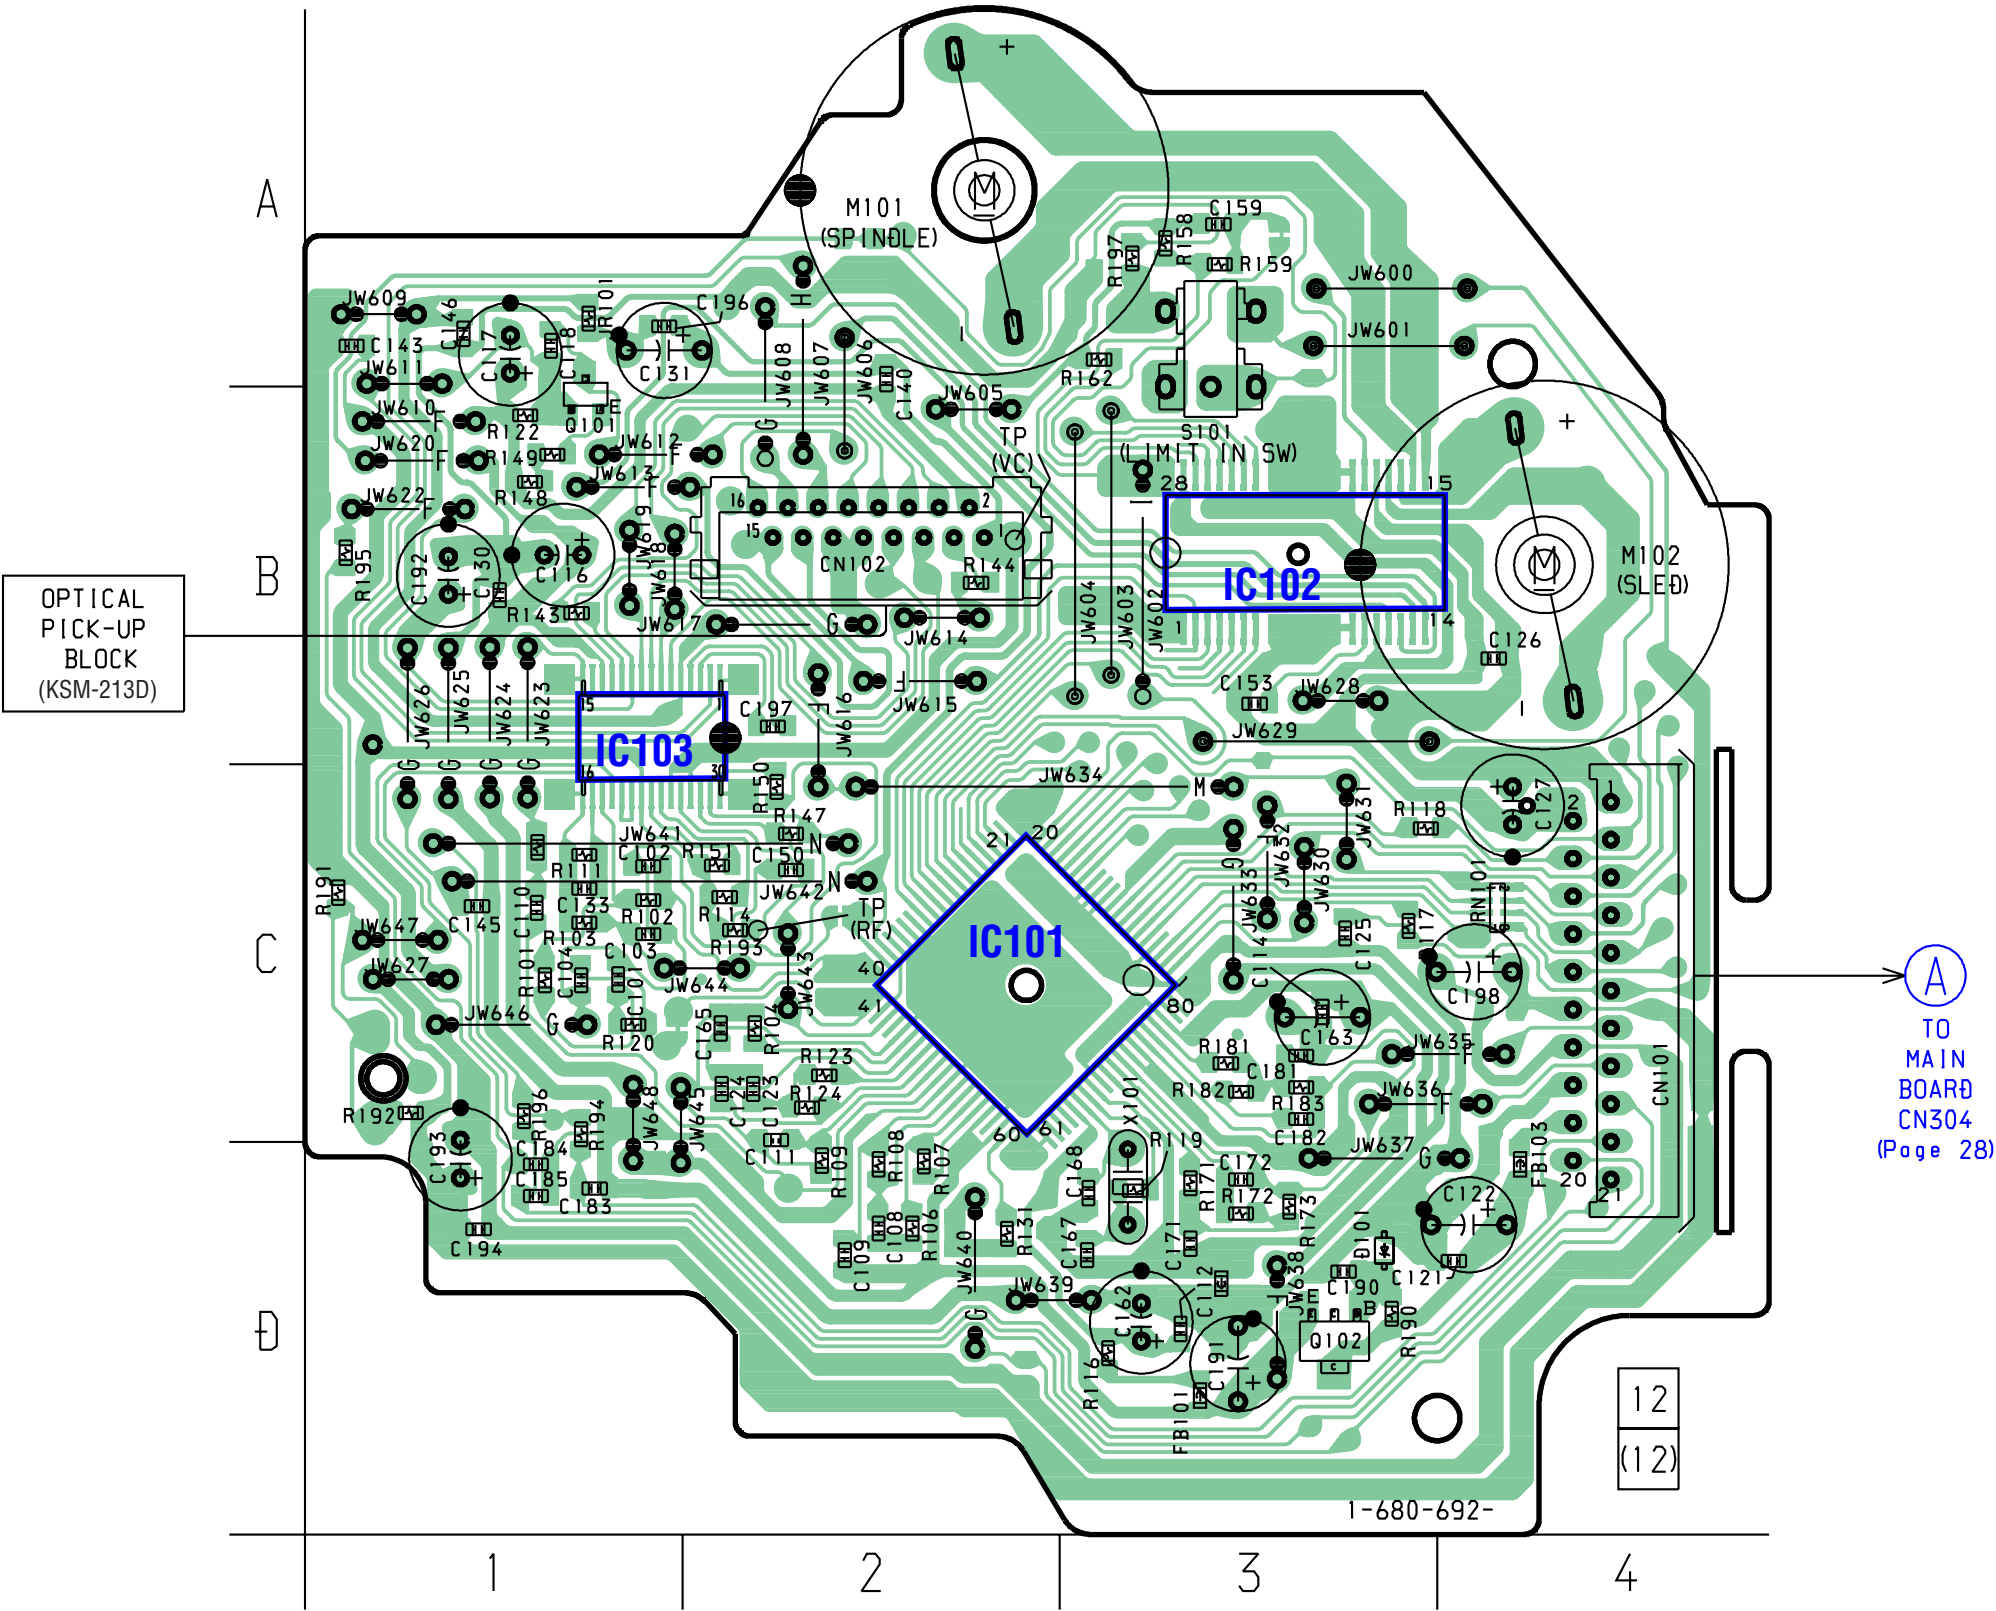

6-5. Schematic Diagram – CD Board – • See page 23 for Waveforms. • See page 42, 43 for IC Block Diagrams.

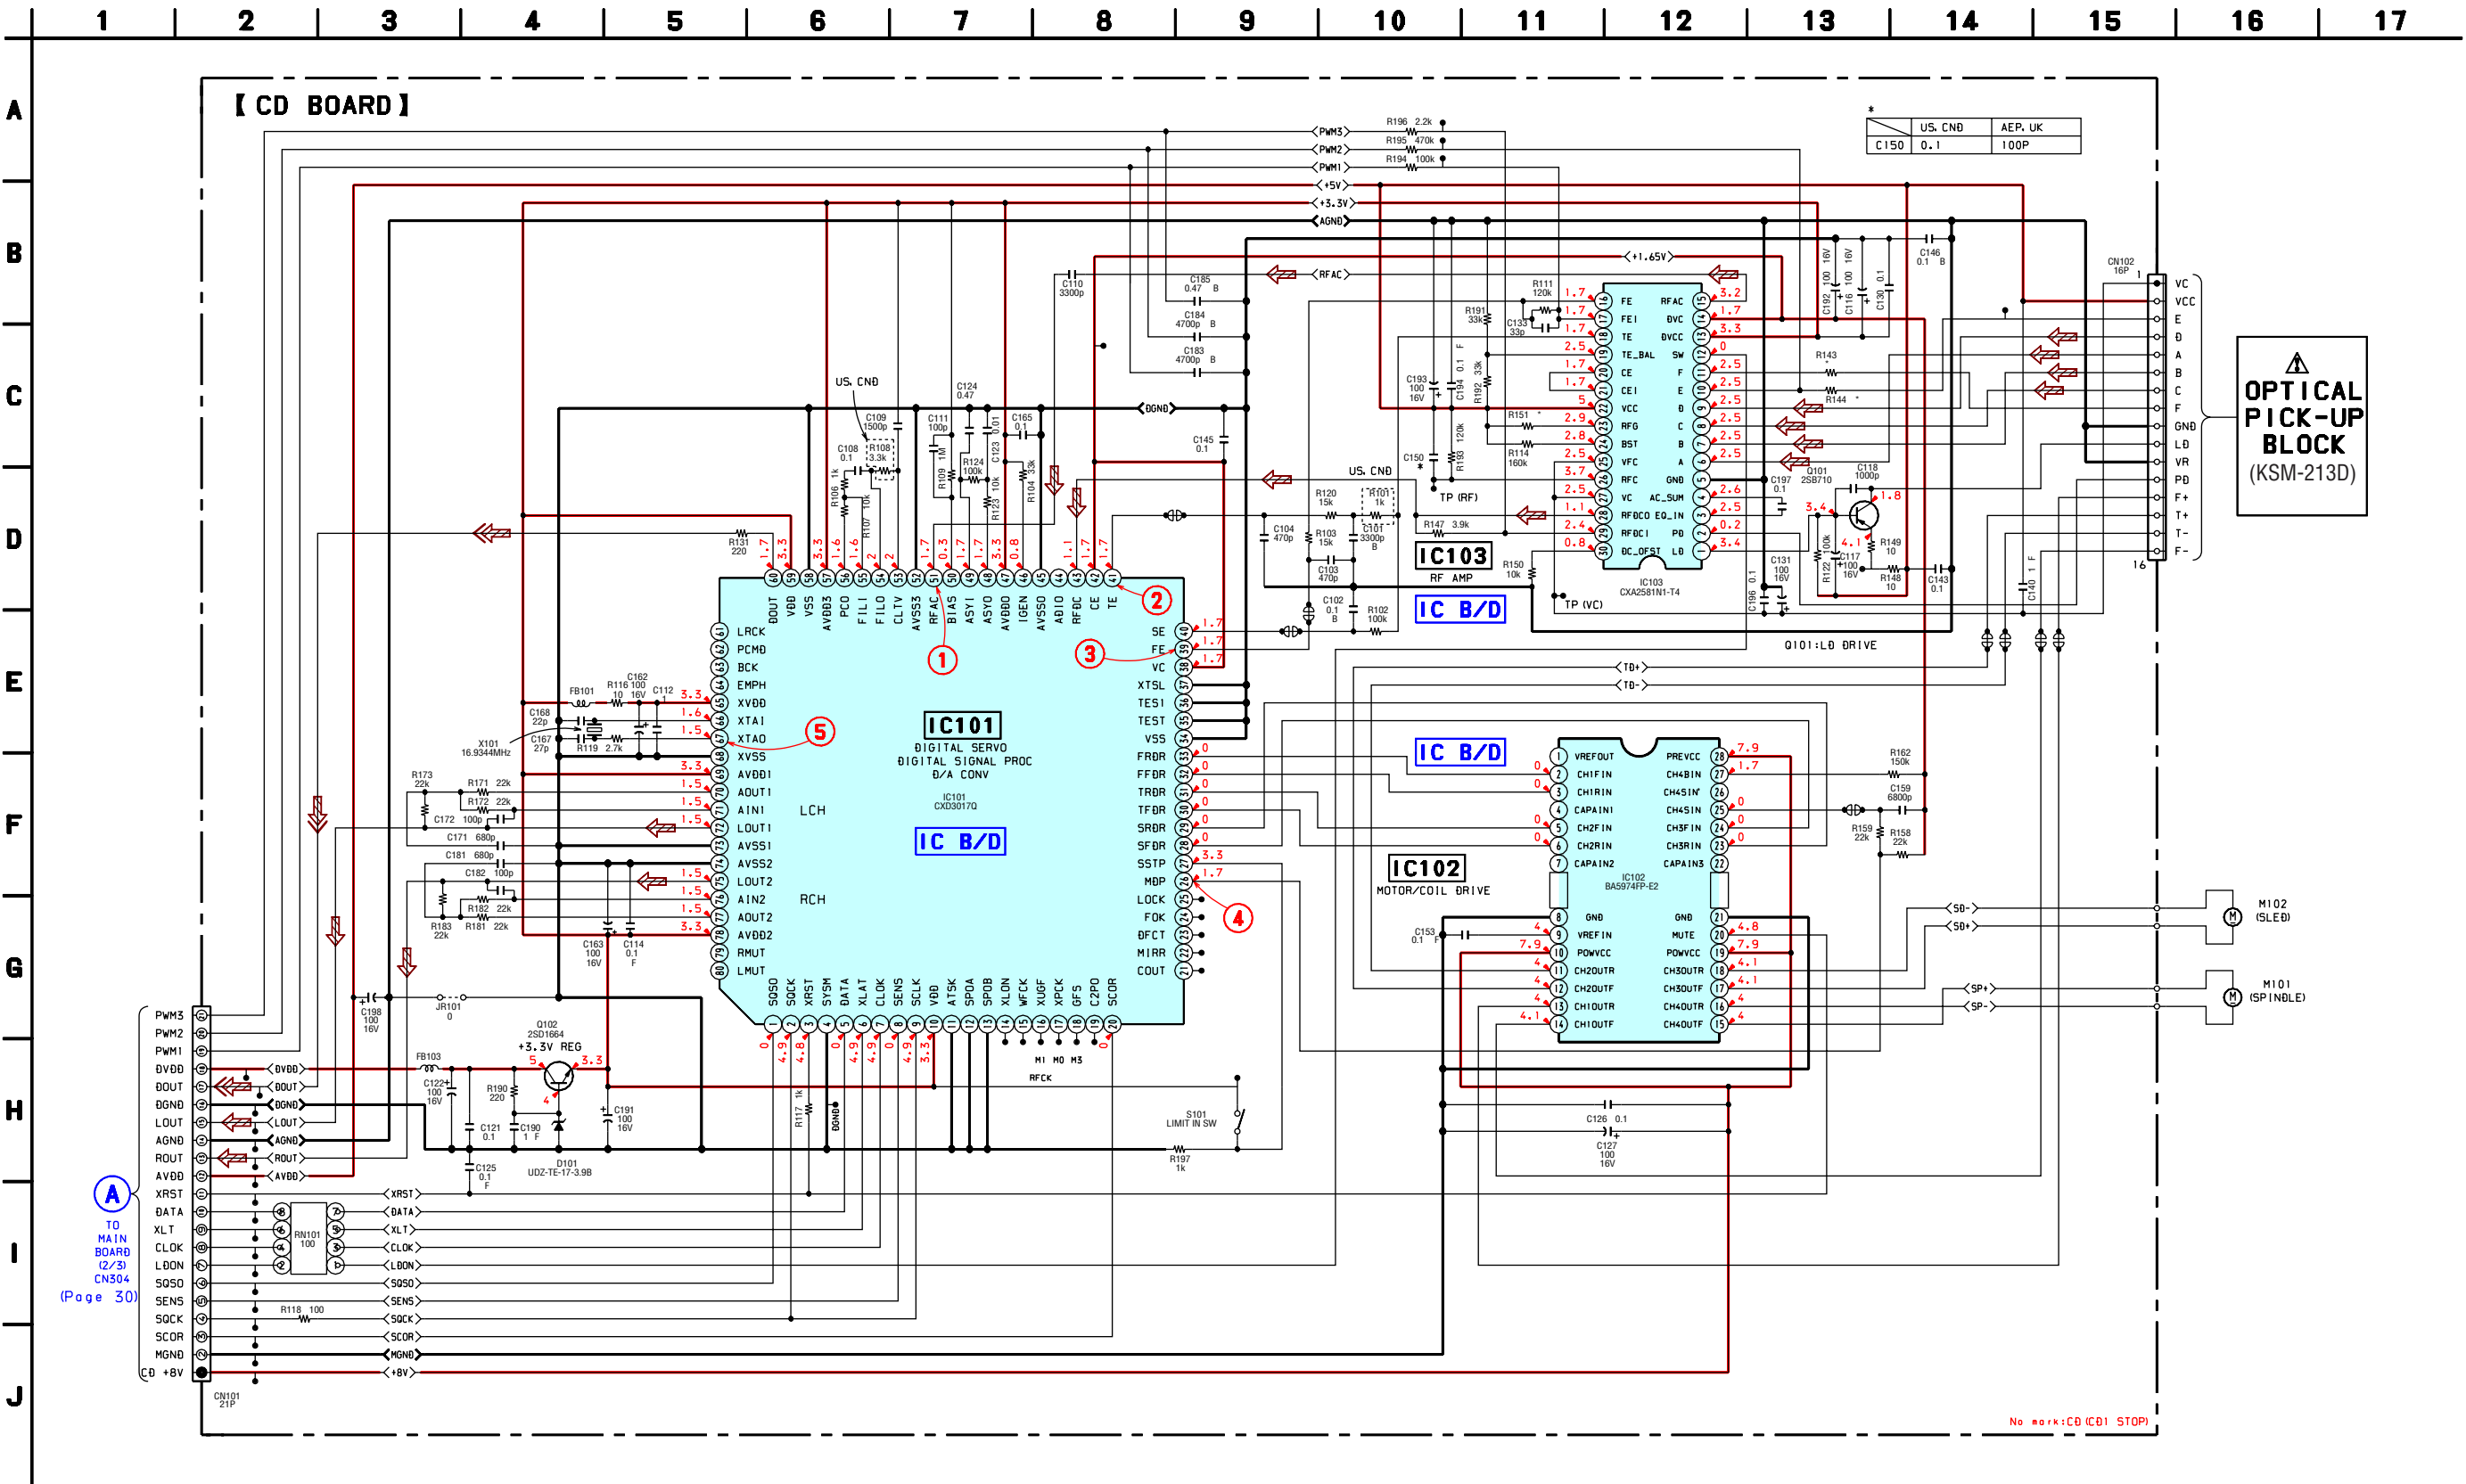

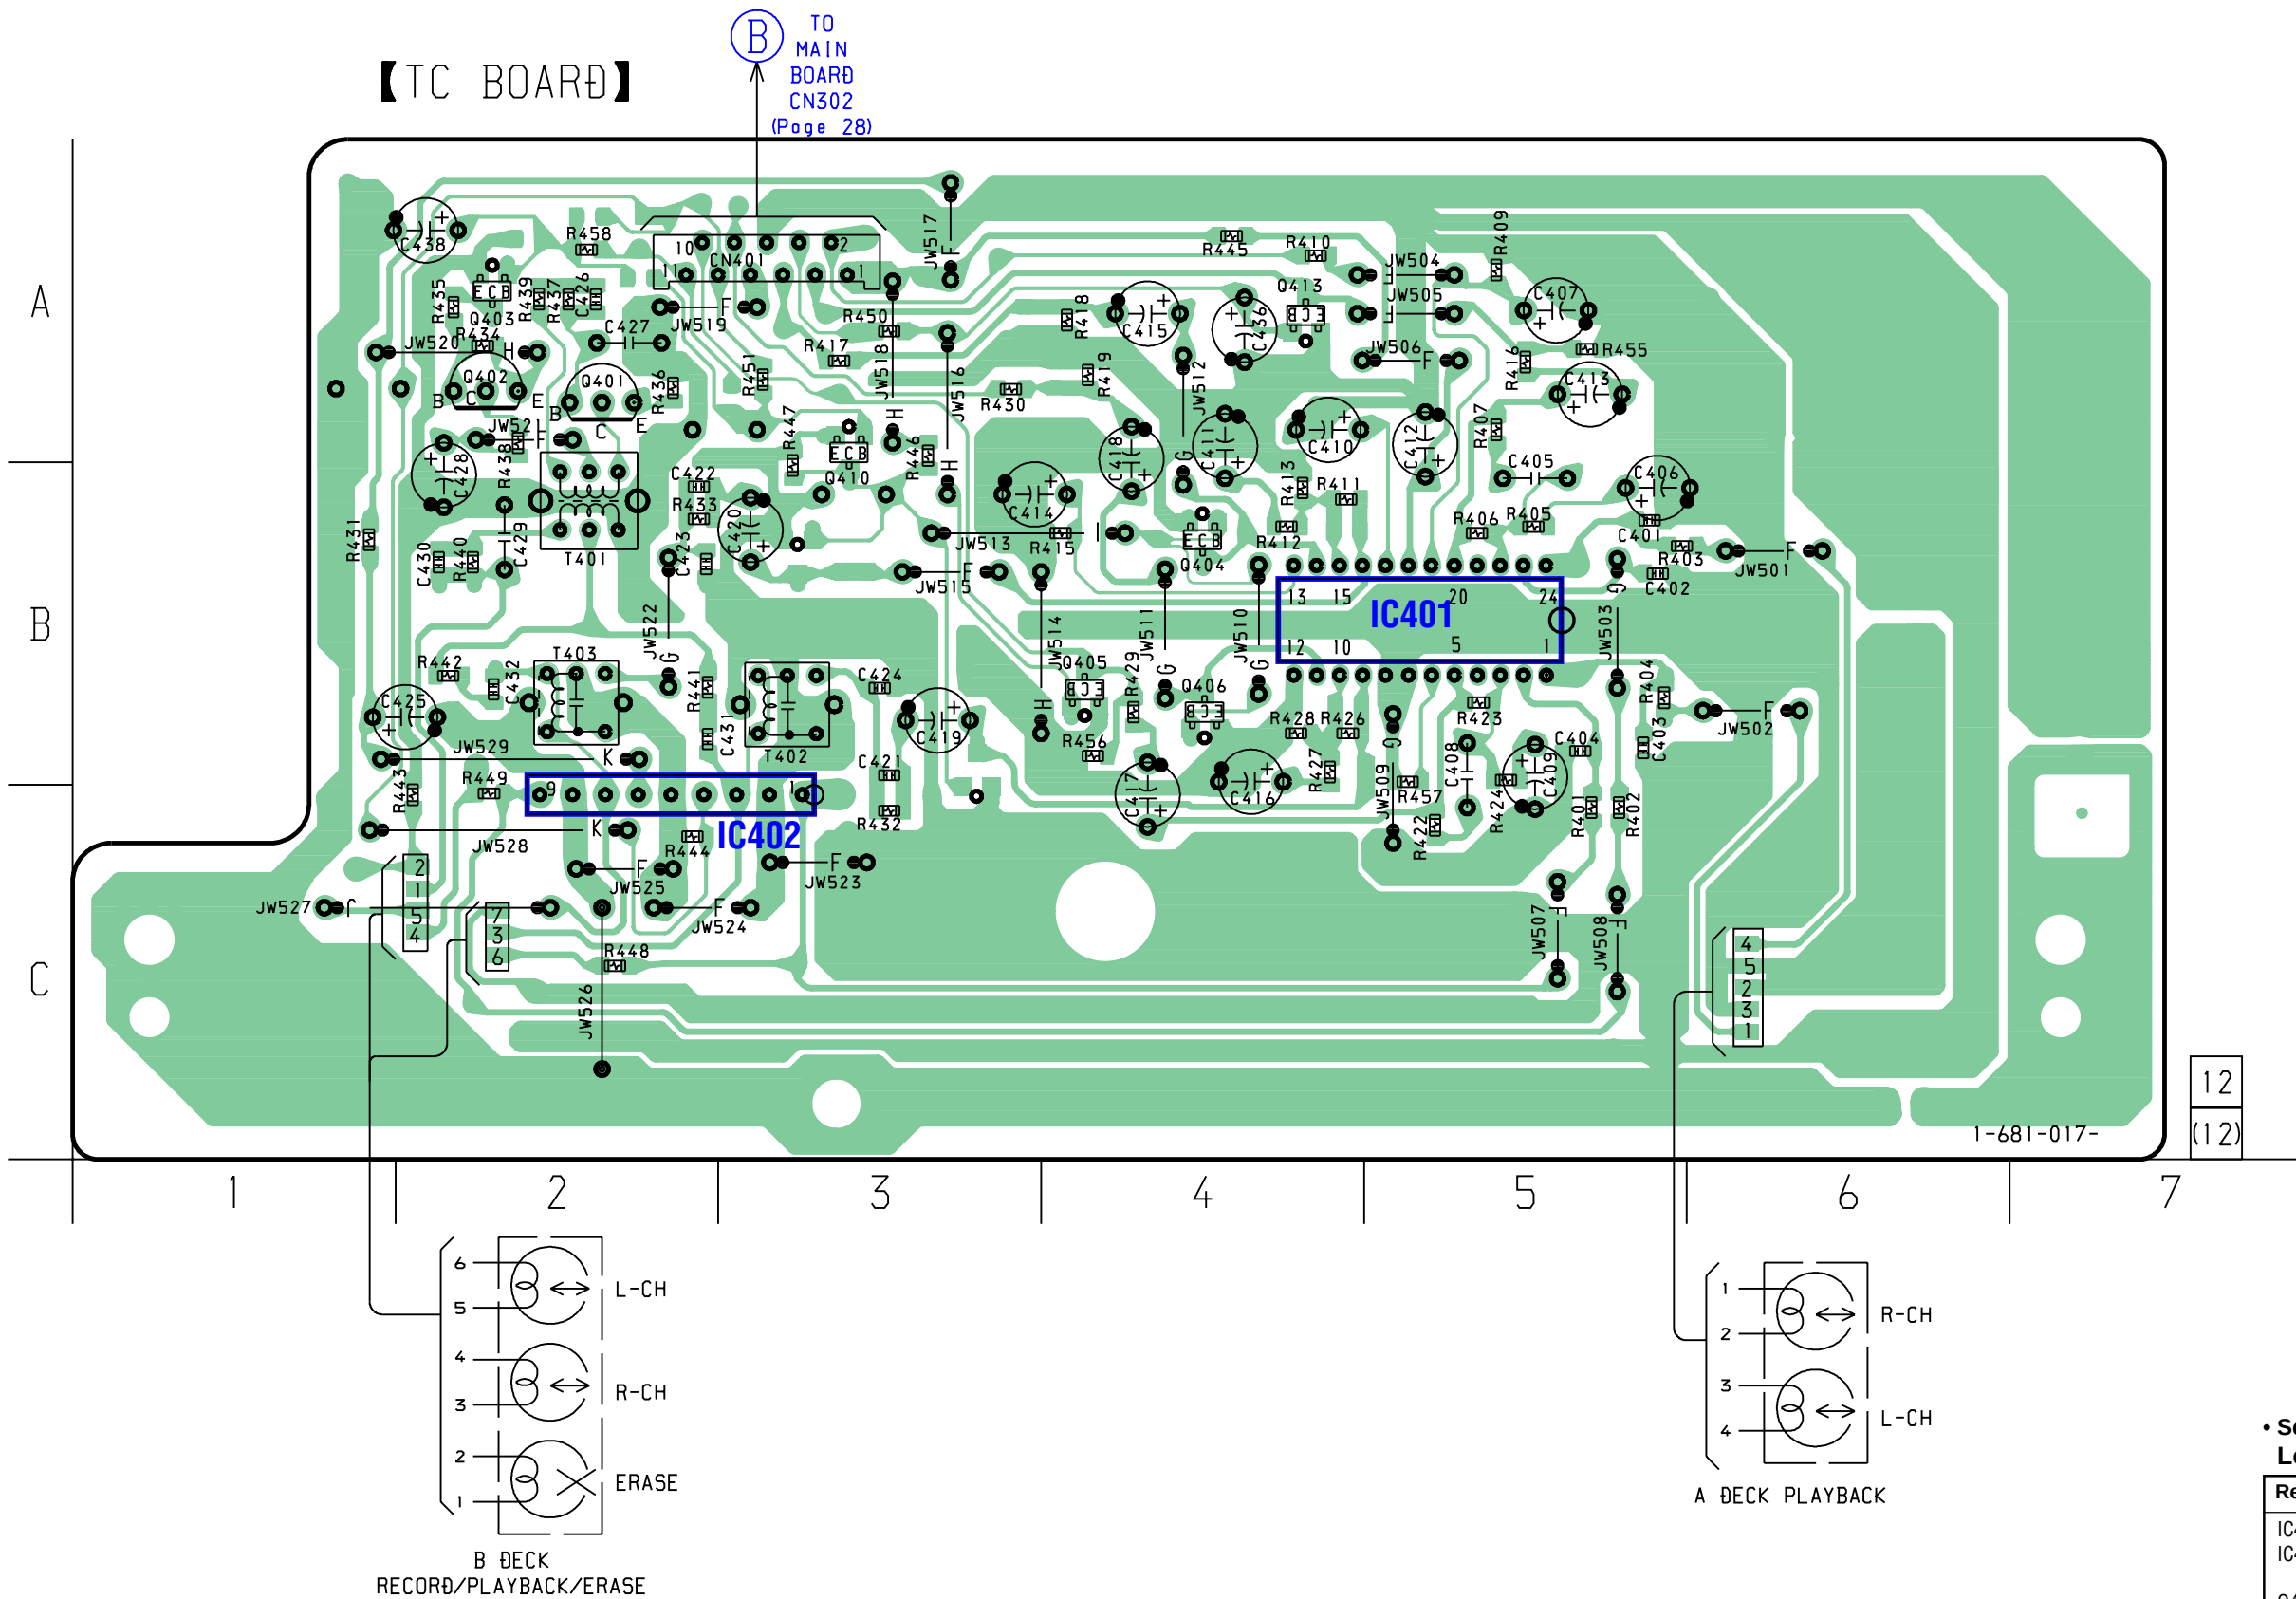


• Semiconductor Location


Ref. No.	Location
IC401	B-5
IC402	C-3
Q401	A-2
Q402	A-2
Q403	A-2
Q404	B-4
Q405	B-4
Q406	B-4
Q410	B-3
Q413	A-4

6-7. Schematic Diagram – TC Board –

• See page 23 for Waveforms. • See page 42 for IC Block Diagram.

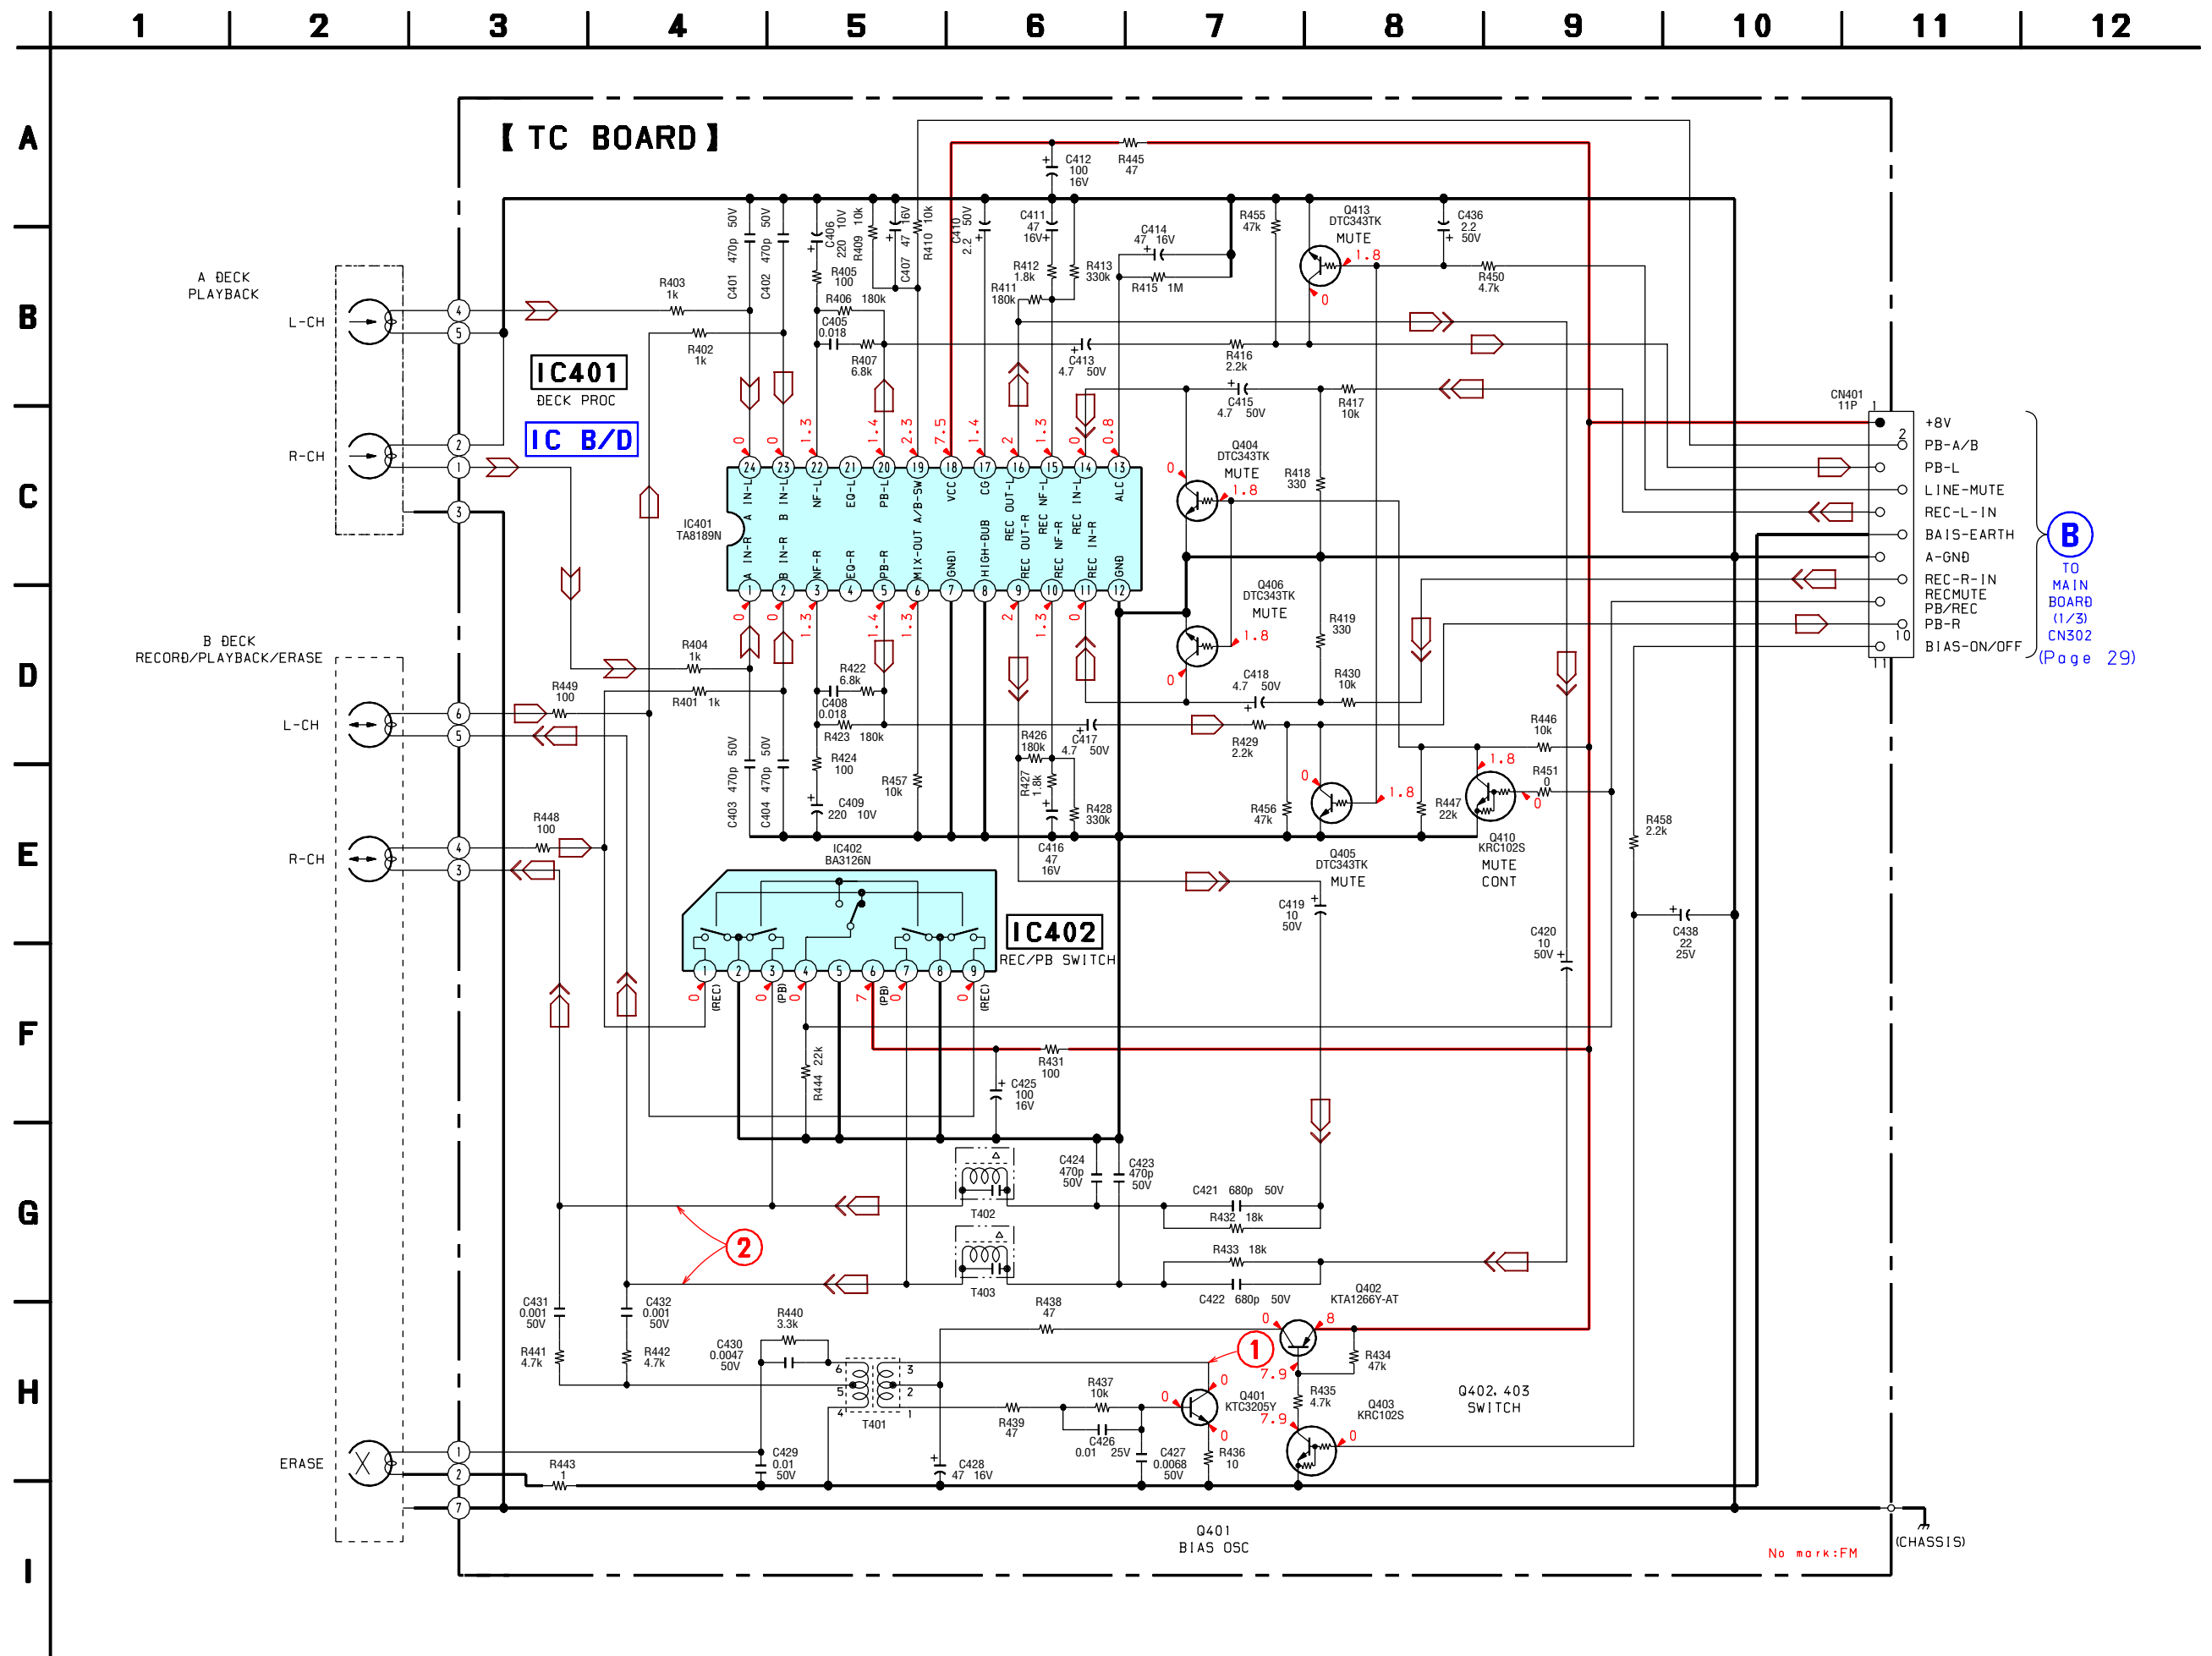

• See page 23 for Circuit Boards Location.

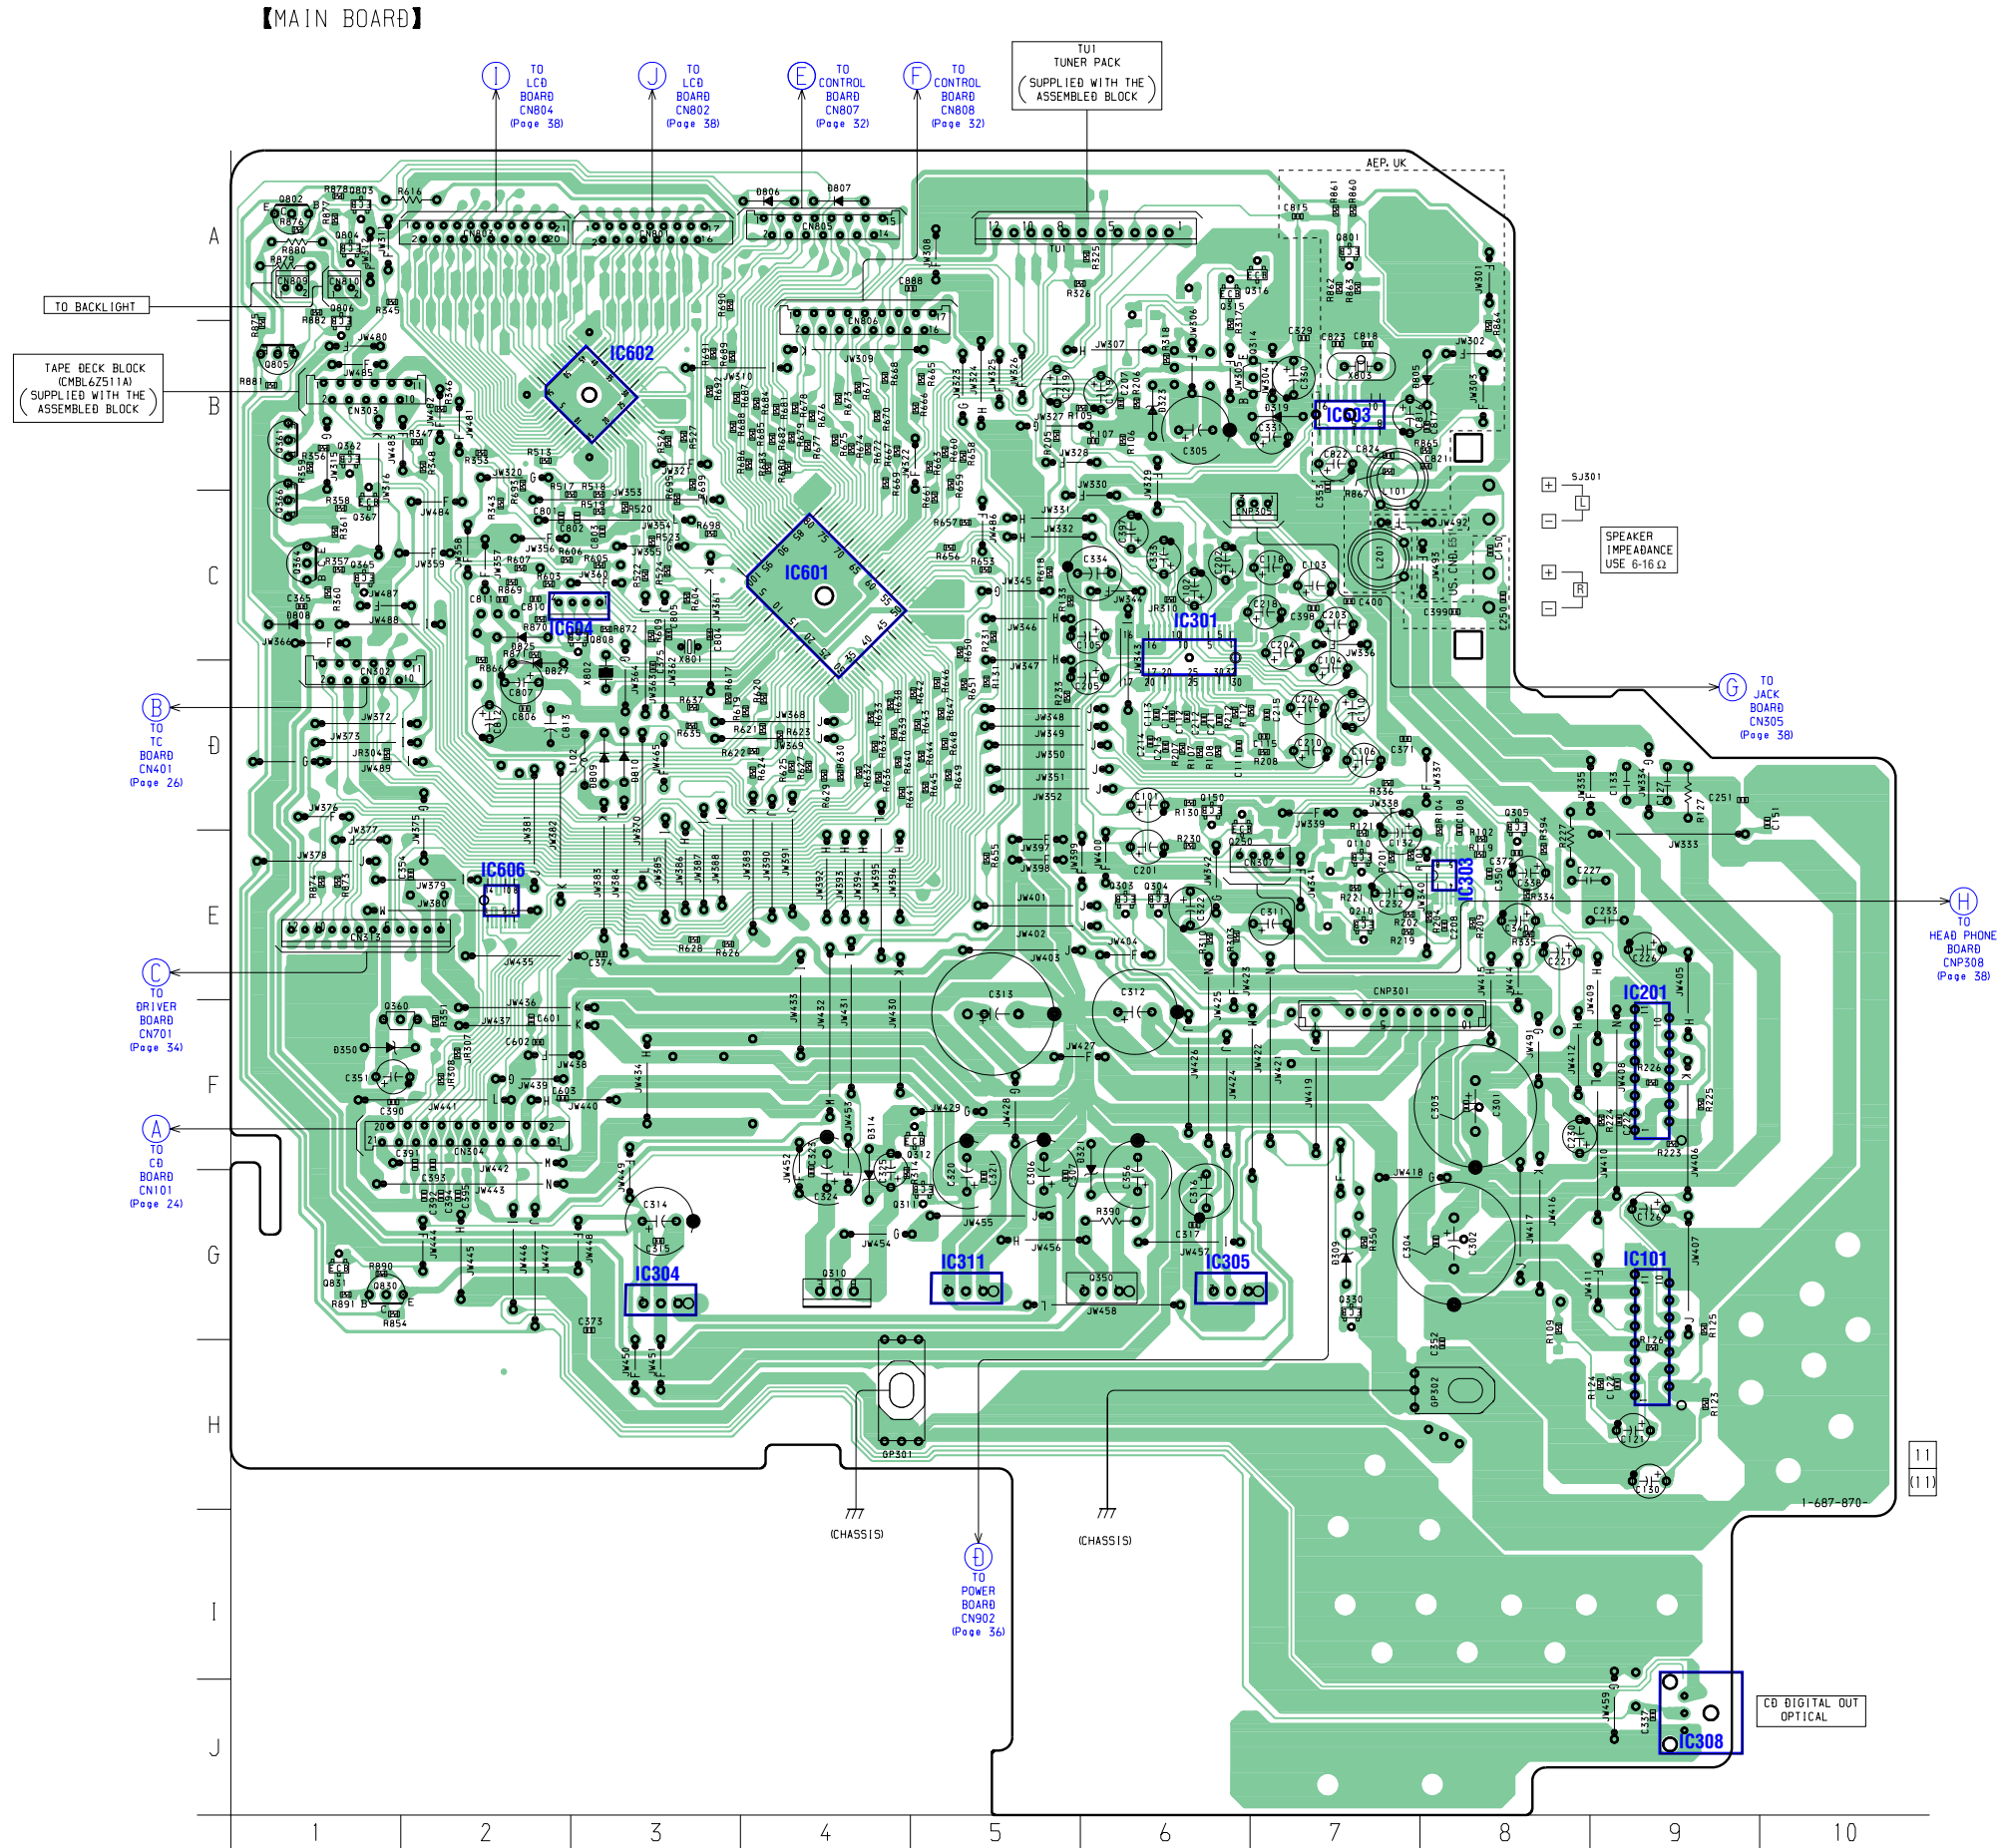


• Semiconductor Location


Ref. No.	Location
D309	C-7
D314	F-4
D319	B-8
D321	F-5
D323	B-6
D350	F-1
D805	B-7
D806	A-4
D807	A-4
D808	C-1
D809	D-3
D810	D-3
D825	C-2
D827	D-2
IC101	G-9
IC201	E-9
IC301	C-6
IC303	E-8
IC304	G-3
IC305	G-6
IC308	J-9
IC311	G-5
IC601	C-4
IC602	B-3
IC603	B-7
IC604	C-2
IC606	E-2
Q110	E-7
Q150	D-6
Q210	E-7
Q250	E-6
Q303	E-6
Q304	E-6
Q305	D-8
Q310	G-4
Q311	G-4
Q312	F-4
Q314	B-6
Q315	A-6
Q316	A-6
Q330	G-7
Q350	G-6
Q360	F-1
Q361	B-1
Q362	B-1
Q364	C-1
Q365	C-1
Q366	C-1
Q367	C-1
Q801	A-7
Q802	A-1
Q803	A-1
Q804	A-1
Q805	B-1
Q806	A-1
Q808	C-3
Q830	G-1
Q831	G-1







6-11. Schematic Diagram – MAIN Board (3/3) – • See page 23 for Waveforms. • See page 41 for IC Block Diagrams. • See page 39 for IC Pin Function Description.

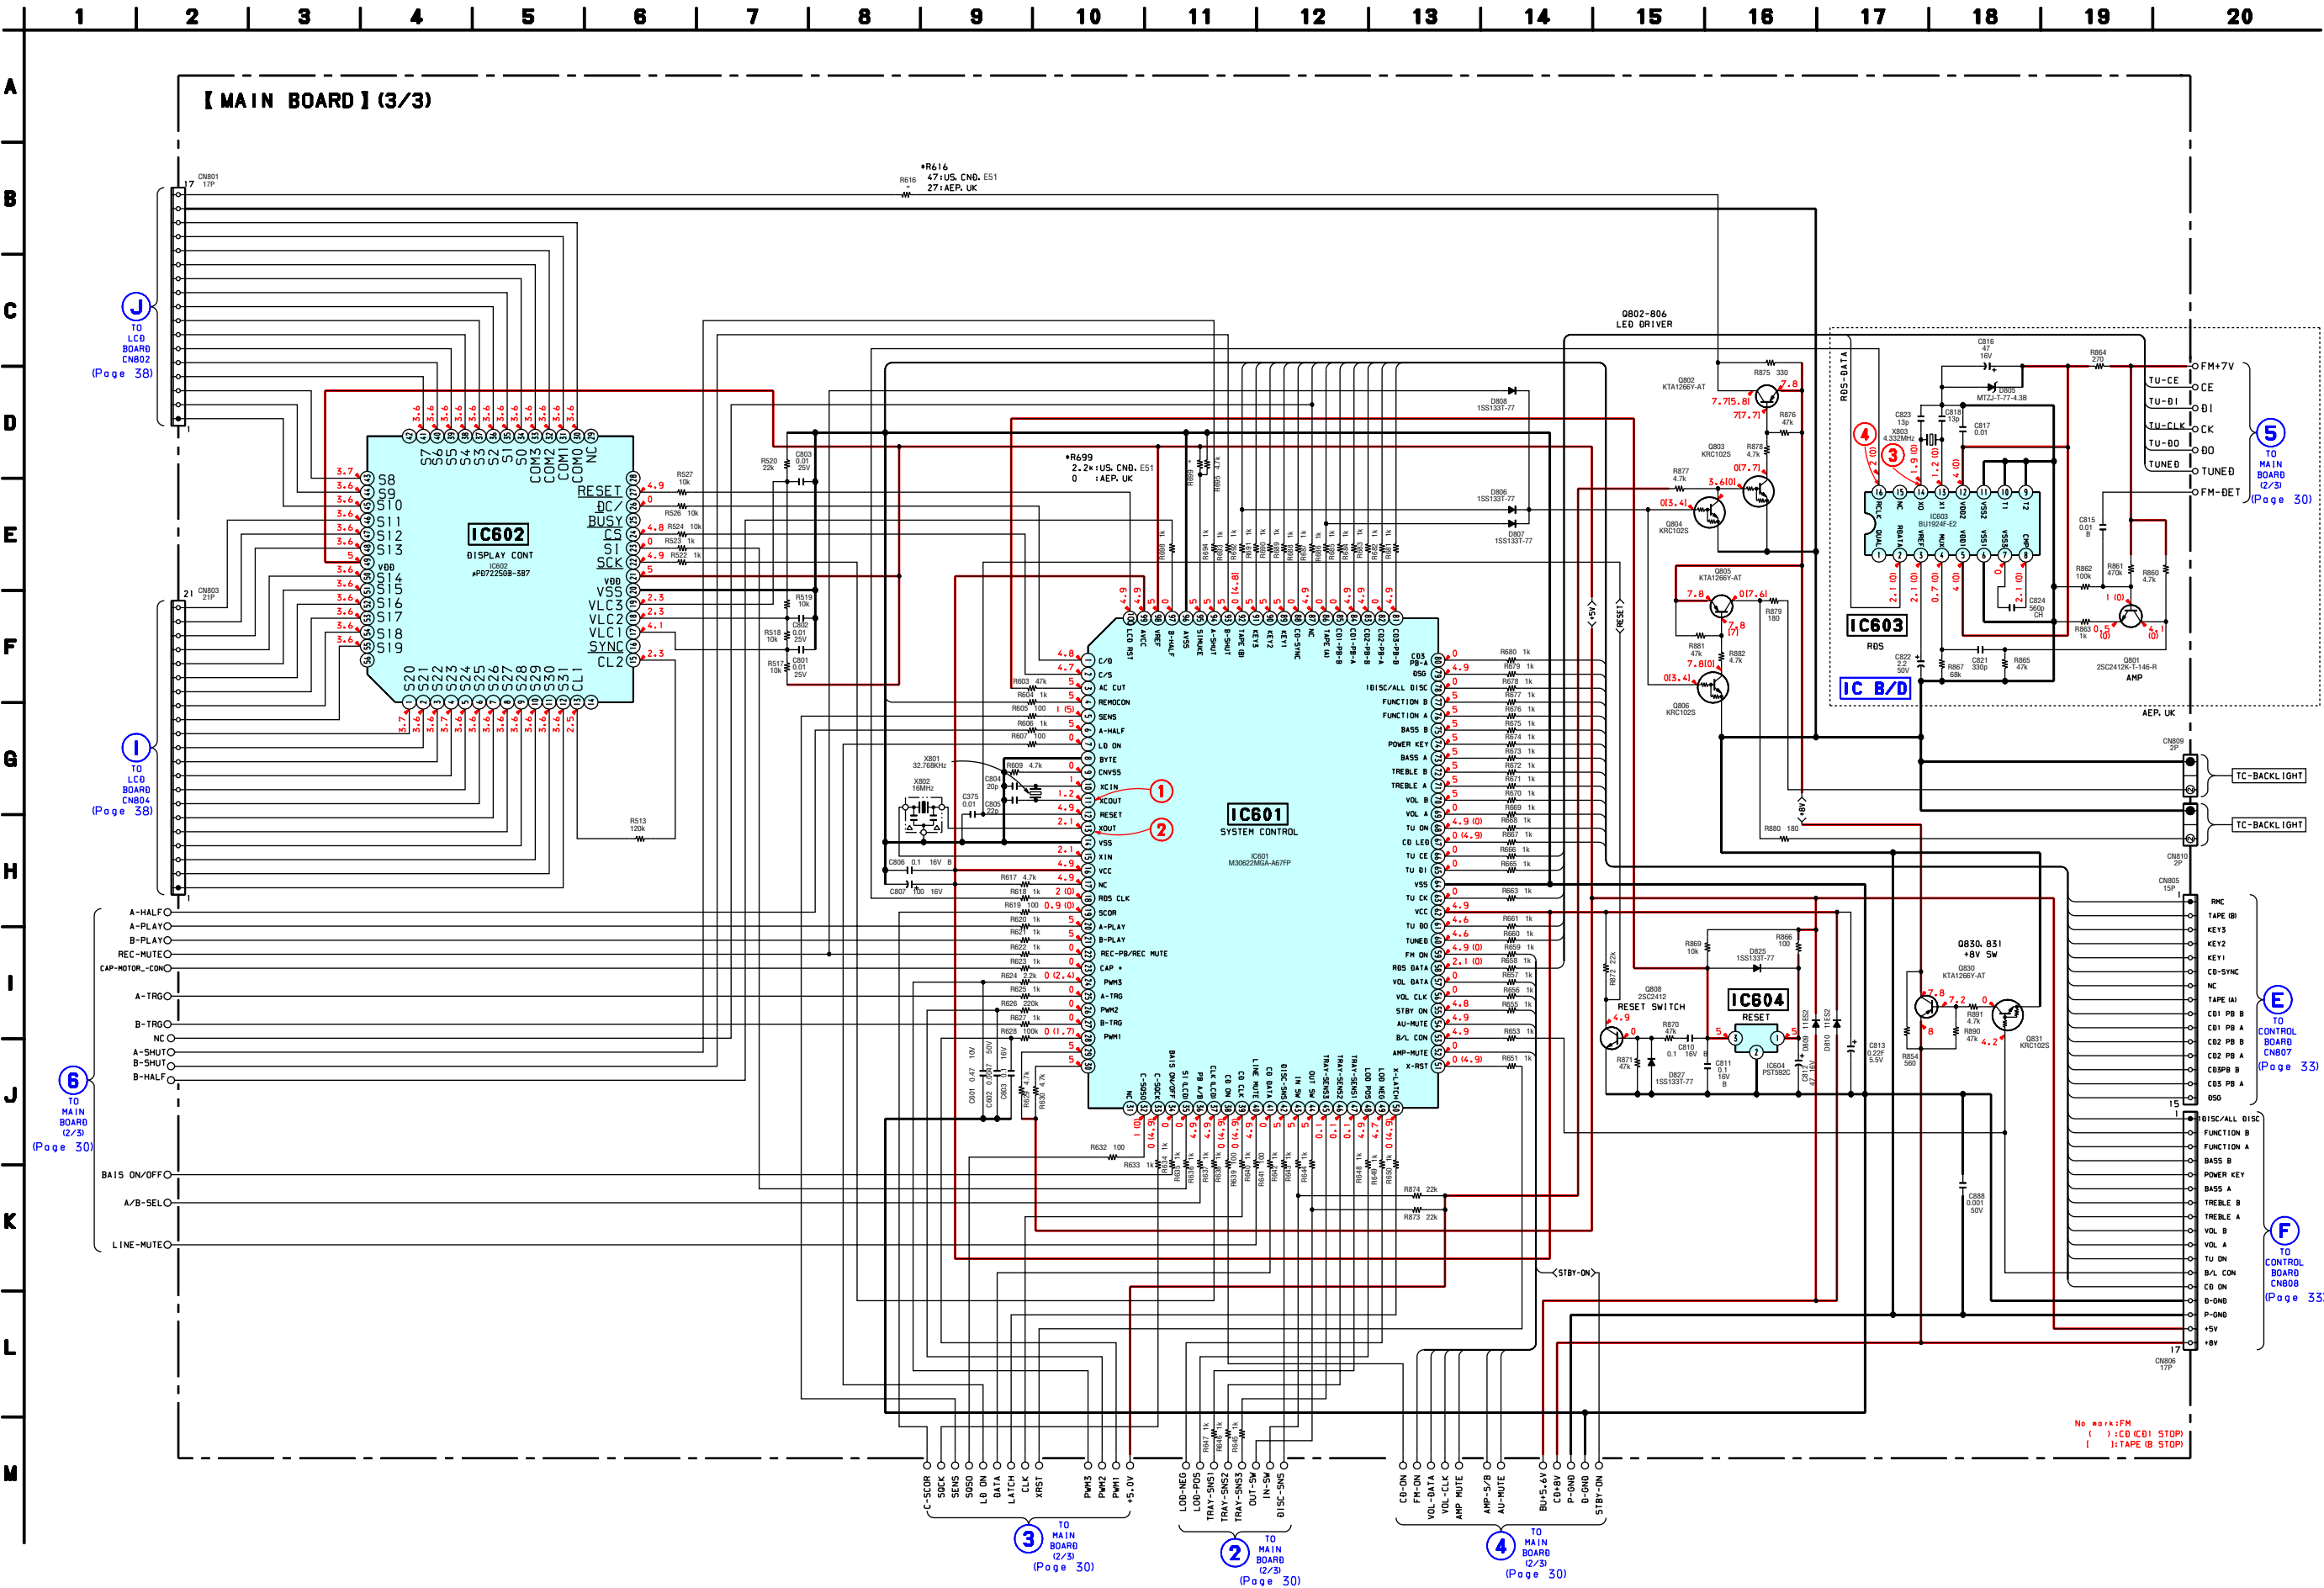


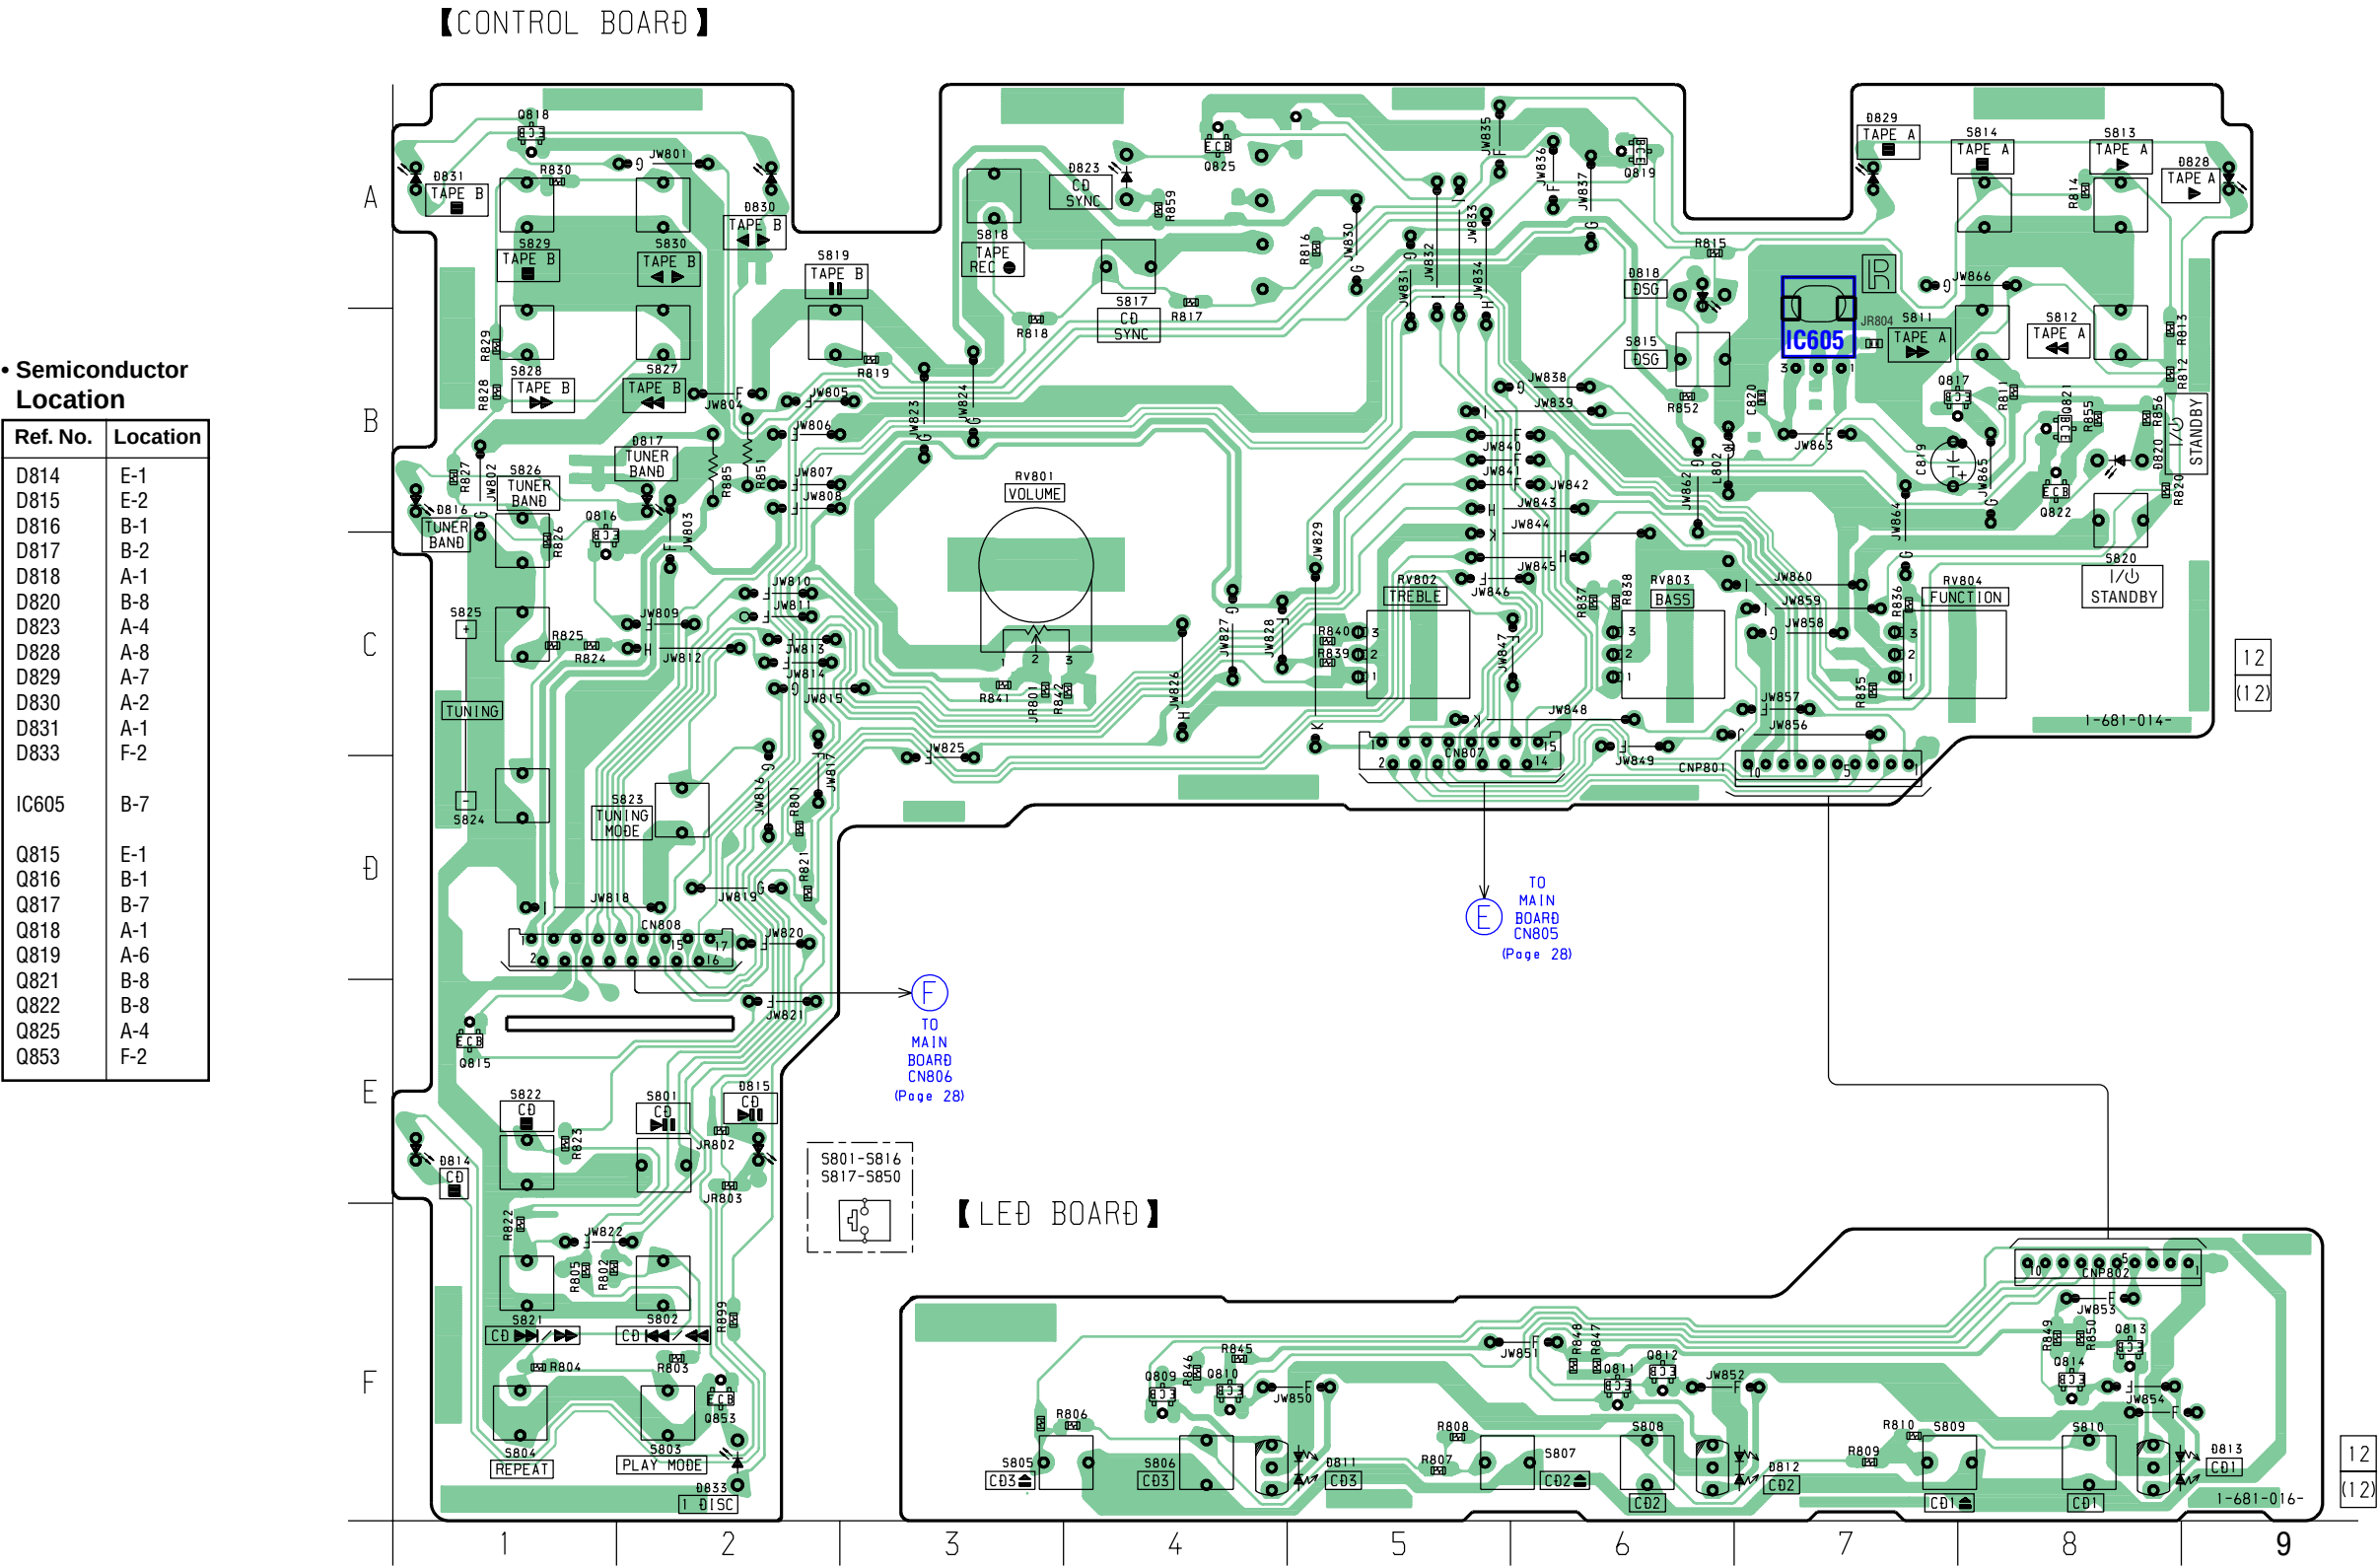


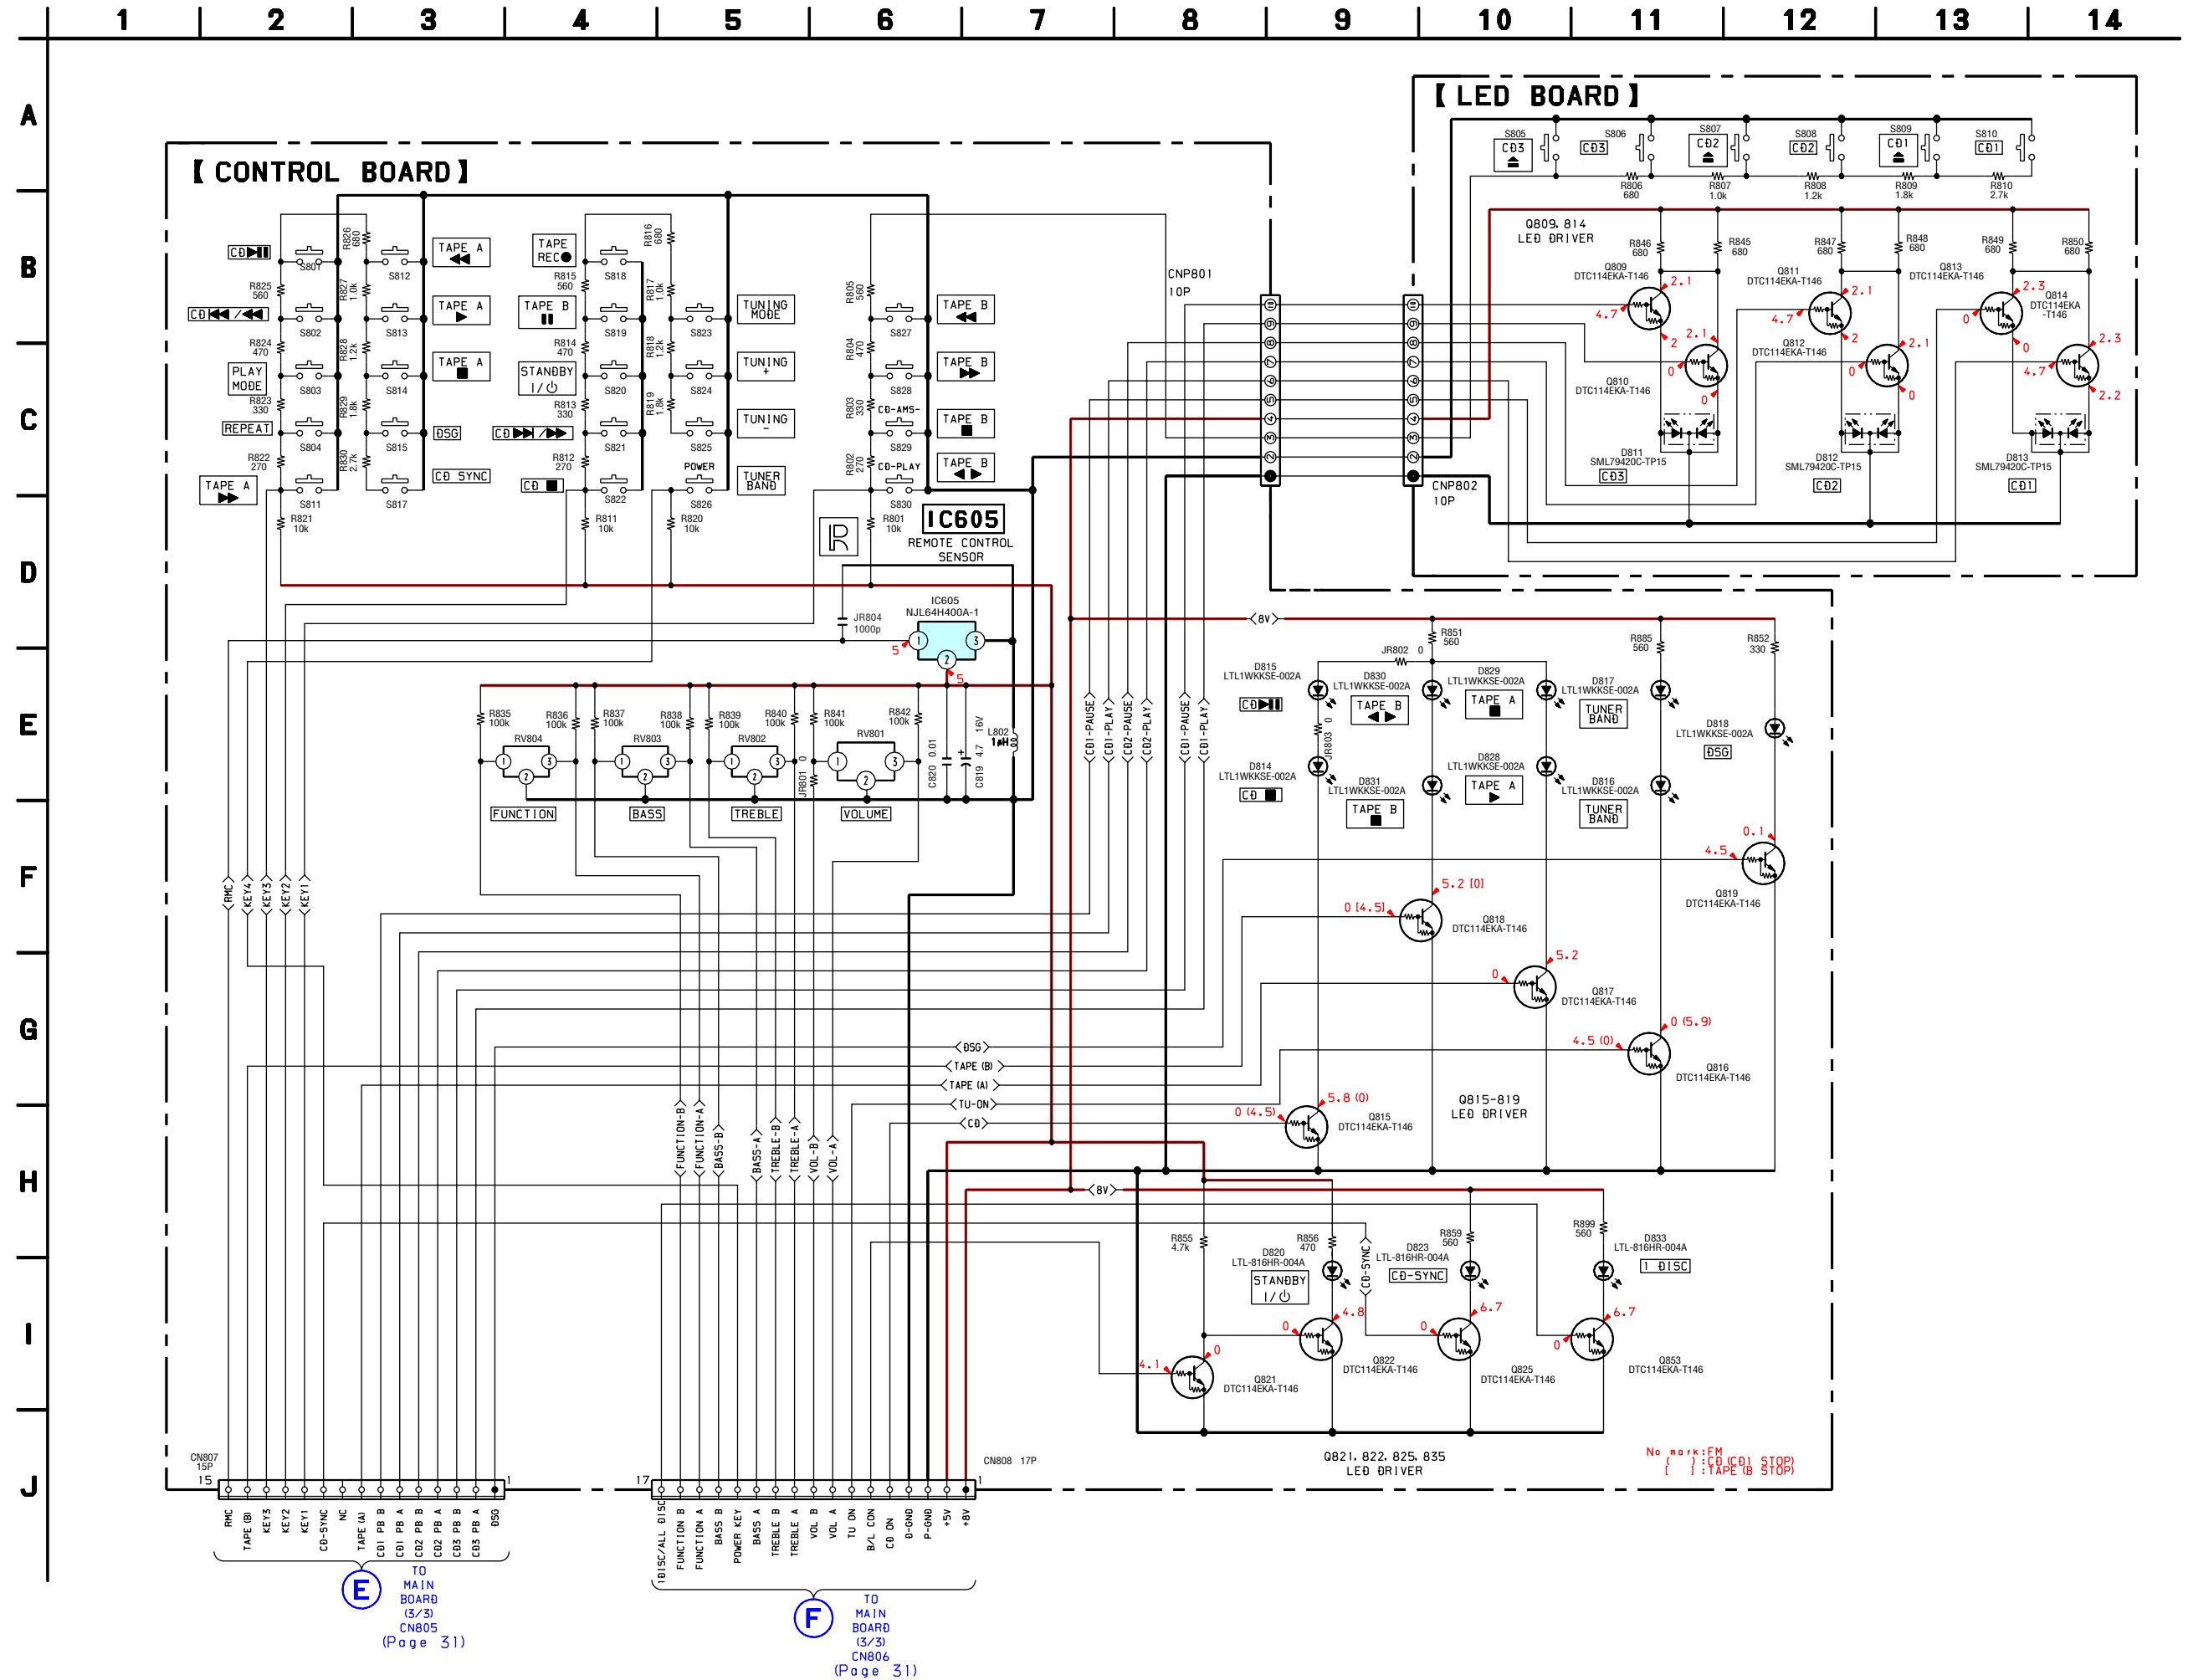

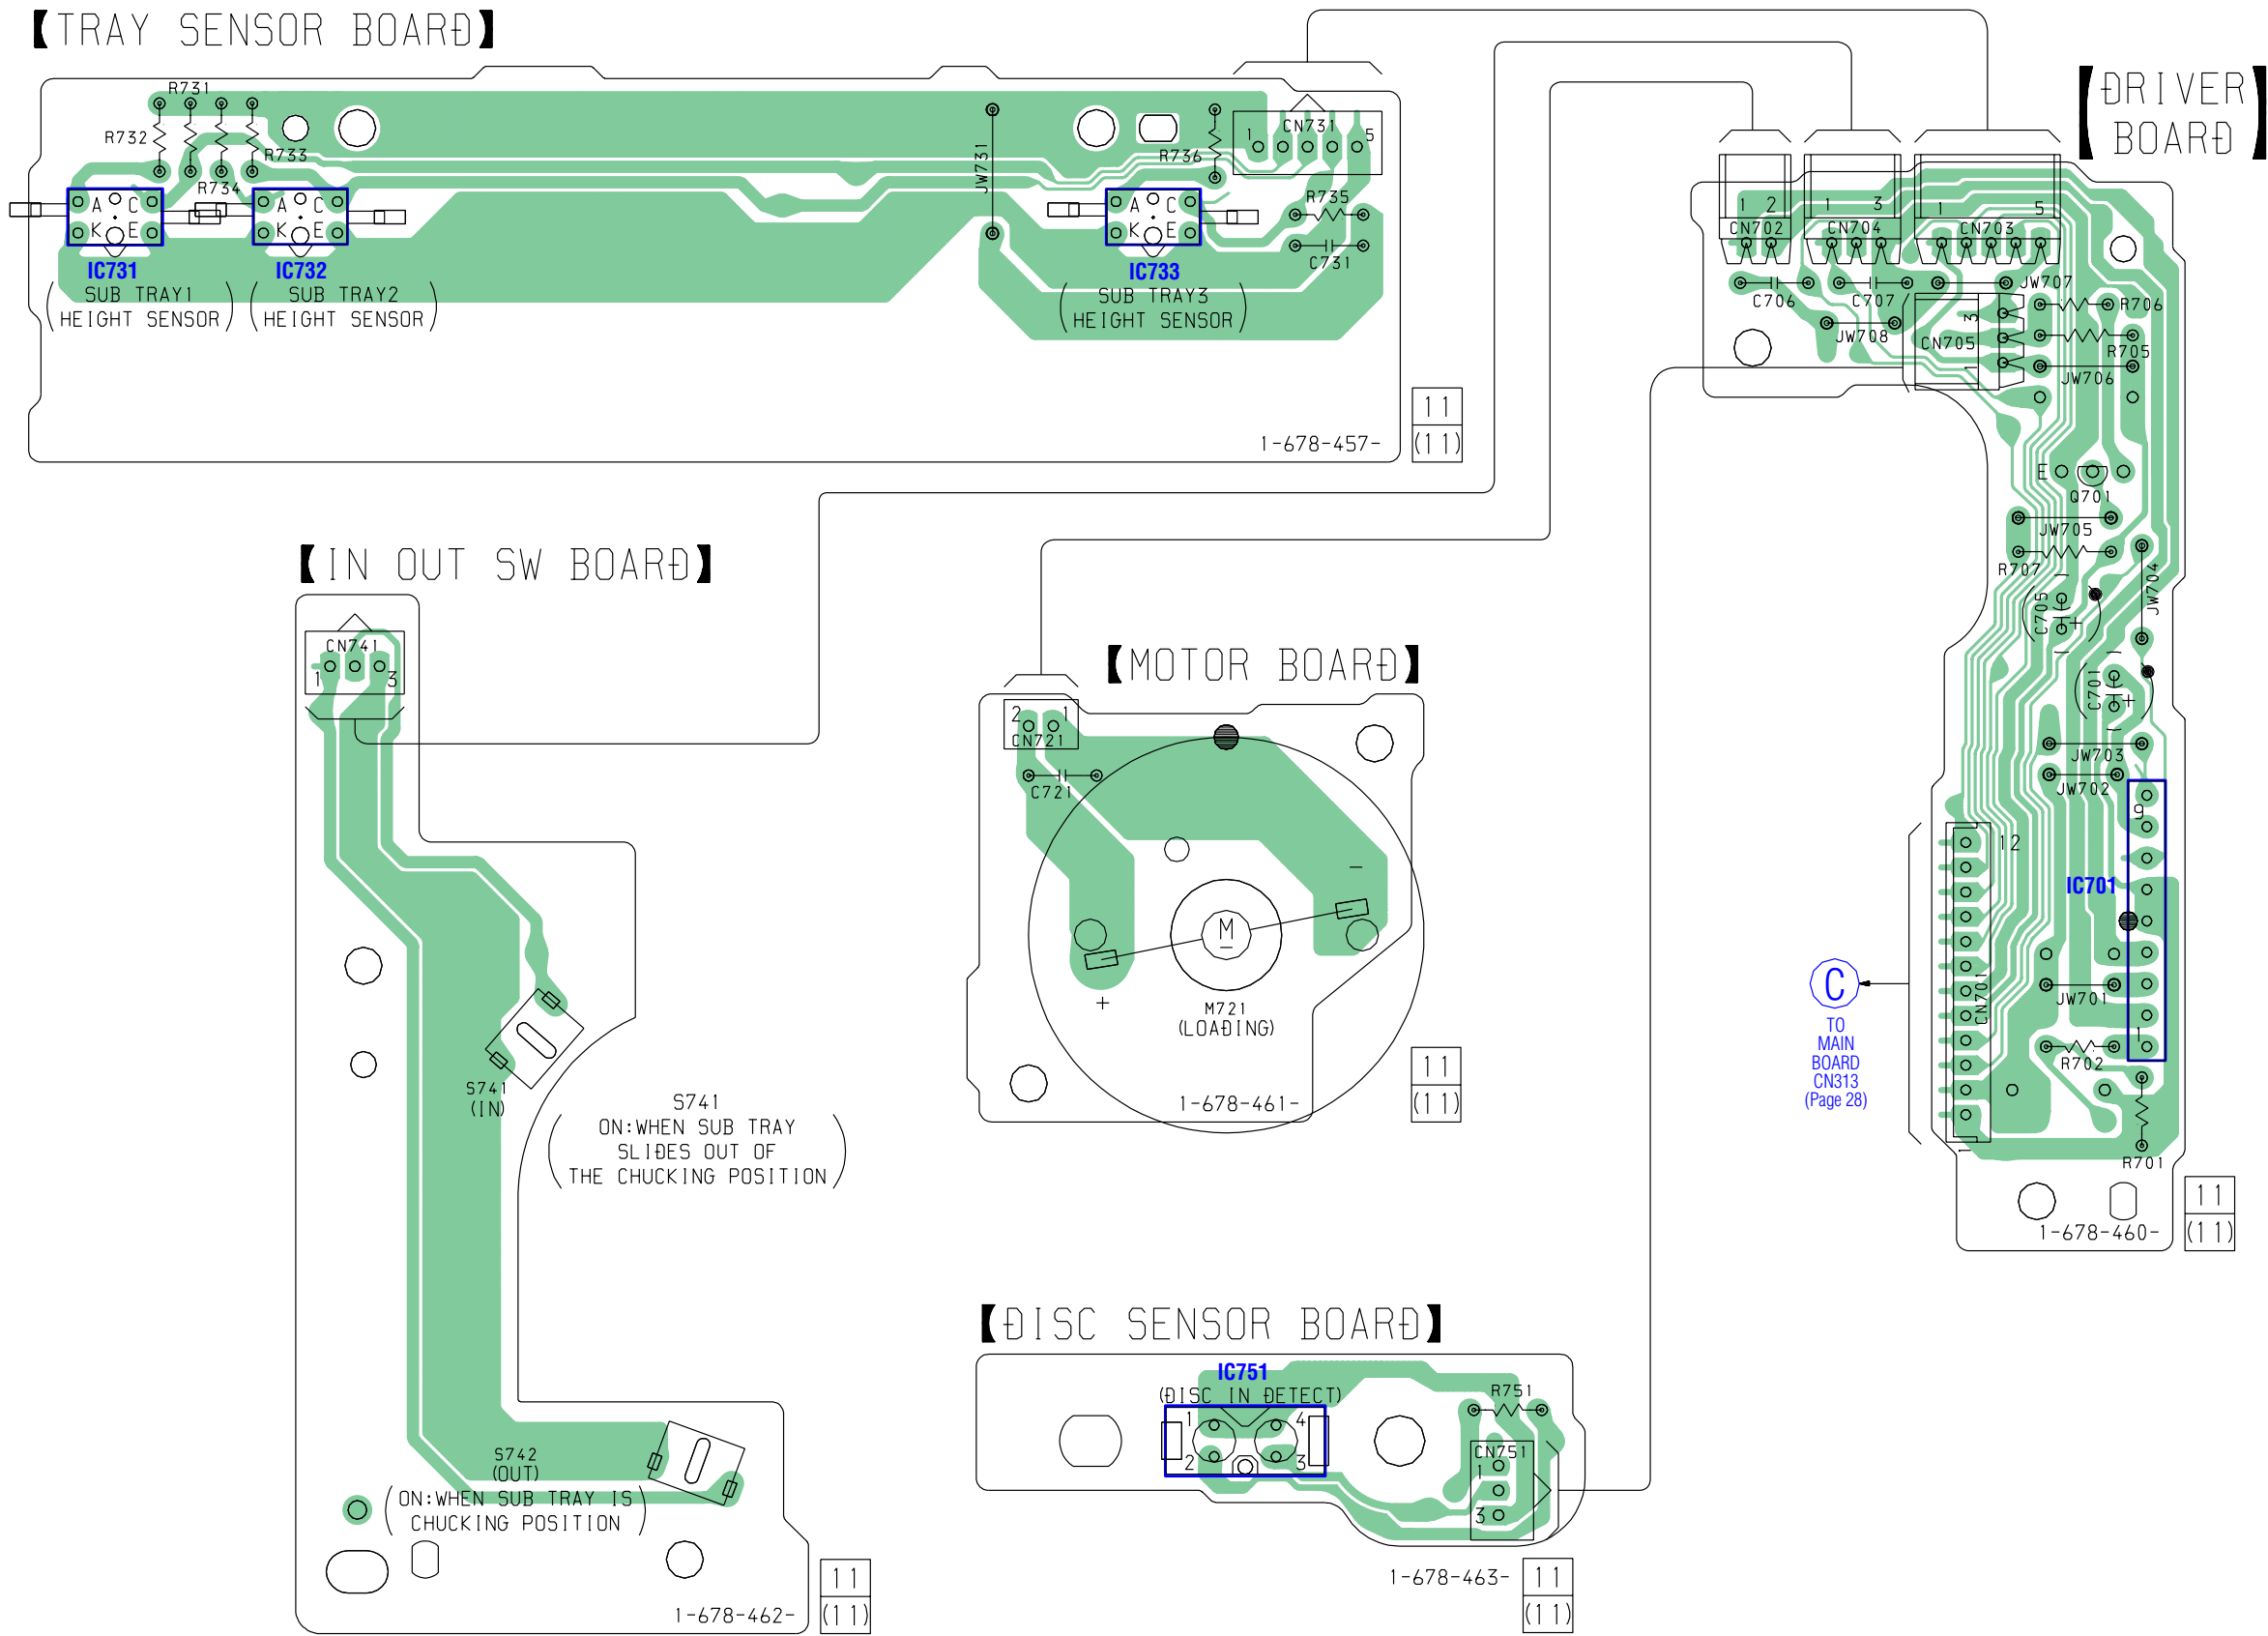


6-15. Schematic Diagram – DRIVER Section – • See page 41 for IC Block Diagram.

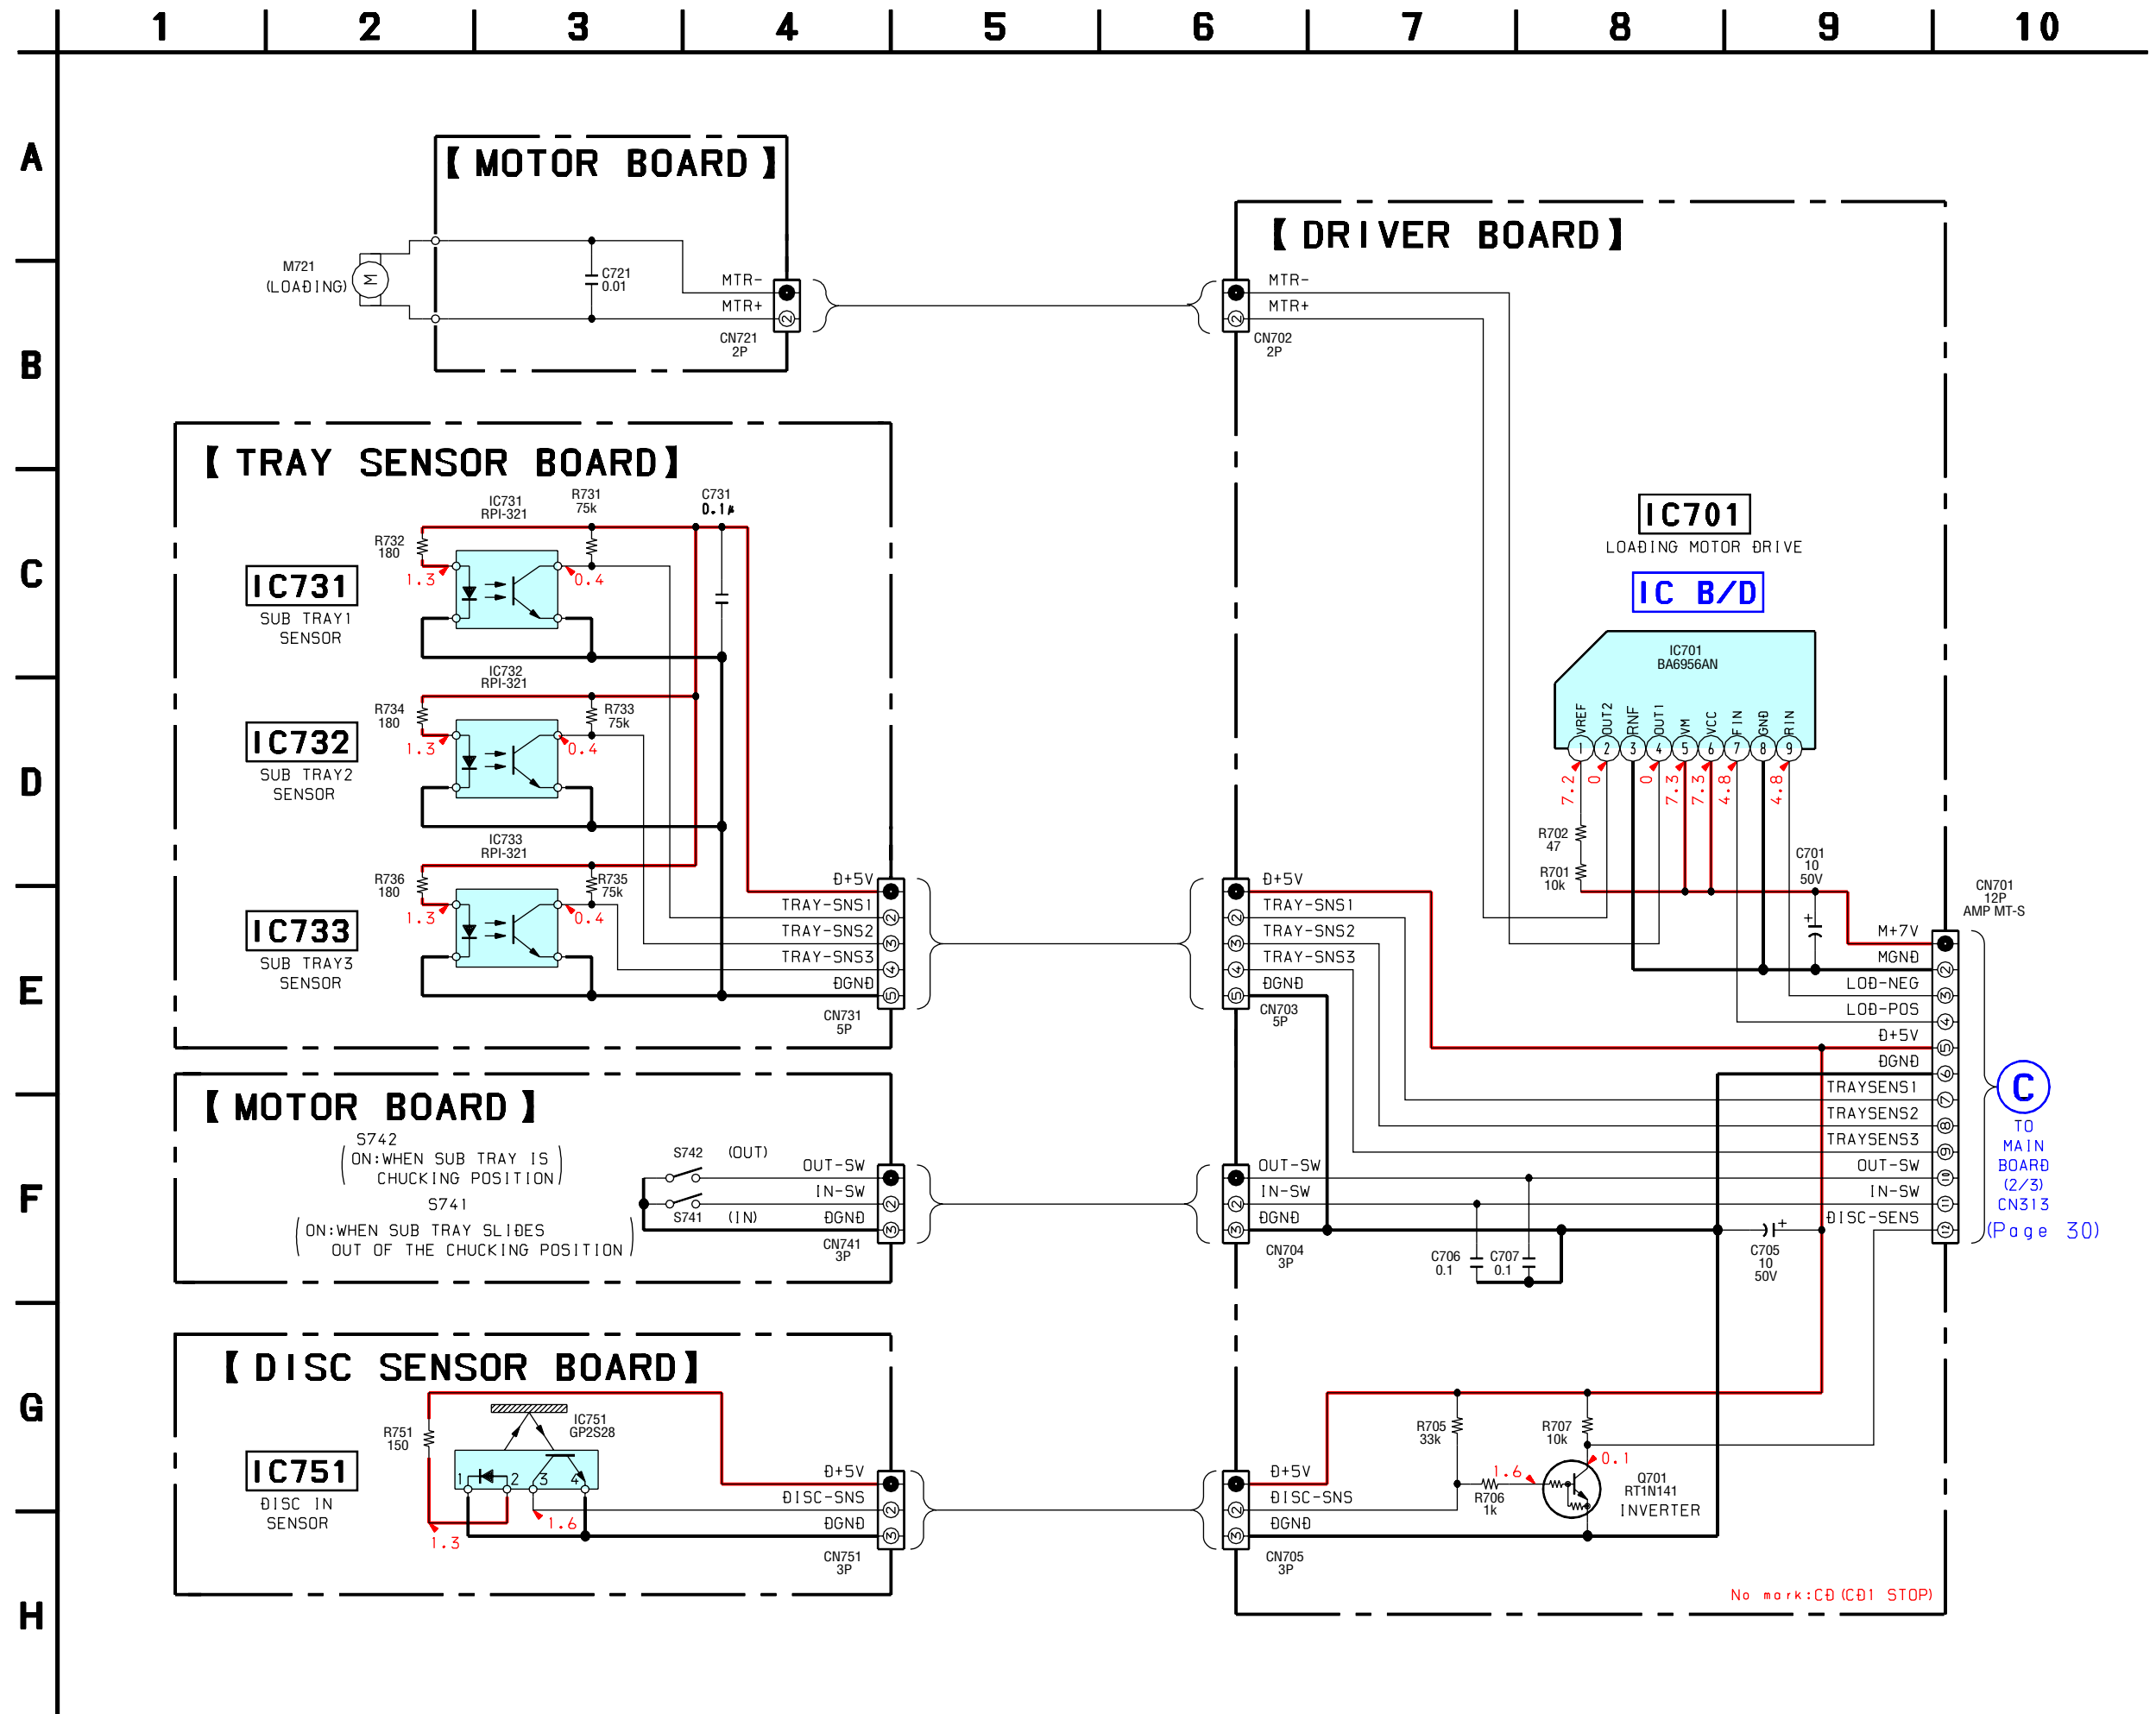


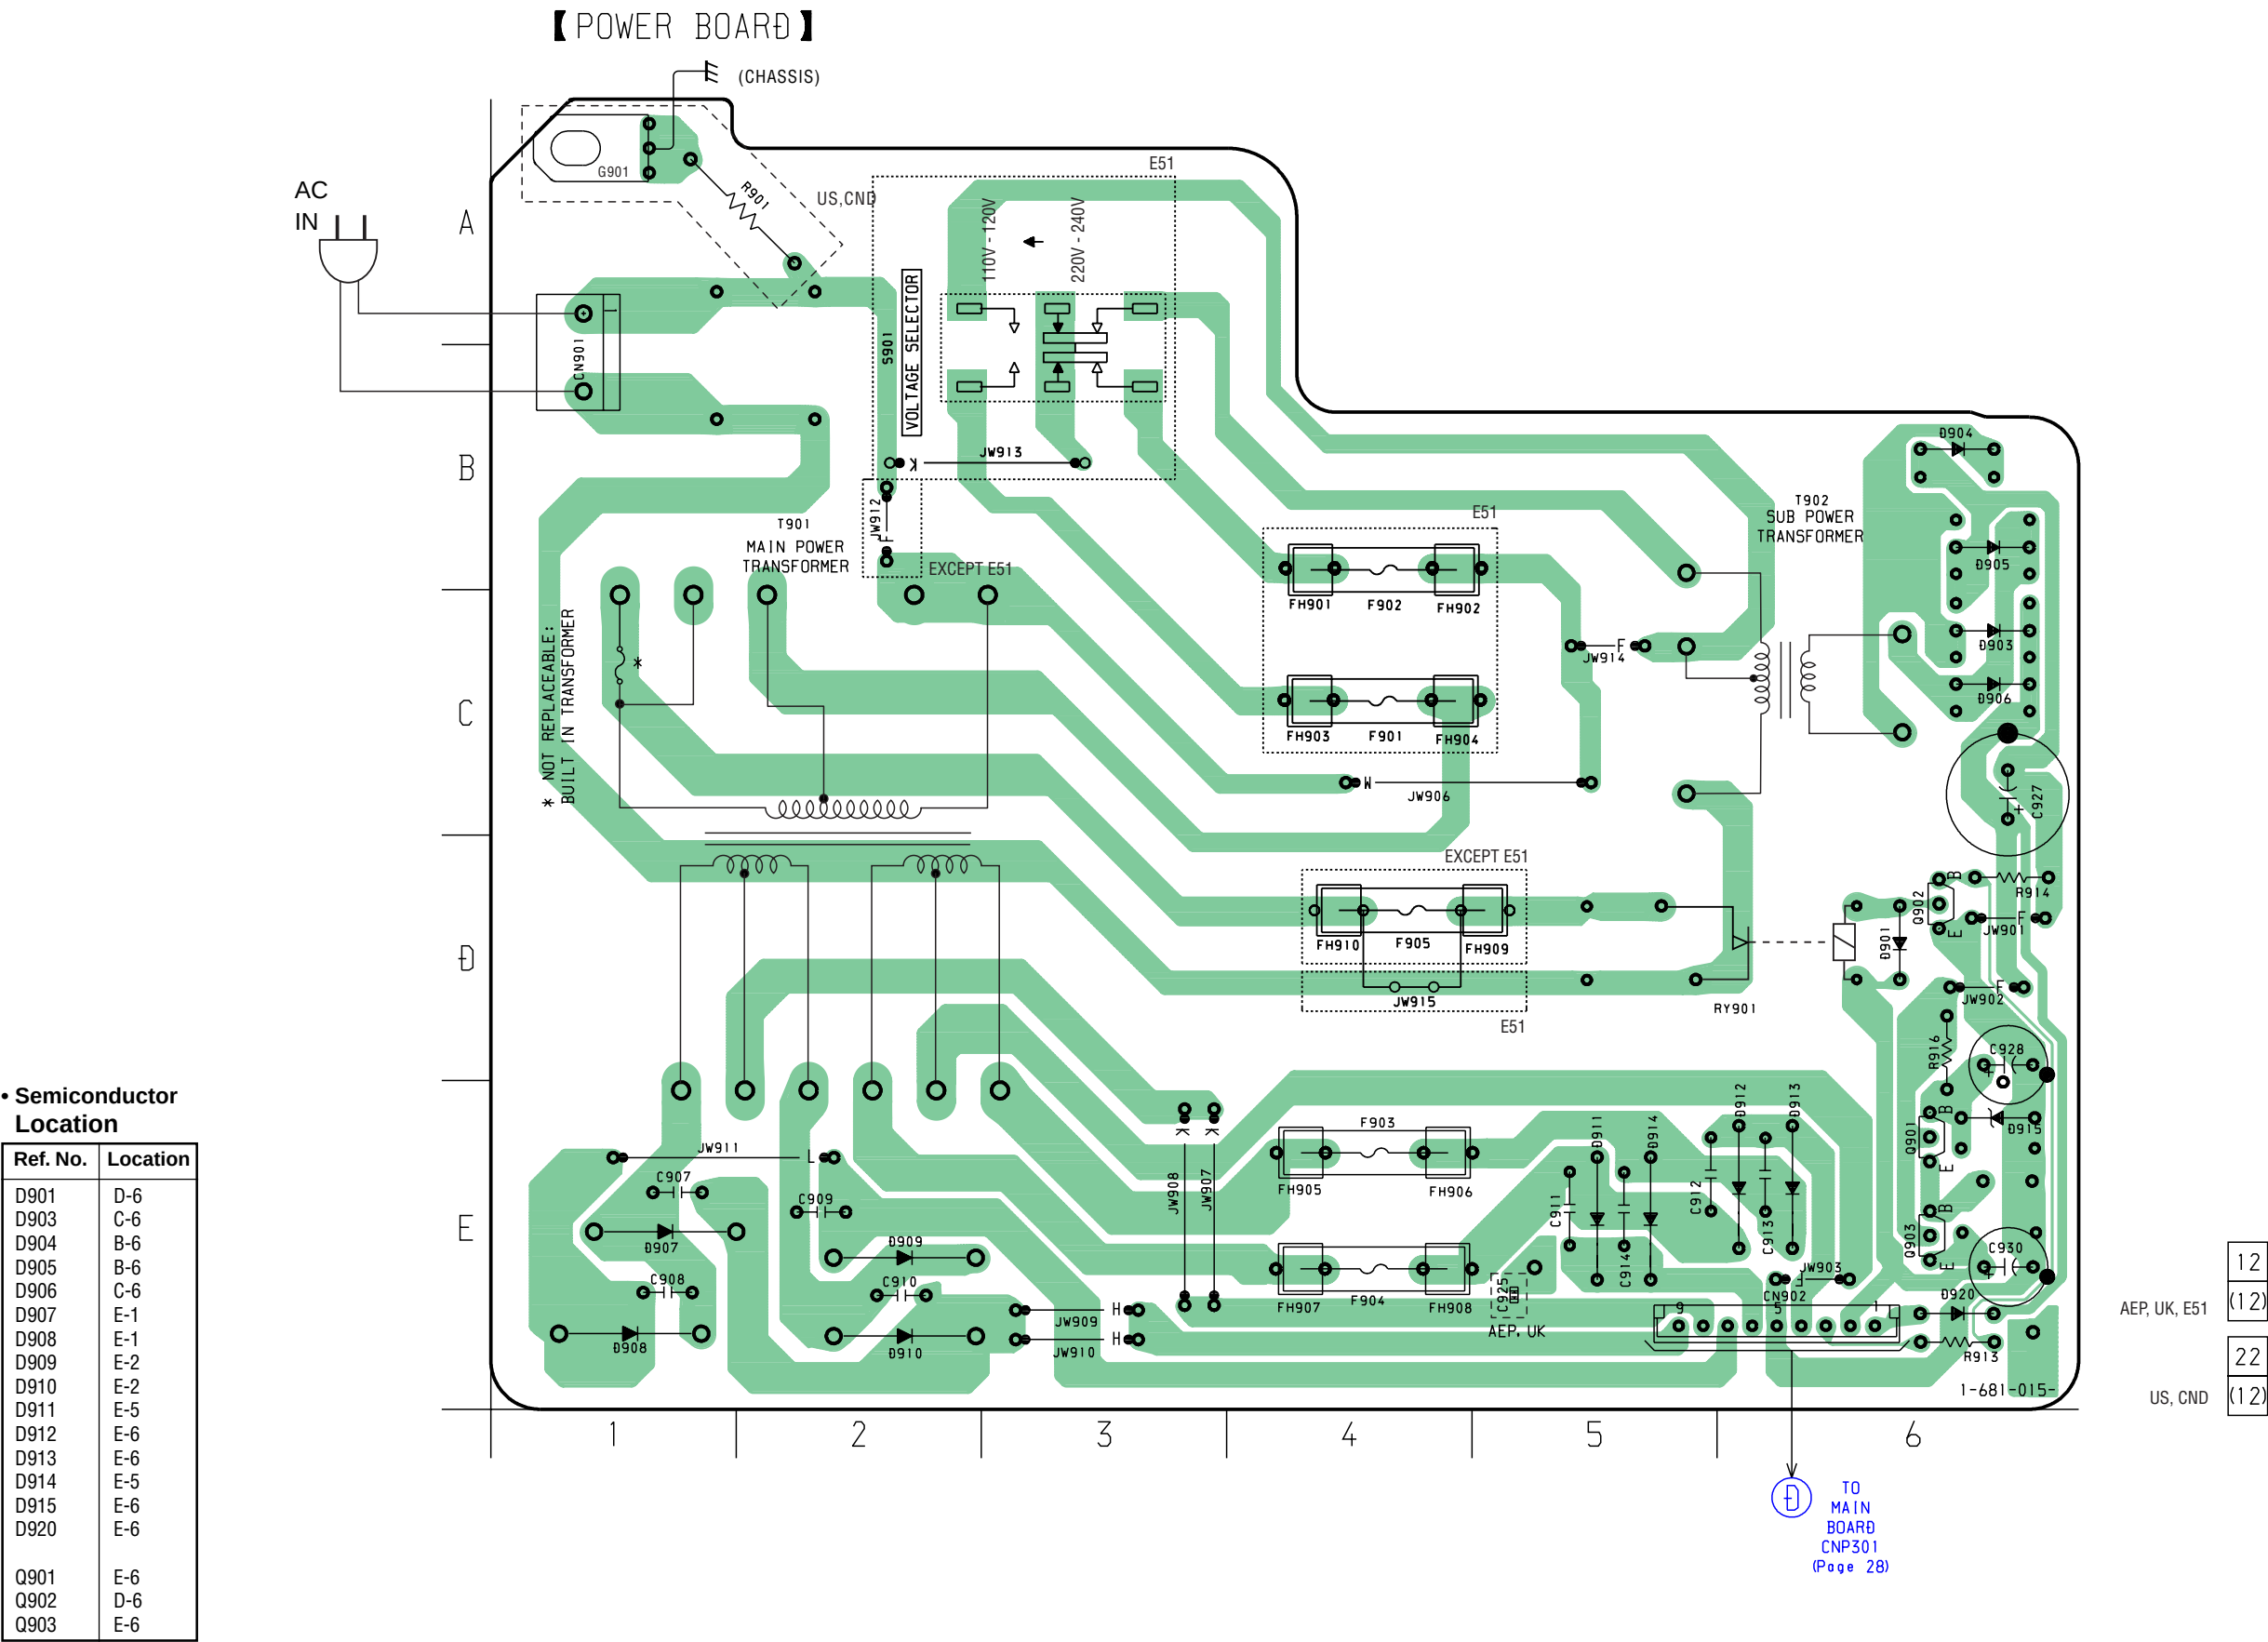


6-17. Schematic Diagram – POWER Board –

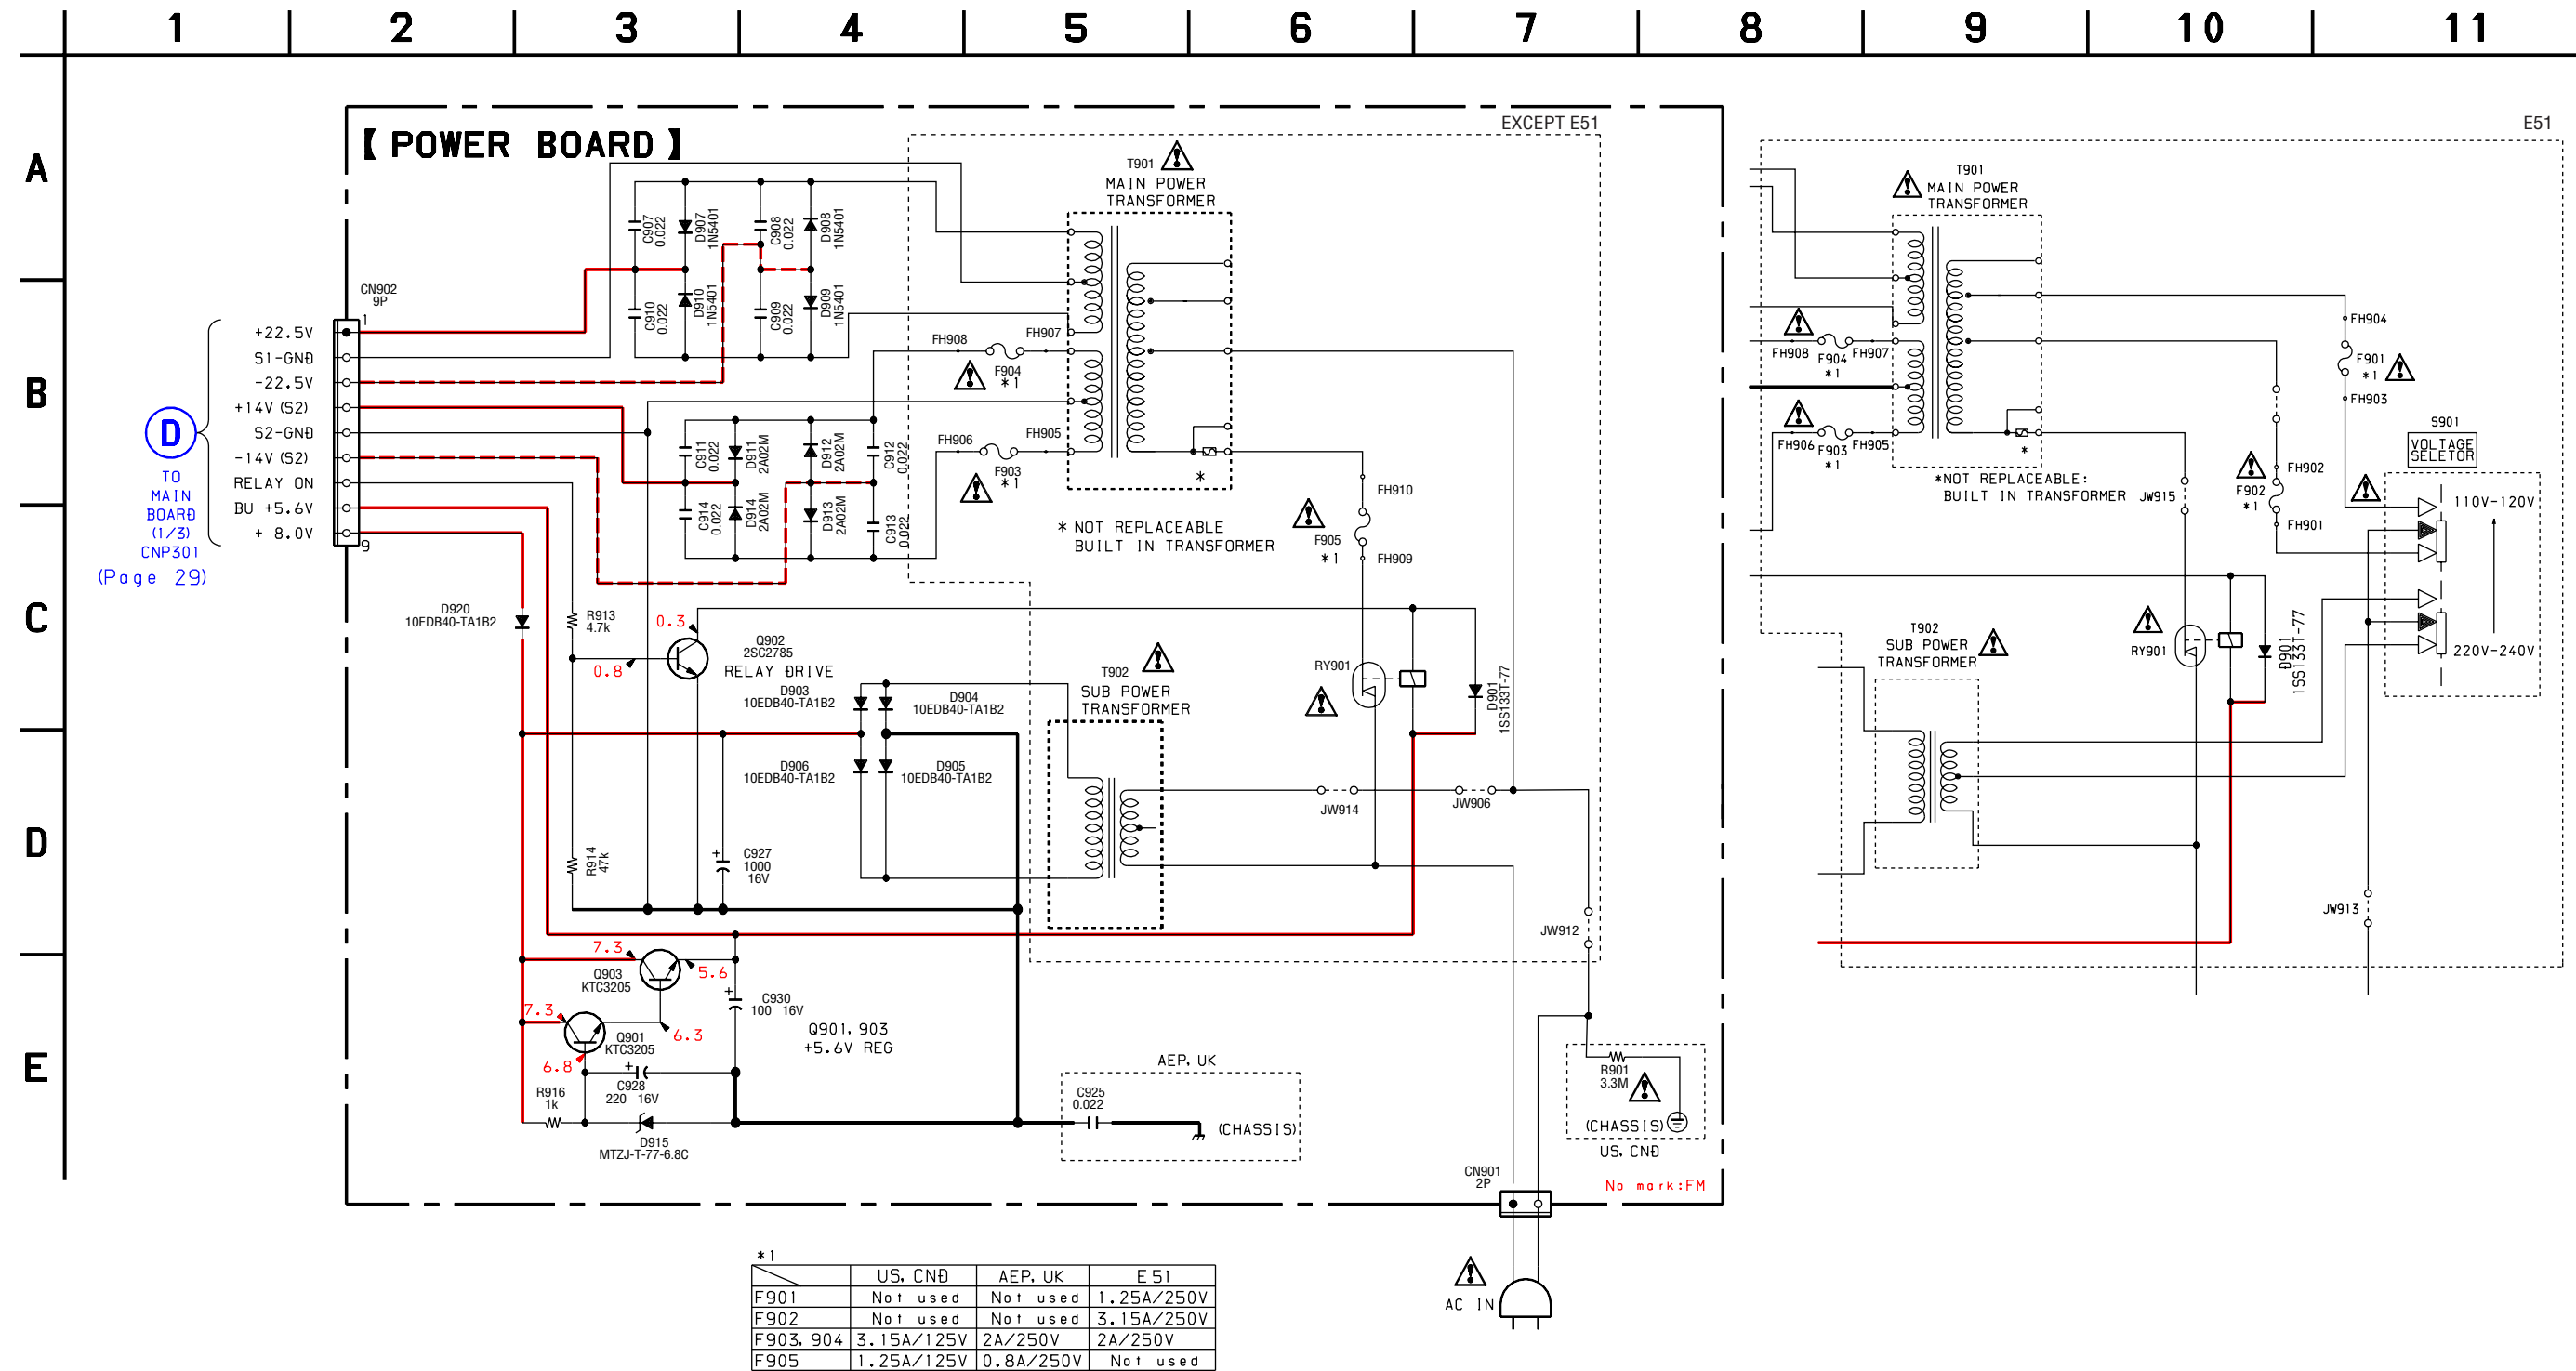

6-18. Printed Wiring Board – LCD Section – • See page 23 for Circuit Boards Location.

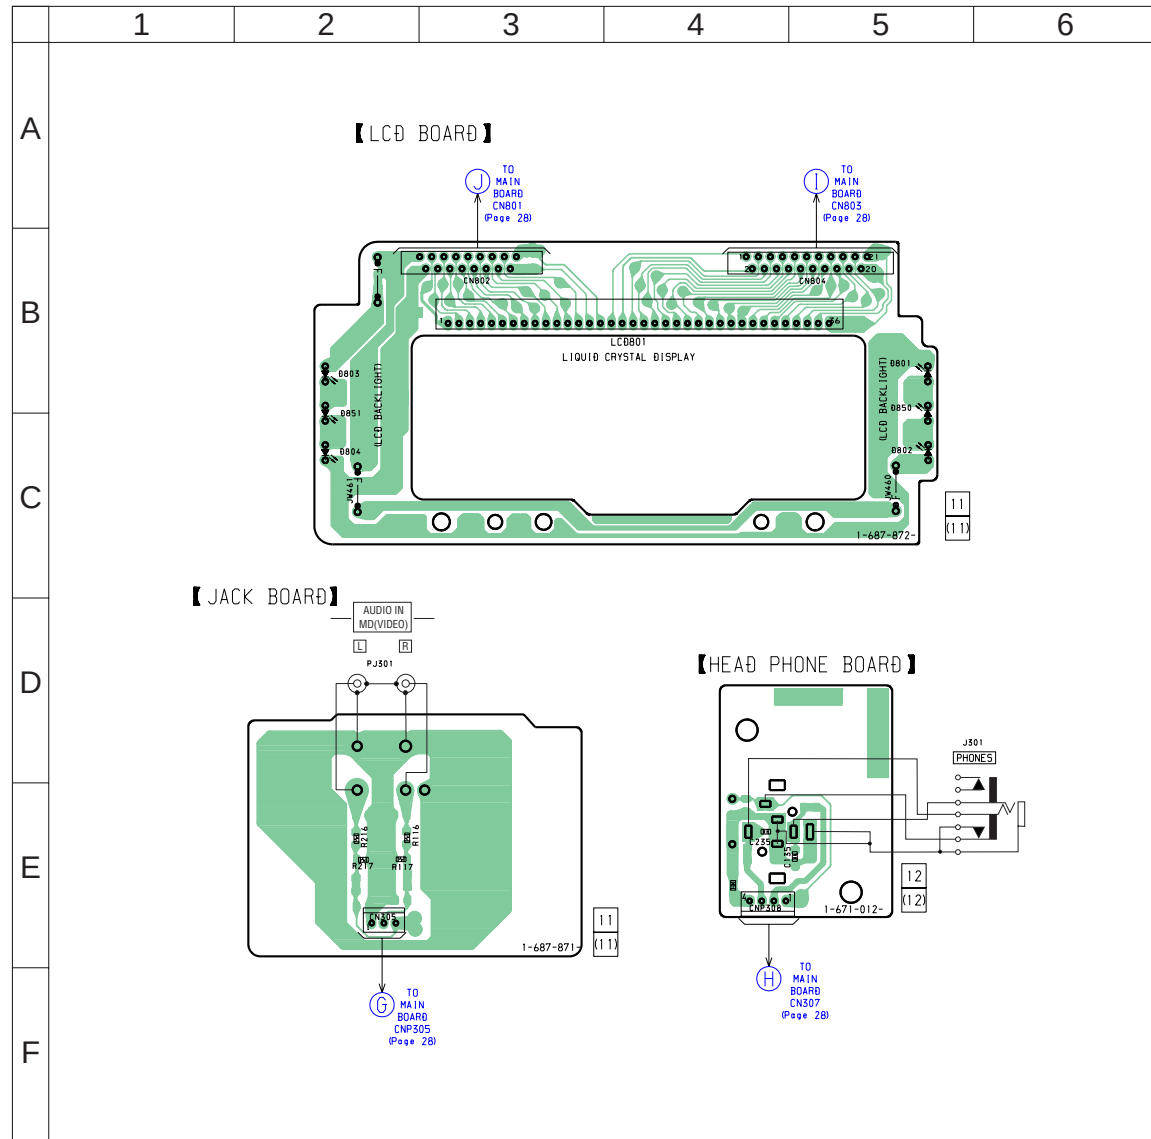

6-19. Schematic Diagram – LCD Section –

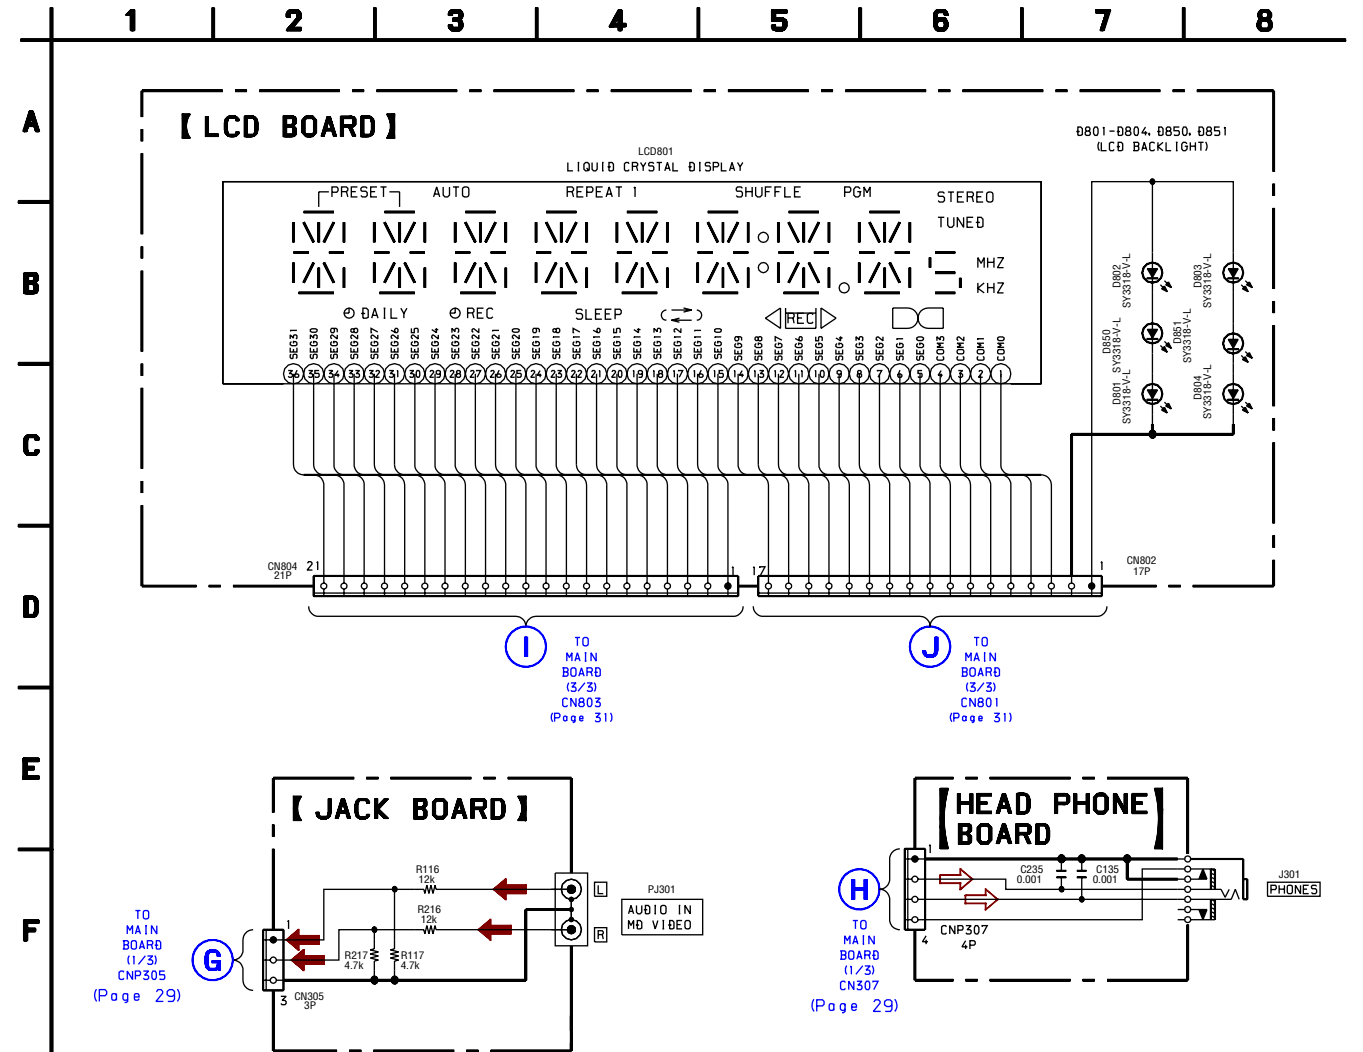

6-20. IC Pin Function Description


• IC601 M30622MGA-A43FP (SYSTEM CONTROLLER) (MAIN Board)

Pin No.	Pin Name	I/O	Description
1	C/D	O	LCD REQ Signal output.
2	C/S	O	LCD command select signal output.
3	AC CUT	I	AC CUT check signal. "L":ON,"H":OFF
4	REMOCON	I	Sircs remote control signal input.
5	SI (LCD)	I	LCD Serial interface signal input.
6	A-HALF	O	Tape A half signal output.
7	CLK (LCD)	O	LCD clock signal output.
8	BYTE	—	Ground terminal.
9	CNVSS	—	Ground terminal.
10	XCIN	I	Sub clock in.
11	XCOUT	O	Sub clock out.
12	RESET	O	System reset in signal output.
13	XOUT	O	Main system clock out.
14	VSS	—	Ground terminal.
15	XIN	I	System reset in signal input.
16	VCC	—	Power supply.
17	NC	—	Not used.
18	RDS CLK	I	RDS clock signal input.
19	SCOR	I	CD Q-data request signal input.
20	A-PLAY	I	Tapu A play signal input
21	B-PLAY	O	Tapu B play signal input
22	REC-PB	I	REC-PB/REC-MUTE signal input.
23	CAP +	O	CAP-MOTOR signal. "H":REV,"L":FED
24	PWM3	O	BU PWM3 signal outout.
25	A-TRG	O	Tape A trigger signal output.
26	PWM2	O	BU PWM2 signal outout.
27	B-TRG	O	Tape B trigger signal output.
28	PWM1	O	BU PWM1 signal output.
29	—	—	IIC SCL
30	—	—	IIC SDA
31	NC	—	Not used.
32	C-SQSO	I	CD SQ data inout.
33	C-SQCL	O	CD SQ clock output.
34	REC-MUTE/BAIS	O	REC MUTE/BAIS signal output, "H":ON,"L":OFF.
35	SENS	I	CD condition signal input.
36	PB A/B	O	Tape PB A/B select signal output.
37	LD ON	O	LD power "H":ON,"L":OFF.
38	CD ON	O	CD power "H":ON,"L":OFF.
39	CD CLK	O	CD clock signal output.
40	LINE MUTE	O	LINE muting ON/OFF signal output.
41	CD DATA	O	CD data signal output.
42	DISC-SNS	I	Detection input signal from DISC SENSOR BOARD.
43	IN SW	I	IN SW signal input.
44	OUT SW	I	OUT SW signal output.
45	TRAY-SENS3	I	CD table detect signal input.
46	TRAY-SENS2	I	CD table detect signal input.
47	TRAY-SENS1	I	CD table detect signal input.
48	LOD POS	O	Loading motor control signal output
49	LOD NEG	O	Loading motor control signal output
50	X-LATCH	O	CD LAT signal output.


Pin No.	Pin Name	I/O	Description
51	X-RST	O	CD reset signal output.
52	AMP-MUTE	O	AMS signal output. “L”:IN,”H”:OUT.
53	B/L CON	O	Back light LED control signal output.
54	AU-MUTE	O	Audio mute signal output. “H”:IN,”L”:OUT.
55	STBY ON	O	Standby relay ON/OFF signal output.
56	VOL CLK	O	VOL CLK signal output.
57	VOL DATA	O	VOL DATA signal output.
58	RDS DATA	I	RDS data signal input.
59	FM ON	O	FM power “H”:ON,”L”:OFF.
60	TUNED	I	TUNED detect signal input. “L”:IN,”H”:OUT.
61	TU DO	I	Tuner data signal input.
62	VCC	—	Power supply.
63	TU CK	O	Tuner clock signal output.
64	VSS	—	Ground terminal.
65	TU D1	O	Tuner data signal output.
66	TU CE	O	Tuner detect signal output.
67	CD LED	O	CD LED control signal output.
68	TU ON	O	Tuner LED signal output.
69	VOL A	I	Volume signal inout from rotary encoder.
70	VOL B	I	Volume signal inout from rotary encoder.
71	TREBLE A	I	Treble signal inout from rotary encoder.
72	TREBLE B	I	Treble signal inout from rotary encoder.
73	BASS A	I	Bass signal inout from rotary encoder.
74	POWER KEY	I	Power ON/OFF signal input.
75	BASS B	I	Bass signal inout from rotary encoder.
76	FUNCTION A	I	Function signal inout from rotary encoder.
77	FUNCTION B	I	Function signal inout from rotary encoder.
78	1DISC/ALL DISC	O	DISC LED signal output.
79	DSG	O	DSG LED control signal output.
80	CD1 PB-A	O	CD1 play LED signal output
81	CD1 PB-B	O	CD1 disc LED signal putput.
82	CD2 PB-A	O	CD2 play LED signal output
83	CD2 PB-B	O	CD2 disc LED signal putput.
84	CD3 PB-A	O	CD3play LED signal output
85	CD3 PB-B	O	CD3 disc LED signal putput.
86	TAPE(A)	O	Tape A function LED signal output
87	REC MUTE	O	REC MUTE ON/OFF signal output.
88	CD-SYNC	O	CD SYNC LED signal output.
89	KEY1	I	Key input signal from function key.
90	KEY2	I	Key input signal from function key.
91	KEY3	I	Key input signal from function key.
92	TAPE(B)	O	Tape B function LED signal output
93	B-SHUT	I	B deck reel pulse signal input.
94	A-SHUT	I	A deck reel pulse signal input.
95	SIMUKE	I	Version select input.
96	AVSS	—	Ground terminal.
97	B-HALF	I	B deck half detect signal input.
98	VRFF	O	Analog reference voltage.
99	AVCC	—	Analog power supply.
100	LVD RST	O	LCD reset signal output.

6-21. IC Block Diagrams


IC101, 201 TDA7296 (MAIN Board)

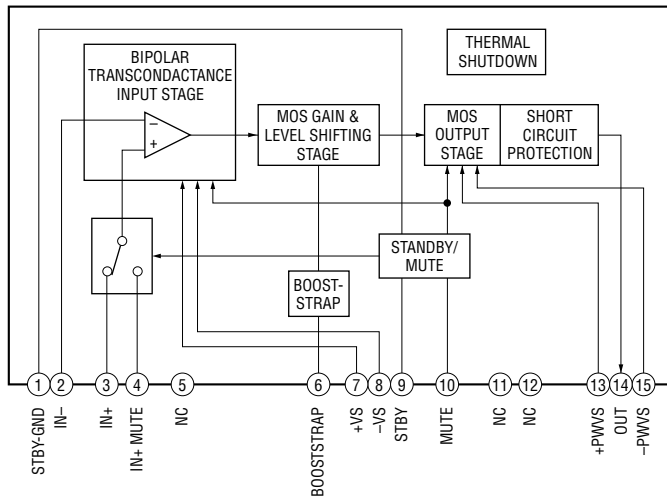


IC603 BU1924AF (MAIN Board)

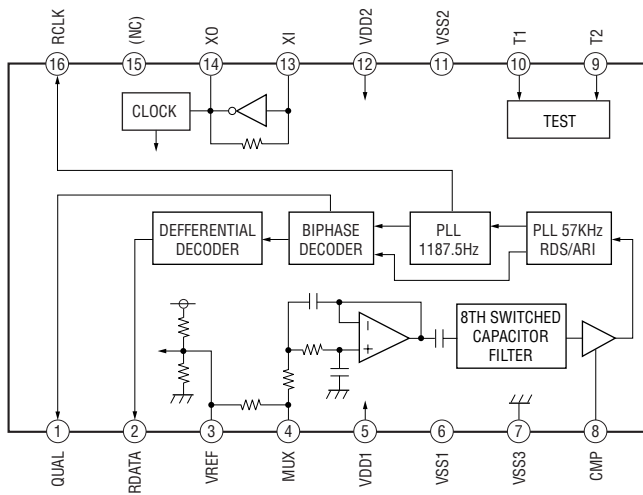


IC701 BA6956AN (DRIVER Board)


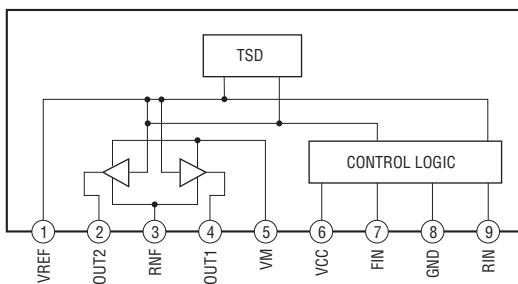


IC401 TA8189N (TC Board)

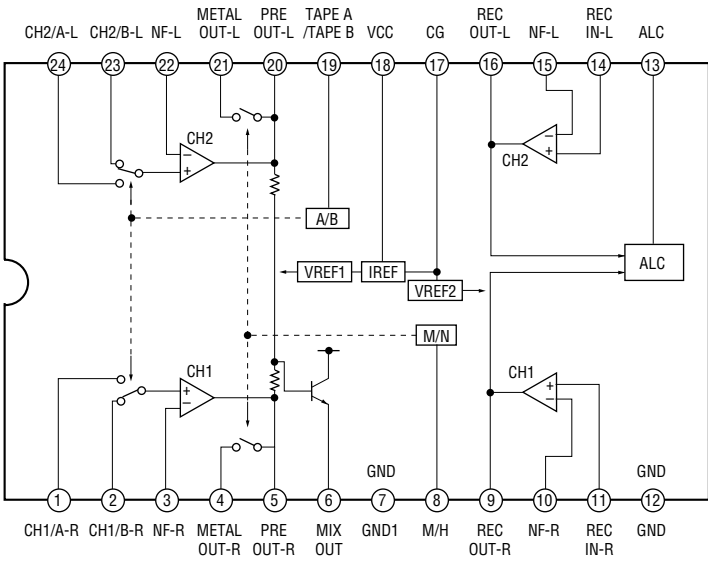

IC101 CXD3017Q (CD Board)

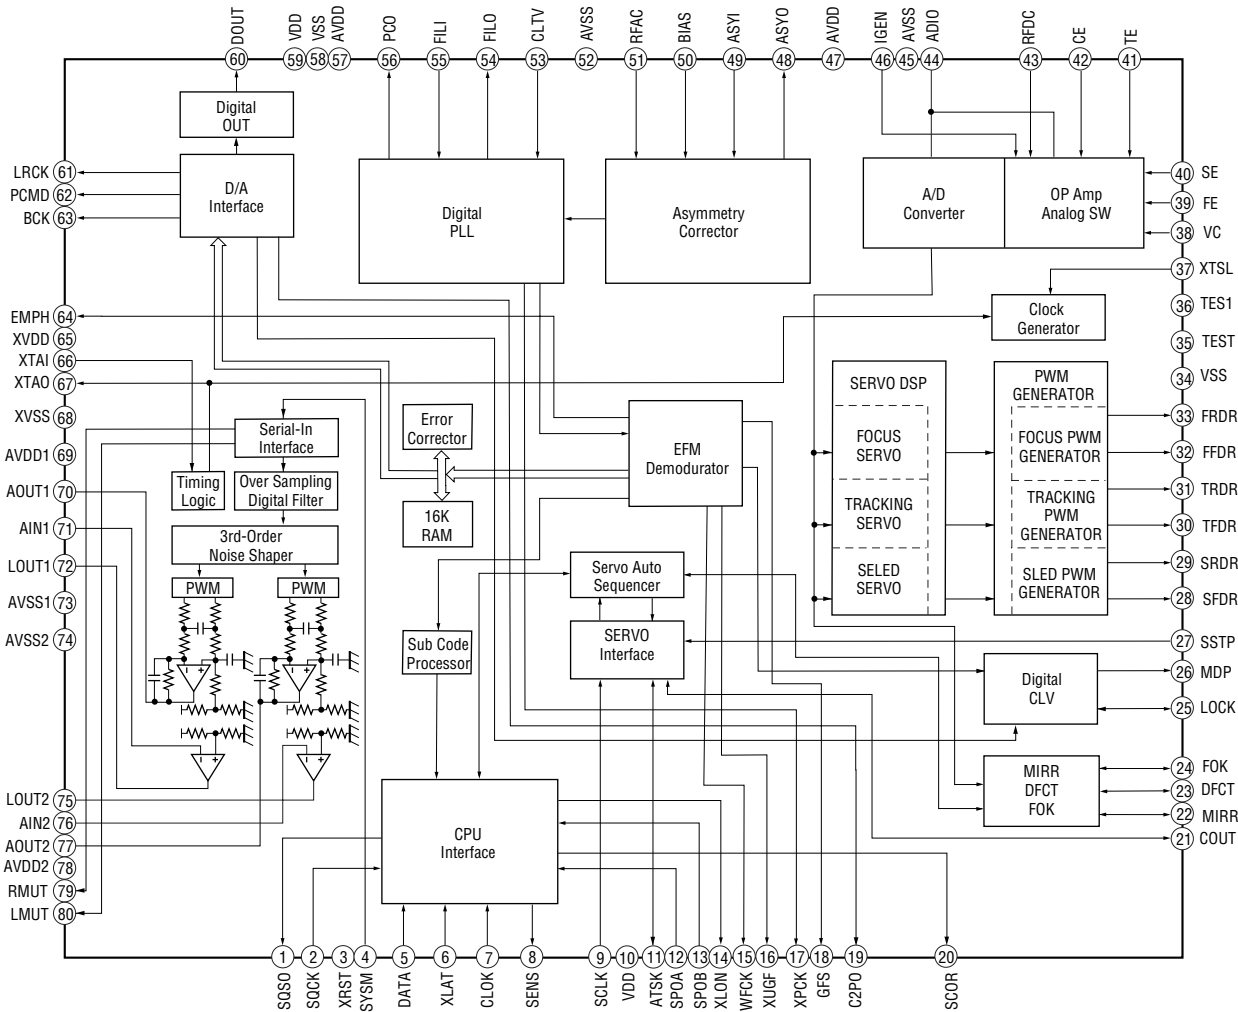

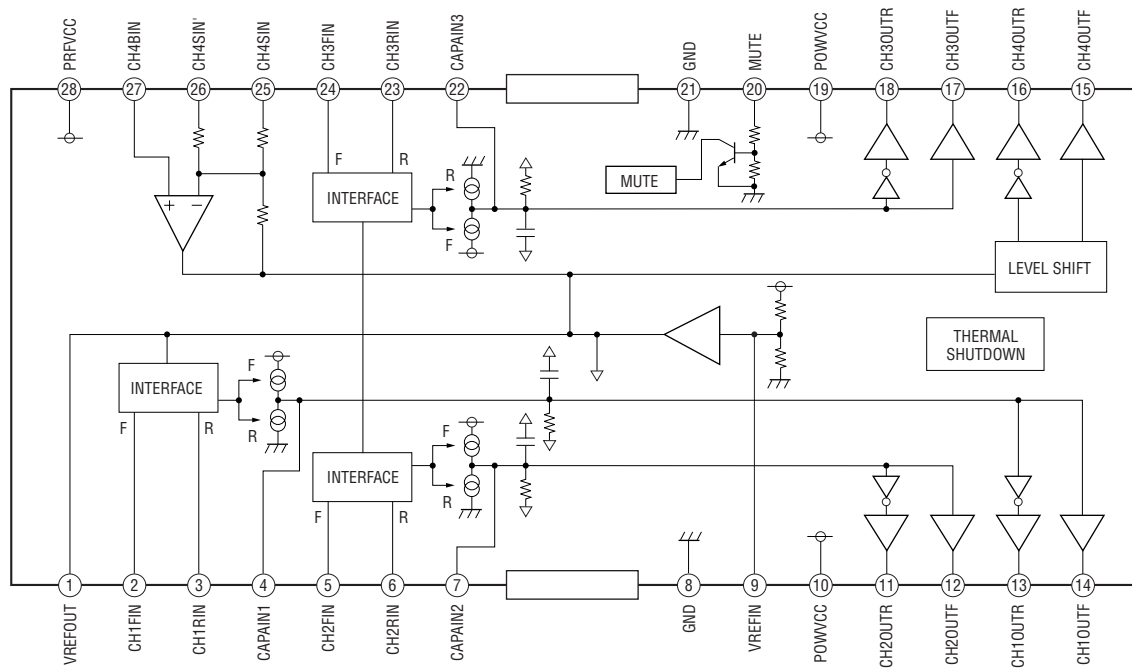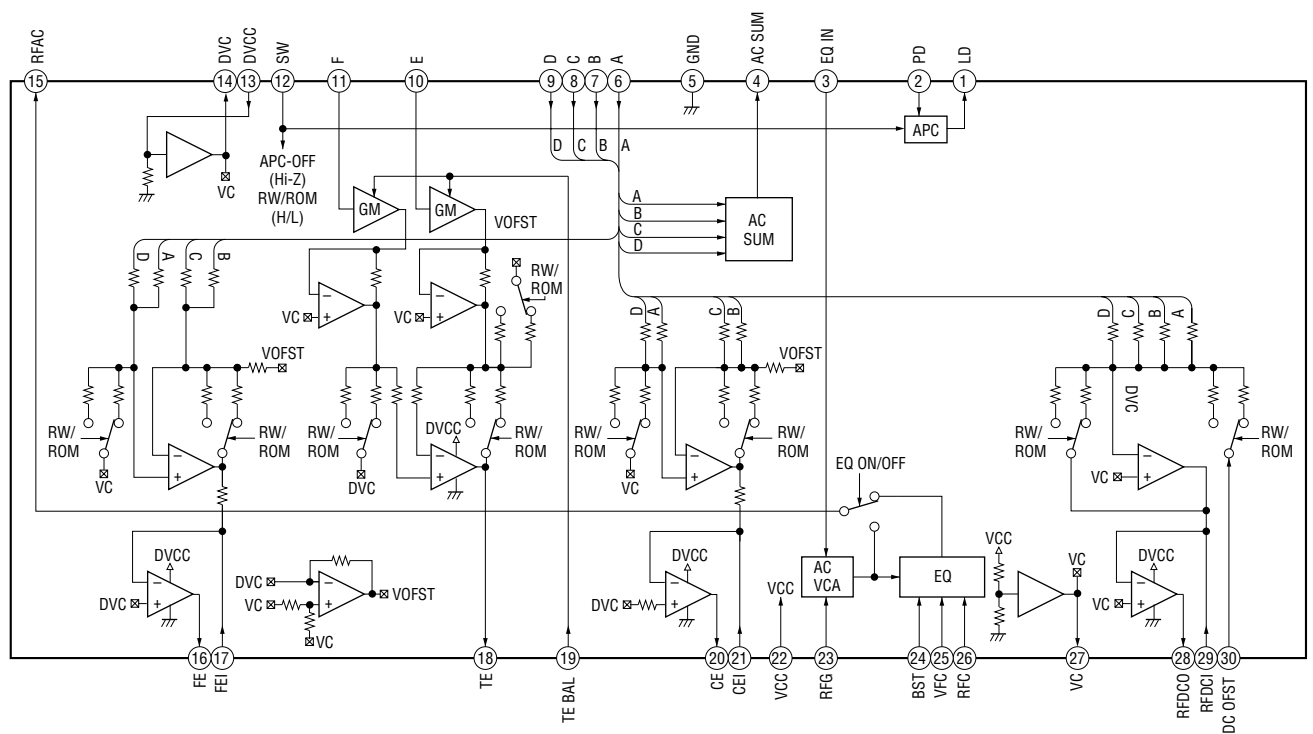IC102 BA5974FP (CD Board)**IC103 CXA2581N (CD Board)**

SECTION 7
EXPLODED VIEWS


- NOTE:
- XX, -X mean standardized parts, so they may have some differences from the original one.
 - Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation
CND : Canadian model
E51 : Chilean and peruvian model

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

7-1. Cover Section

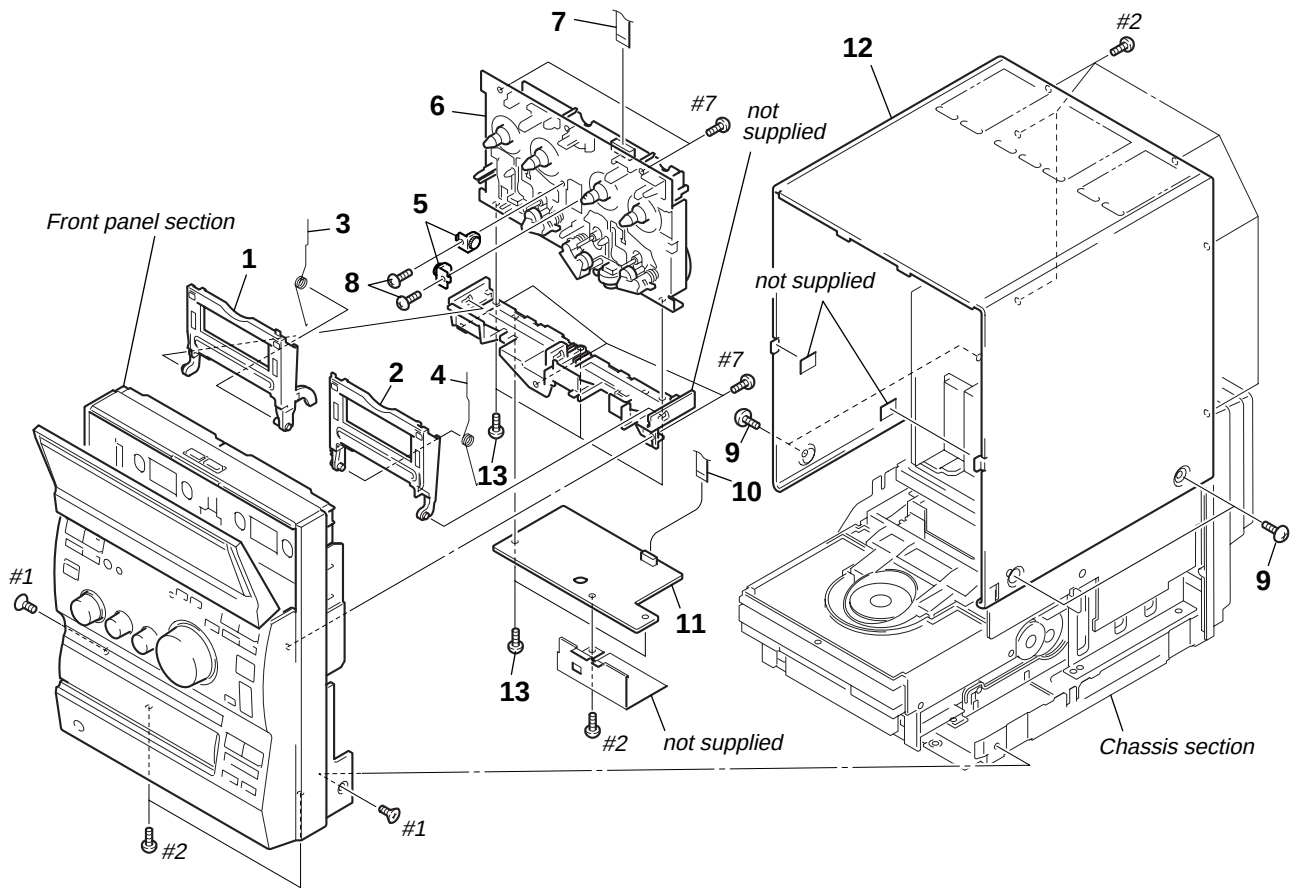


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	X-4952-972-1	HOLDER (A) SUB ASSY, CASSETTE		9	4-221-580-01	SCREW, CASE	
2	X-4952-973-1	HOLDER (B) SUB ASSY, CASSETTE		10	1-757-705-11	CABLE, FLEXIBLE FLAT (11 CORE)	
3	4-229-008-01	SPRING (CASSETTE A)		11	A-2007-972-A	TC BOARD, COMPLETE	
4	4-229-009-01	SPRING (CASSETTE B)		12	4-222-370-21	COVER (UPPER)	
5	4-229-013-11	DAMPER		13	4-229-428-01	SCREW, +BVTP TAPPING	
6	1-796-078-11	DECK, MECH		#1	7-685-245-19	SCREW +KTP 3X6 TYPE2 NON-SLIT	
7	1-757-707-11	CABLE, FLEXIBLE FLAT (11 CORE)		#2	7-685-546-14	SCREW +BTP 3X8 TYPE2 N-S	
8	4-229-015-01	SCREW, +BVTTWH TAPPING		#7	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	

7-2. Front Panel Section

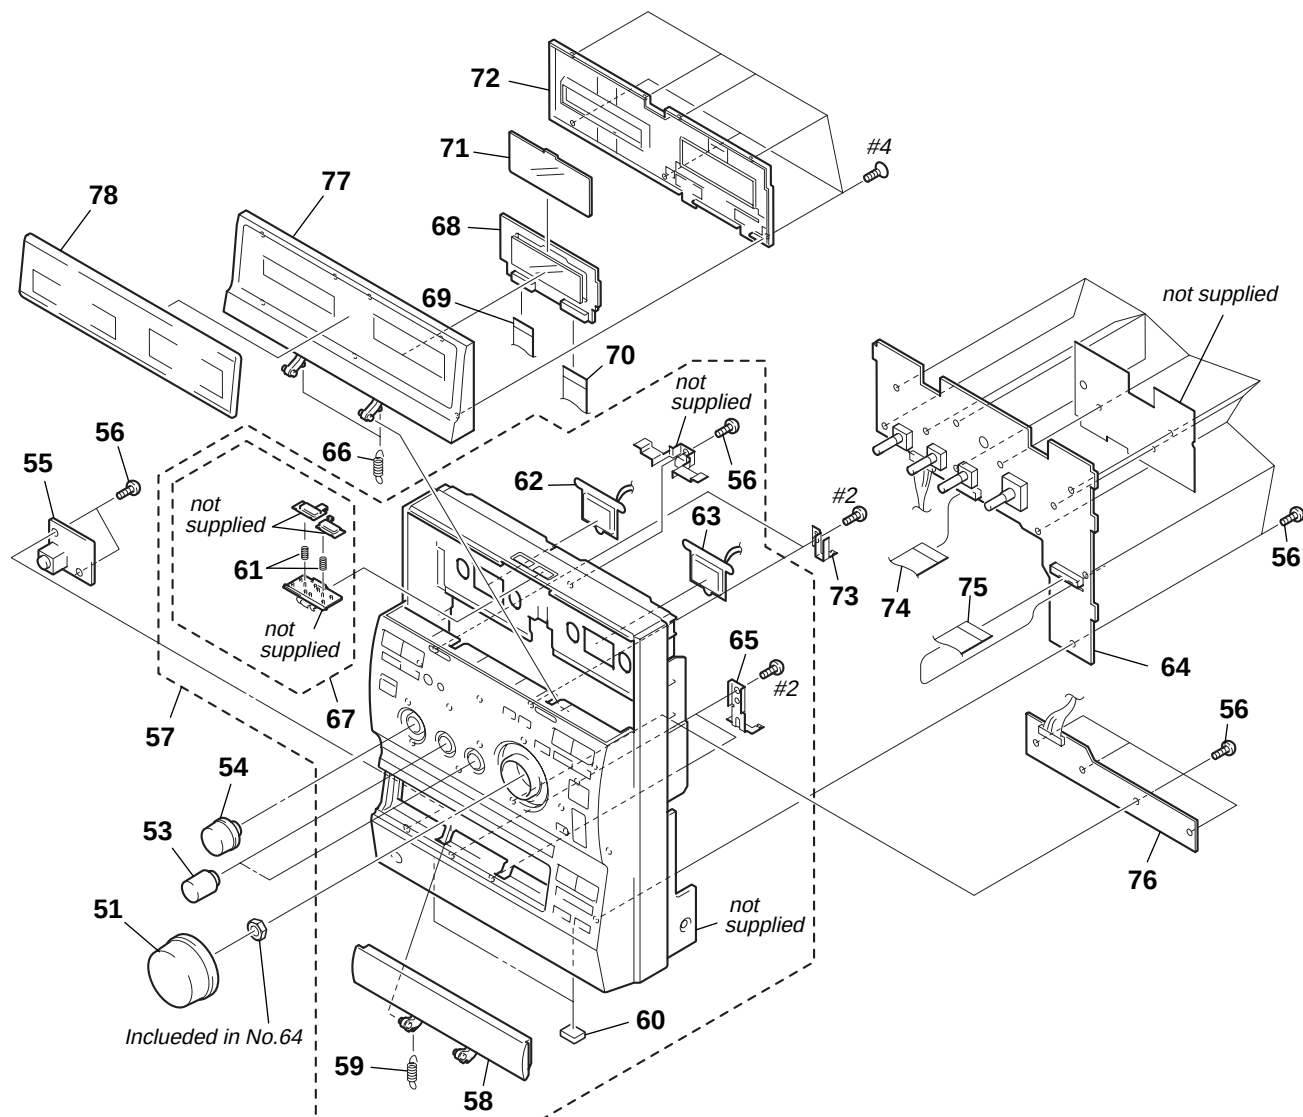

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	4-232-441-01	KNOB (VOL)		65	4-233-478-01	BRACKET (CD LID)	
52	4-226-047-01	NUT, HEXAGON		66	4-233-490-01	SPRING (LID)	
53	4-232-440-01	KNOB (BASS)		67	X-4955-462-1	BUTTON SUB ASSY, EJECT	
54	4-232-439-01	KNOB (SELECT)		68	1-687-872-11	LCD BOARD	
55	1-681-012-12	HEAD PHONE BOARD		69	1-757-702-11	CABLE, FLEXIBLE FLAT (17 CORE)	
56	4-931-757-31	SCREW(DIA.2.6X8)(IT3B),TAPPING		70	1-757-703-11	CABLE, FLEXIBLE FLAT (21 CORE)	
57	X-4955-458-1	PANEL SUB ASSY, FRONT (AEP,UK)		71	4-217-319-11	PLATE, LCD LIGHT	
57	X-4955-582-1	PANEL SUB ASSY, FRONT (US,CND)		72	4-233-475-01	BRACKET (LCD)	
57	X-4955-703-1	PANEL SUB ASSY, FRONT (E51)		73	4-222-394-01	BRACKET (CASSETTE LID A)	
58	4-233-472-11	CD LID		74	1-757-704-11	CABLE, FLEXIBLE FLAT (15 CORE)	
59	4-233-491-01	SPRING (CD LID)		75	1-757-706-11	CABLE, FLEXIBLE FLAT (17 CORE)	
60	4-232-478-01	FOOT		76	1-681-016-12	LED BOARD	
61	4-233-494-01	SPRING (EJECT)		77	4-233-471-11	LID, CASSETTE	
62	1-418-692-32	INDICATOR BLOCK, LED		78	4-233-493-11	WINDOW (CASSETTE)	
63	1-418-693-32	INDICATOR BLOCK, LED		#2	7-685-546-14	SCREW +BTP 3X8 TYPE2 N-S	
64	A-4732-477-A	CONTROL BOARD, COMPLETE		#4	7-685-246-14	SCREW +KTP 3X8 TYPE2 NON-SLIT	

7-3. Chassis Section

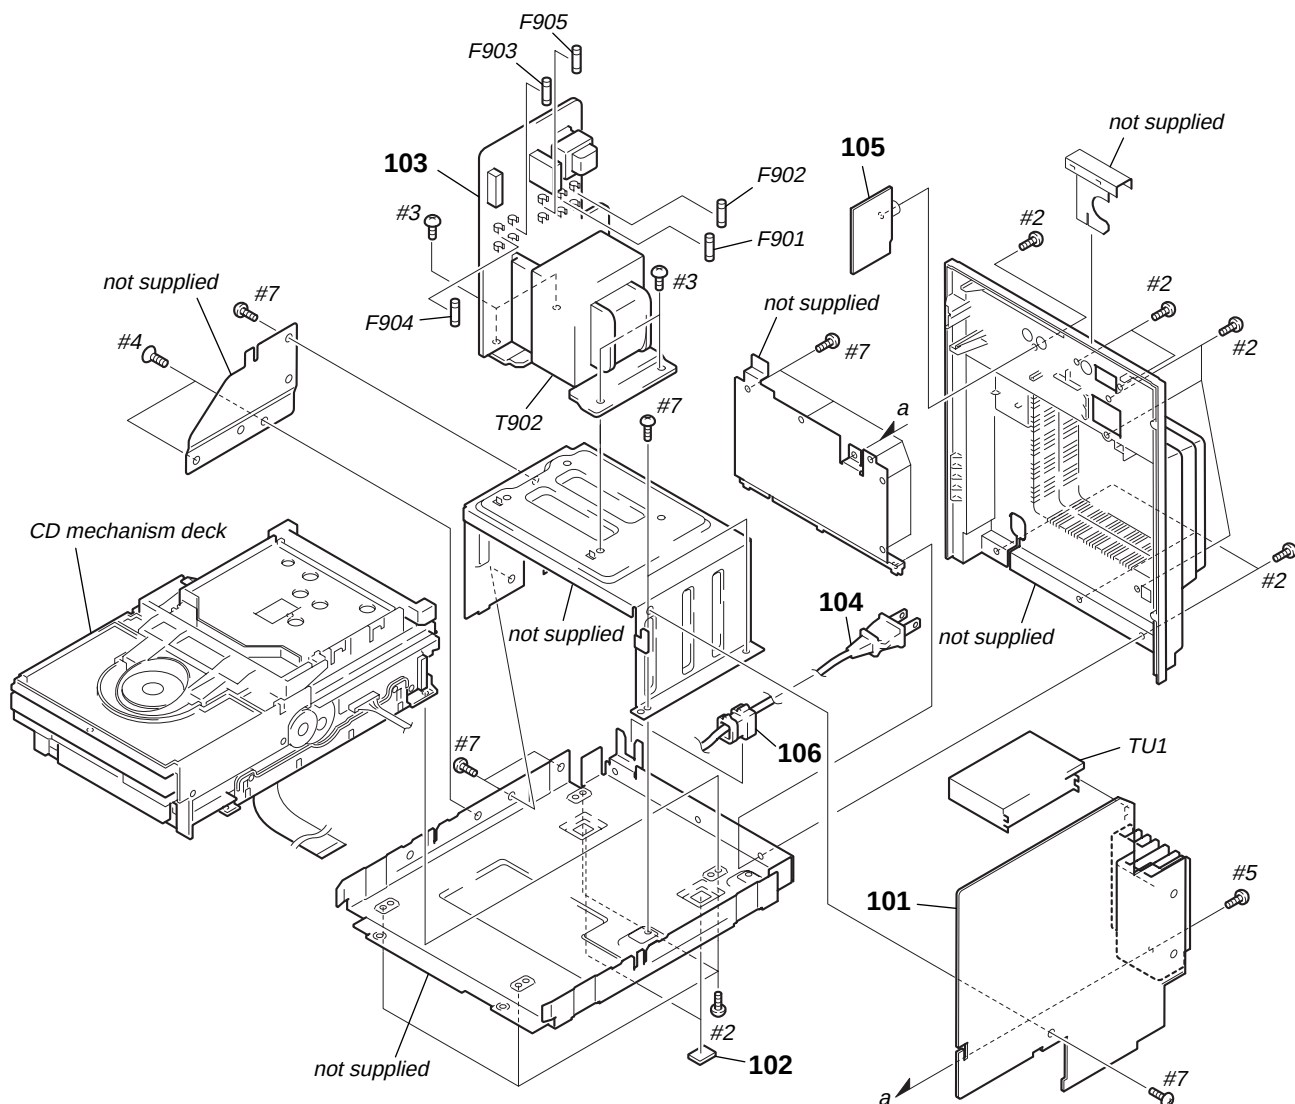


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
101	A-4732-474-A	MAIN BOARD, COMPLETE (AEP,UK)		△ F904	1-576-375-11	FUSE, GLASS TUBE (3.15A/125V) (US,CND)	
101	A-4733-359-A	MAIN BOARD, COMPLETE (US,CND)		△ F905	1-533-464-11	FUSE, GLASS TUBE (DIA.5) (T800mAL/250V)	(AEP,UK)
101	A-4734-564-A	MAIN BOARD, COMPLETE (E51)		△ F905	1-576-374-11	FUSE, GLASS TUBE (1.25A/125V) (US,CND)	
102	4-232-478-01	FOOT		△ T901	1-437-248-21	TRANSFORMER, POWER (MAIN) (AEP,UK)	
103	1-681-015-12	POWER BOARD (AEP,UK,E51)		△ T901	1-437-249-11	TRANSFORMER, POWER (MAIN) (US,CND)	
103	1-681-015-22	POWER BOARD (US,CND)		△ T901	1-437-250-31	TRANSFORMER, POWER (E51)	
△ 104	1-696-169-51	CORD, POWER (AEP,UK,E51)		TU1	A-4476-414-A	TUNER UNIT (AEP,UK)	
△ 104	1-783-531-72	CORD, POWER (US,CND)		TU1	A-4476-415-A	TUNER UNIT (US,CND,E51)	
105	1-687-871-11	JACK BOARD		#2	7-685-546-14	SCREW +BTP 3X8 TYPE2 N-S	
106	4-217-350-11	STOPPER, CORD		#3	7-685-659-14	SCREW +BVTP 4X8 TYPE2 N-S	
△ F901	1-533-466-11	FUSE, GLASS TUBE (T1.25AL/250V) (E51)		#4	7-685-246-14	SCREW +KTP 3X8 TYPE2 NON-SLIT	
△ F902	1-533-464-11	FUSE, GLASS TUBE (T800mAL/250V) (E51)		#5	7-685-648-79	SCREW +BVTP 3X12 TYPE2 N-S	
△ F903	1-533-468-11	FUSE, GLASS TUBE (DIA.5) (T2AL/250V)	(AEP,UK,E51)	#7	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
△ F903	1-576-375-11	FUSE, GLASS TUBE (3.15A/125V) (US,CND)					
△ F904	1-533-468-11	FUSE, GLASS TUBE (DIA.5) (T2AL/250V)	(AEP,UK,E51)				

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

7-4. CD Mechanism Deck-1

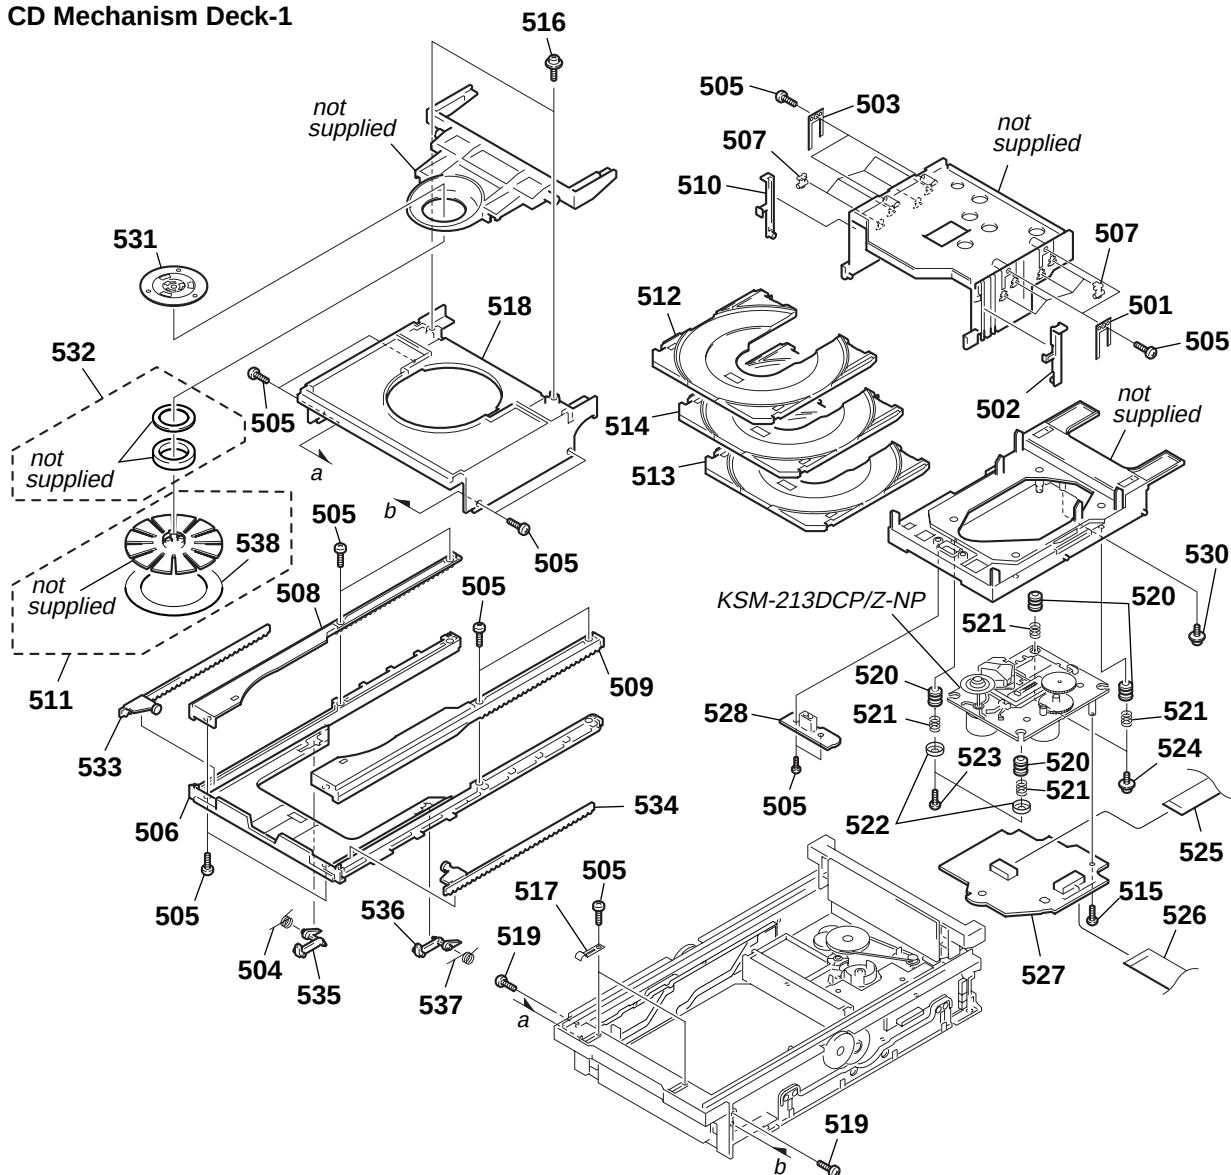


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
501	4-228-980-01	SPRING (STOCKER), LEAF		520	4-227-549-11	INSULATOR	
502	4-228-964-01	SLIDER (STOCKER.R)		521	4-227-045-11	SPRING (INSULATOR), COIL	
503	4-234-423-01	SPRING (STOCKER L), LEAF		522	4-231-151-01	STOPPER (BU)	
504	4-228-995-01	SPRING (L), TORSION		523	4-931-757-31	SCREW (DIA.2.6X8)(IT3B), TAPPING	
505	4-218-253-31	SCREW (M2.6), +BTTP		524	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING	
506	4-228-972-02	TRAY (MAIN)		525	1-757-055-11	WIRE, PARALLEL (FFC) (16 CORE)	
507	4-228-981-02	STOPPER (TRAY)		526	1-757-708-11	CABLE, FLEXIBLE FLAT (21 CORE)	
508	4-228-975-02	COVER (TRAY.L)		527	A-4725-595-A	CD BOARD, COMPLETE	
509	4-228-978-02	COVER (TRAY.R)		528	1-678-463-11	DISK SENSOR BOARD	
510	4-228-963-01	SLIDER (STOCKER.L)		530	4-227-899-01	SCREW (DIA. 12), FROATING	
511	X-4953-282-1	PULLEY (A) ASSY, CHUCKING		531	4-231-102-01	PULLEY (213B), CHUCKING	
512	4-228-970-22	TRAY (SUB)		532	1-471-035-11	MAGNET ASSY	
513	4-228-970-12	TRAY (SUB)		533	4-228-986-02	RACK (TRAY.L)	
514	4-228-970-02	TRAY (SUB)		534	4-228-987-02	RACK (TRAY.R)	
515	7-685-533-19	SCREW +BTP 2.6X6 TYPE2 N-S		535	4-228-990-03	LEVER (SUB.L)	
516	4-218-254-21	SCREW (M2.6), +PTPWH		536	4-228-991-03	LEVER (SUB.R)	
517	4-228-969-02	SPRING (TABLE), LEAF		537	4-228-996-01	SPRING (R), TORSION	
518	4-228-974-02	RACK (CENTER)		538	4-231-777-02	SHEET (KH2)	
519	4-218-253-71	SCREW (M2.6), +BTTP					

7-5. CD Mechanism Deck-2

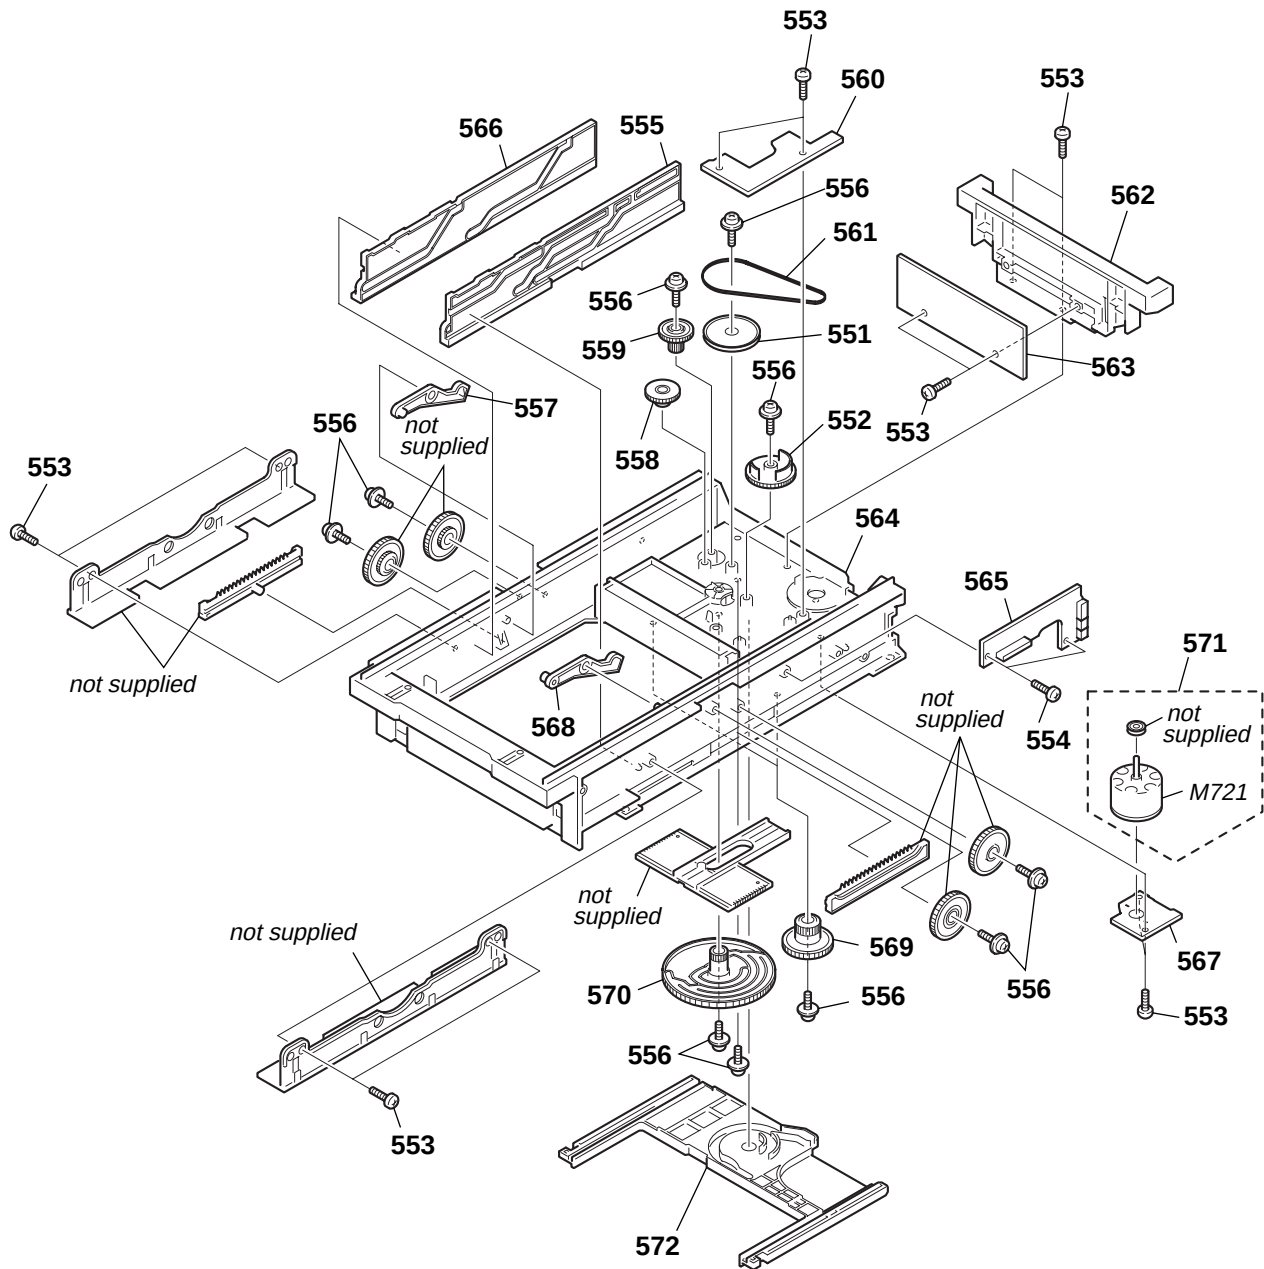

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
551	4-229-003-01	PULLEY		563	1-678-457-11	TRAY SENSOR BOARD	
552	4-228-998-01	GEAR (DETECTION)		564	4-228-988-01	CHASSIS	
553	4-218-253-31	SCREW (M2.6), +BTTP		565	1-678-460-11	DRIVER BOARD	
554	4-218-253-41	SCREW (M2.6), +BTTP		566	4-228-976-01	SLIDER (BU.R)	
555	4-228-977-01	SLIDER (BU.L)		567	1-678-461-11	MOTOR BOARD	
556	4-218-254-21	SCREW (M2.6), +PTPWH		568	4-229-000-02	LEVER (MAIN.R)	
557	4-228-999-02	LEVER (MAIN.L)		569	4-229-002-02	GEAR (SLIDER)	
558	4-228-985-01	GEAR (PULLEY)		570	4-228-971-01	CAM	
559	4-228-997-02	GEAR (CAM)		571	A-4722-173-A	MOTOR ASSY	
560	1-678-462-11	IN OUT SW BOARD		572	4-228-993-03	SLIDER (LOADING)	
561	4-228-968-02	BELT		M721	1-541-632-12	MOTOR, DC (ELEVATOR)	
562	4-229-001-01	HOLDER (SENSOR)					

7-6. KSM-213D

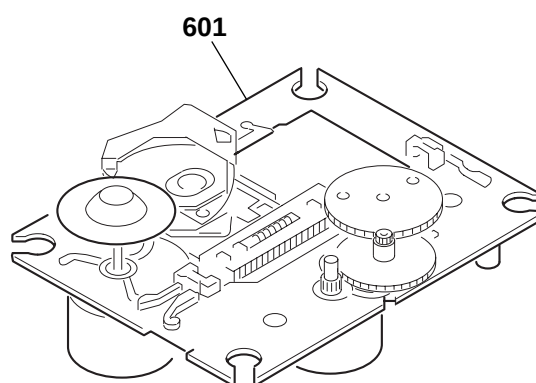

Ref. No.	Part No.	Description	Remarks
△ 601	A-4735-357-A	BASE ASSY, OP (KSM-213D)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

SECTION 8

ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
uF: µF
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- COILS
uH: µH
- SEMICONDUCTORS
In each case, u: µ, for example:
uA..., µA..., uPA..., µPA...,
uPB..., µPB..., uPC..., µPC...,
uPD..., µPD...
- Abbreviation
CND : Canadian model
E51 : Chilean and peruvian model

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	A-4725-595-A	CD BOARD, COMPLETE *****					
		< CAPACITOR >					
C101	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V	C183	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C102	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V	C184	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C103	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C185	1-125-891-11	CERAMIC CHIP	0.47uF 10.00% 10V
C104	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C190	1-115-156-11	CERAMIC CHIP	1uF 10V
C108	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V	C191	1-104-665-11	ELECT	100uF 20.00% 16V
C109	1-162-965-11	CERAMIC CHIP	0.0015uF 10% 50V	C192	1-126-382-11	ELECT	100uF 20.00% 16V
C110	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V	C193	1-126-382-11	ELECT	100uF 20.00% 16V
C111	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C194	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C112	1-115-156-11	CERAMIC CHIP	1uF 10V	C196	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C114	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C197	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V
C116	1-126-382-11	ELECT	100uF 20.00% 16V	C198	1-104-665-11	ELECT	100uF 20.00% 16V
C117	1-126-382-11	ELECT	100uF 20.00% 16V			< CONNECTOR >	
C118	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	CN101	1-569-914-11	SOCKET, CONNECTOR 21P	
C121	1-164-360-11	CERAMIC CHIP	0.1uF 16V	CN102	1-785-953-11	CONNECTOR, FFC/FPC	
C122	1-104-665-11	ELECT	100uF 20.00% 16V			< DIODE >	
C123	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D101	8-719-056-77	DIODE UDZ-TE-17-3.9B	
C124	1-125-891-11	CERAMIC CHIP	0.47uF 10.00% 10V			< FERRITE BEAD >	
C125	1-164-360-11	CERAMIC CHIP	0.1uF 16V	FB101	1-469-144-21	FERRITE 0UH	
C126	1-164-360-11	CERAMIC CHIP	0.1uF 16V	FB103	1-469-144-21	FERRITE 0UH	
C127	1-126-382-11	ELECT	100uF 20.00% 16V			< IC >	
C130	1-164-360-11	CERAMIC CHIP	0.1uF 16V	IC101	8-752-402-31	IC CXD3017Q	
C131	1-104-665-11	ELECT	100uF 20.00% 16V	IC102	8-759-549-28	IC BA5974FP-E2	
C133	1-162-921-11	CERAMIC CHIP	33PF 5% 50V	IC103	8-752-089-74	IC CXA2581N-T4	
C140	1-115-156-11	CERAMIC CHIP	1uF 10V			< JUMPER RESISTOR >	
C143	1-164-360-11	CERAMIC CHIP	0.1uF 16V	JR101	1-216-864-11	METAL CHIP 0 5% 1/16W	
C145	1-164-360-11	CERAMIC CHIP	0.1uF 16V			< TRANSISTOR >	
C146	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V	Q101	8-729-049-31	TRANSISTOR 2SB710A-RTX	
C150	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V	Q102	8-729-920-85	TRANSISTOR 2SD1664-T100-QR	
C150	1-162-927-11	CERAMIC CHIP	100PF 5% 50V (US,CND)			< RESISTOR >	
C153	1-164-360-11	CERAMIC CHIP	0.1uF 16V (AEP,UK)	R101	1-216-821-11	METAL CHIP 1K 5% 1/16W (US,CND)	
C159	1-162-969-11	CERAMIC CHIP	0.0068uF 10% 25V	R102	1-216-845-11	METAL CHIP 100K 5% 1/16W	
C162	1-126-382-11	ELECT	100uF 20.00% 16V	R103	1-216-835-11	METAL CHIP 15K 5% 1/16W	
C163	1-104-665-11	ELECT	100uF 20.00% 16V	R104	1-216-839-11	METAL CHIP 33K 5% 1/16W	
C165	1-164-360-11	CERAMIC CHIP	0.1uF 16V	R106	1-216-821-11	METAL CHIP 1K 5% 1/16W	
C167	1-162-920-11	CERAMIC CHIP	27PF 5% 50V				
C168	1-162-919-11	CERAMIC CHIP	22PF 5% 50V				
C171	1-115-412-11	CERAMIC CHIP	680PF 5.00% 25V				
C172	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
C181	1-115-412-11	CERAMIC CHIP	680PF 5.00% 25V				
C182	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				

CD

CONTROL

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R107	1-216-833-11	METAL CHIP	10K	5%	1/16W			< CONNECTOR >			
R108	1-216-827-11	METAL CHIP	3.3K	5%	1/16W						
					(US,CND)	CN807	1-568-834-11	SOCKET, CONNECTOR 15P			
R109	1-216-857-11	METAL CHIP	1M	5%	1/16W	* CN808	1-569-934-11	SOCKET, CONNECTOR 17P			
R111	1-216-846-11	METAL CHIP	120K	5%	1/16W						
R114	1-218-745-11	METAL CHIP	160K	5%	1/10W			< DIODE >			
R116	1-216-797-11	METAL CHIP	10	5%	1/16W	D814	6-500-549-01	DIODE LTL1WKKSE-002A (CD■)			
R117	1-216-821-11	METAL CHIP	1K	5%	1/16W	D815	6-500-549-01	DIODE LTL1WKKSE-002A (CD▶■)			
R118	1-216-809-11	METAL CHIP	100	5%	1/16W	D816	6-500-549-01	DIODE LTL1WKKSE-002A (TUNER BAND)			
R119	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	D817	6-500-549-01	DIODE LTL1WKKSE-002A (TUNER BAND)			
R120	1-216-835-11	METAL CHIP	15K	5%	1/16W	D818	6-500-549-01	DIODE LTL1WKKSE-002A (DSG)			
R122	1-216-845-11	METAL CHIP	100K	5%	1/16W	D820	6-500-548-01	DIODE LTL-816HR-004A (STANDBY I/⏻)			
R123	1-216-833-11	METAL CHIP	10K	5%	1/16W	D823	6-500-548-01	DIODE LTL-816HR-004A (CD SYNC)			
R124	1-216-845-11	METAL CHIP	100K	5%	1/16W	D828	6-500-549-01	DIODE LTL1WKKSE-002A (TAPE A ▶)			
R131	1-216-813-11	METAL CHIP	220	5%	1/16W	D829	6-500-549-01	DIODE LTL1WKKSE-002A (TAPE A ■)			
R143	1-216-836-11	METAL CHIP	18K	5%	1/16W	D830	6-500-549-01	DIODE LTL1WKKSE-002A (TAPE B ◀▶)			
R144	1-216-836-11	METAL CHIP	18K	5%	1/16W	D831	6-500-549-01	DIODE LTL1WKKSE-002A (TAPE B ■)			
R147	1-216-828-11	METAL CHIP	3.9K	5%	1/16W	D833	6-500-548-01	DIODE LTL-816HR-004A (1 DISC)			
R148	1-216-797-11	METAL CHIP	10	5%	1/16W						
R149	1-216-797-11	METAL CHIP	10	5%	1/16W			< IC >			
R150	1-216-833-11	METAL CHIP	10K	5%	1/16W						
						IC605	8-759-827-70	IC NJL64H400A-1 (■)			
R151	1-216-845-11	METAL CHIP	100K	5%	1/16W						
R158	1-216-837-11	METAL CHIP	22K	5%	1/16W			< JUMPER RESISTOR >			
R159	1-216-837-11	METAL CHIP	22K	5%	1/16W						
R162	1-216-847-11	METAL CHIP	150K	5%	1/16W	JR801	1-216-295-91	SHORT CHIP	0		
R171	1-216-837-11	METAL CHIP	22K	5%	1/16W	JR802	1-216-295-91	SHORT CHIP	0		
						JR803	1-216-295-91	SHORT CHIP	0		
R172	1-216-837-11	METAL CHIP	22K	5%	1/16W	JR804	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R173	1-216-837-11	METAL CHIP	22K	5%	1/16W						
R181	1-216-837-11	METAL CHIP	22K	5%	1/16W			< COIL >			
R182	1-216-837-11	METAL CHIP	22K	5%	1/16W						
R183	1-216-837-11	METAL CHIP	22K	5%	1/16W	L802	1-414-142-11	INDUCTOR	1uH		
R190	1-216-813-11	METAL CHIP	220	5%	1/16W			< TRANSISTOR >			
R191	1-216-839-11	METAL CHIP	33K	5%	1/16W						
R192	1-216-839-11	METAL CHIP	33K	5%	1/16W	Q815	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
R193	1-216-846-11	METAL CHIP	120K	5%	1/16W	Q816	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
R194	1-216-845-11	METAL CHIP	100K	5%	1/16W	Q817	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
						Q818	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
R195	1-216-853-11	METAL CHIP	470K	5%	1/16W	Q819	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
R196	1-216-825-11	METAL CHIP	2.2K	5%	1/16W						
R197	1-216-821-11	METAL CHIP	1K	5%	1/16W	Q821	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
						Q822	8-729-900-53	TRANSISTOR	DTC114EKA-T146		
		< NETWORK RESISTOR >									
RN101	1-233-576-11	RES, CHIP NETWORK 100									
		< SWITCH >									
S101	1-771-853-11	SWITCH, DETECTION (LIMIT IN SW)									
		< VIBRATOR >									
X101	1-781-947-11	VIBRATOR, CRYSTAL 16.9344MHz									

	A-4732-477-A	CONTROL BOARD, COMPLETE									

	1-757-704-11	CABLE, FLEXIBLE FLAT (15 CORE)									
	1-757-706-11	CABLE, FLEXIBLE FLAT (17 CORE)									
		< CAPACITOR >									
C819	1-124-259-11	ELECT	4.7uF	20.00%	16V						
C820	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V						
						R811	1-216-833-11	METAL CHIP	10K	5%	1/16W
						R812	1-216-814-11	METAL CHIP	270	5%	1/16W
						R813	1-216-815-11	METAL CHIP	330	5%	1/16W
						R814	1-216-817-11	METAL CHIP	470	5%	1/16W
						R815	1-216-818-11	METAL CHIP	560	5%	1/16W
						R816	1-216-819-11	METAL CHIP	680	5%	1/16W
						R817	1-216-821-11	METAL CHIP	1K	5%	1/16W
						R818	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
						R819	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
						R820	1-216-833-11	METAL CHIP	10K	5%	1/16W

HCD-CP333

CONTROL						DISK SENSOR						DRIVER						HEAD PHONE						IN OUT SW					
Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks																
R821	1-216-833-11	METAL CHIP	10K	5%	1/16W			1-678-463-11	DISK SENSOR BOARD																				
R822	1-216-814-11	METAL CHIP	270	5%	1/16W			*****																					
R823	1-216-815-11	METAL CHIP	330	5%	1/16W			< IC >																					
R824	1-216-817-11	METAL CHIP	470	5%	1/16W			IC751	8-749-924-30	PHOTO REFLECTOR GP2S28																			
R825	1-216-818-11	METAL CHIP	560	5%	1/16W			< RESISTOR >																					
								R751	1-249-407-11	CARBON	150	5%	1/4W F																

R826	1-216-819-11	METAL CHIP	680	5%	1/16W				1-678-460-11	DRIVER BOARD																			
R827	1-216-821-11	METAL CHIP	1K	5%	1/16W				*****																				
R828	1-216-822-11	METAL CHIP	1.2K	5%	1/16W			< CAPACITOR >																					
R829	1-216-824-11	METAL CHIP	1.8K	5%	1/16W			C701	1-124-261-00	ELECT	10uF	20%	50V																
R830	1-216-826-11	METAL CHIP	2.7K	5%	1/16W			C705	1-124-261-00	ELECT	10uF	20%	50V																
								C706	1-164-159-11	CERAMIC	0.1uF		50V																
R835	1-216-845-11	METAL CHIP	100K	5%	1/16W			C707	1-164-159-11	CERAMIC	0.1uF		50V																
R836	1-216-845-11	METAL CHIP	100K	5%	1/16W			< CONNECTOR >																					
R837	1-216-845-11	METAL CHIP	100K	5%	1/16W			CN701	1-785-324-11	PIN, CONNECTOR (STRAIGHT) 12P																			
R838	1-216-845-11	METAL CHIP	100K	5%	1/16W			CN702	1-785-328-11	PIN, CONNECTOR (LIGHT ANGRE)2P																			
R839	1-216-845-11	METAL CHIP	100K	5%	1/16W			CN703	1-785-331-11	PIN, CONNECTOR (LIGHT ANGLE)5P																			
								CN704	1-785-329-11	PIN, CONNECTOR (LIGHT ANGLE)3P																			
R840	1-216-845-11	METAL CHIP	100K	5%	1/16W			CN705	1-785-329-21	PIN, CONNECTOR (LIGHT ANGLE)3P																			
R841	1-216-845-11	METAL CHIP	100K	5%	1/16W			< IC >																					
R842	1-216-845-11	METAL CHIP	100K	5%	1/16W			IC701	8-759-598-69	IC BA6956AN																			
R851	1-249-414-11	CARBON	560	5%	1/4W F			< TRANSISTOR >																					
R852	1-216-037-00	METAL CHIP	330	5%	1/10W			Q701	8-729-029-66	TRANSISTOR	RT1N141S-TP																		
								< RESISTOR >																					
								R701	1-249-429-11	CARBON	10K	5%	1/4W																
								R702	1-249-401-11	CARBON	47	5%	1/4W F																
								R705	1-249-435-11	CARBON	33K	5%	1/4W																
								R706	1-249-417-11	CARBON	1K	5%	1/4W F																
								R707	1-249-429-11	CARBON	10K	5%	1/4W																

									1-681-012-12	HEAD PHONE BOARD																			

								< CAPACITOR >																					
								C135	1-163-009-91	CERAMIC CHIP	0.001uF	10.00%	50V																
								C235	1-163-009-91	CERAMIC CHIP	0.001uF	10.00%	50V																
								< JACK >																					
								J301	1-794-453-11	JACK (PHONES)																			

									1-678-462-11	IN OUT SW BOARD																			

								< SWITCH >																					
								S741	1-771-821-11	SWITCH, PUSH (1 KEY) (IN)																			
								S742	1-771-821-11	SWITCH, PUSH (1 KEY) (OUT)																			

JACK

LCD

LED

MAIN

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	1-687-871-11	JACK BOARD *****		R845	1-216-819-11	METAL CHIP 680 5%	1/16W
		< CONNECTOR >		R846	1-216-819-11	METAL CHIP 680 5%	1/16W
CN305	1-506-468-11	PIN, CONNECTOR 3P		R847	1-216-819-11	METAL CHIP 680 5%	1/16W
		< JACK >		R848	1-216-819-11	METAL CHIP 680 5%	1/16W
PJ301	1-815-045-11	JACK, PIN 2P (L/R AUDIO IN MD(VIDEO))		R849	1-216-819-11	METAL CHIP 680 5%	1/16W
		< RESISTOR >		R850	1-216-819-11	METAL CHIP 680 5%	1/16W
R116	1-216-834-11	METAL CHIP 12K 5%	1/16W			< SWITCH >	
R117	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	S805	1-786-220-11	SWITCH, KEY BOARD (CD3▲)	
R216	1-216-834-11	METAL CHIP 12K 5%	1/16W	S806	1-786-220-11	SWITCH, KEY BOARD (CD3)	
R217	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	S807	1-786-220-11	SWITCH, KEY BOARD (CD2▲)	
*****				S808	1-786-220-11	SWITCH, KEY BOARD (CD2)	
		< CONNECTOR >		S809	1-786-220-11	SWITCH, KEY BOARD (CD1▲)	
CN802	1-793-599-11	CONNECTOR, FFC/FPC (ZIF) 17P		S810	1-786-220-11	SWITCH, KEY BOARD (CD1)	
CN804	1-793-601-11	CONNECTOR, FFC/FPC (ZIF) 21P				A-4732-474-A MAIN BOARD, COMPLETE (AEP,UK)	
		< DIODE >				A-4733-359-A MAIN BOARD, COMPLETE (US,CND)	
D801	8-719-085-55	DIODE SY3318-V-L (LCD BACKLIGHT)				A-4734-564-A MAIN BOARD, COMPLETE (E51)	
D802	8-719-085-55	DIODE SY3318-V-L (LCD BACKLIGHT)				*****	
D803	8-719-085-55	DIODE SY3318-V-L (LCD BACKLIGHT)				4-217-354-11 BUSHING, INSULATING	
D804	8-719-085-55	DIODE SY3318-V-L (LCD BACKLIGHT)				4-230-078-01 SCREW, +BV TAPPING (US,CND)	
D850	8-719-085-55	DIODE SY3318-V-L (LCD BACKLIGHT)				4-230-078-12 SCREW, +BV TAPPING (AEP,UK)	
		< LIQUID CRYSTAL DISPLAY >				7-685-546-14 SCREW +BTP 3X8 TYPE2 N-S	
LCD801	1-803-542-21	DISPLAY PANEL, LIQUID CRYSTAL				7-685-647-79 SCREW +BVTP 3X10 TYPE2 N-S	
*****						< CAPACITOR >	
	1-681-016-12	LED BOARD *****		C101	1-126-963-11	ELECT 4.7uF 20.00% 50V	(EXCEPT E51)
		< DIODE >		C101	1-126-964-11	ELECT 10uF 20.00% 50V	(E51)
D811	8-719-056-12	DIODE SML79420C-TP15 (CD3)		C102	1-126-963-11	ELECT 4.7uF 20.00% 50V	
D812	8-719-056-12	DIODE SML79420C-TP15 (CD2)		C103	1-124-259-11	ELECT 4.7uF 20.00% 16V	
D813	8-719-056-12	DIODE SML79420C-TP15 (CD1)		C104	1-126-963-11	ELECT 4.7uF 20.00% 50V	
		< TRANSISTOR >		C105	1-126-963-11	ELECT 4.7uF 20.00% 50V	(EXCEPT E51)
Q809	8-729-900-53	TRANSISTOR DTC114EKA-T146		C105	1-126-964-11	ELECT 10uF 20.00% 50V	(E51)
Q810	8-729-900-53	TRANSISTOR DTC114EKA-T146		C106	1-126-963-11	ELECT 4.7uF 20.00% 50V	
Q811	8-729-900-53	TRANSISTOR DTC114EKA-T146		C107	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	(AEP,UK)
Q812	8-729-900-53	TRANSISTOR DTC114EKA-T146		C107	1-164-245-11	CERAMIC CHIP 0.015uF 10.00% 25V	(US,CND,E51)
Q813	8-729-900-53	TRANSISTOR DTC114EKA-T146				C108 1-162-927-11 CERAMIC CHIP 100PF 5% 50V	
		< RESISTOR >				C110 1-126-963-11 ELECT 4.7uF 20.00% 50V	
R806	1-216-819-11	METAL CHIP 680 5%	1/16W			C111 1-164-245-11 CERAMIC CHIP 0.015uF 10.00% 25V	
R807	1-216-821-11	METAL CHIP 1K 5%	1/16W			C112 1-164-245-11 CERAMIC CHIP 0.015uF 10.00% 25V	
R808	1-216-822-11	METAL CHIP 1.2K 5%	1/16W			C113 1-107-826-11 CERAMIC CHIP 0.1uF 10.00% 16V	
R809	1-216-824-11	METAL CHIP 1.8K 5%	1/16W			C114 1-107-826-11 CERAMIC CHIP 0.1uF 10.00% 16V	
R810	1-216-826-11	METAL CHIP 2.7K 5%	1/16W			C115 1-162-966-11 CERAMIC CHIP 0.0022uF 10% 50V	
						C118 1-124-259-11 ELECT 4.7uF 20.00% 16V	
						C119 1-126-963-11 ELECT 4.7uF 20.00% 50V	
						C121 1-126-963-11 ELECT 4.7uF 20.00% 50V	(EXCEPT E51)
						C122 1-162-962-11 CERAMIC CHIP 470PF 10% 50V	
						C126 1-126-965-11 ELECT 22uF 20.00% 50V	
						C127 1-130-495-00 MYLAR 0.1uF 5% 50V	
						C130 1-126-967-11 ELECT 47uF 20.00% 50V	

HCD-CP333

MAIN

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C132	1-104-665-11	ELECT	100uF 20.00% 16V	C321	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V
C133	1-130-495-00	MYLAR	0.1uF 5% 50V	C322	1-104-665-11	ELECT	100uF 20.00% 16V
C150	1-162-927-11	CERAMIC CHIP	100PF 5% 50V (AEP,UK)	C323	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V
C151	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP,UK)	C324	1-104-666-11	ELECT	220uF 20.00% 16V
C201	1-126-963-11	ELECT	4.7uF 20.00% 50V (EXCEPT E51)	C325	1-104-665-11	ELECT	100uF 20.00% 16V
C201	1-126-964-11	ELECT	10uF 20.00% 50V (E51)	C329	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V
C202	1-124-259-11	ELECT	4.7uF 20.00% 16V	C330	1-104-665-11	ELECT	100uF 20.00% 16V
C203	1-126-963-11	ELECT	4.7uF 20.00% 50V	C331	1-104-665-11	ELECT	100uF 20.00% 16V
C204	1-126-963-11	ELECT	4.7uF 20.00% 50V	C333	1-126-964-11	ELECT	10uF 20.00% 50V (EXCEPT E51)
C205	1-126-963-11	ELECT	4.7uF 20.00% 50V (EXCEPT E51)	C333	1-126-947-11	ELECT	47uF 20.00% 25V (E51)
C205	1-126-964-11	ELECT	10uF 20.00% 50V (E51)	C334	1-126-940-11	ELECT	330uF 20.00% 16V
C206	1-126-963-11	ELECT	4.7uF 20.00% 50V	C337	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V
C207	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V (AEP,UK)	C338	1-126-963-11	ELECT	4.7uF 20.00% 50V (AEP,UK)
C207	1-164-245-11	CERAMIC CHIP	0.015uF 10.00% 25V (US,CND,E51)	C338	1-128-582-11	ELECT	10uF 20.00% 100V (US,CND,E51)
C208	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C340	1-126-965-11	ELECT	22uF 20.00% 50V (AEP,UK)
C210	1-126-963-11	ELECT	4.7uF 20.00% 50V	C340	1-128-560-11	ELECT	22uF 20.00% 100V (US,CND,E51)
C211	1-164-245-11	CERAMIC CHIP	0.015uF 10.00% 25V	C350	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C212	1-164-245-11	CERAMIC CHIP	0.015uF 10.00% 25V	C351	1-126-947-11	ELECT	47uF 20.00% 25V
C213	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V	C352	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C214	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V	C353	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C215	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	C354	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C218	1-126-963-11	ELECT	4.7uF 20.00% 50V	C356	1-126-941-11	ELECT	470uF 20.00% 16V
C219	1-126-963-11	ELECT	4.7uF 20.00% 50V	C365	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V
C221	1-126-963-11	ELECT	4.7uF 20.00% 50V (EXCEPT E51)	C371	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C221	1-126-964-11	ELECT	10uF 20.00% 50V (E51)	C372	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C222	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C373	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C226	1-126-965-11	ELECT	22uF 20.00% 50V	C374	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C227	1-130-495-00	MYLAR	0.1uF 5% 50V	C375	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C230	1-126-967-11	ELECT	47uF 20.00% 50V	C390	1-164-230-11	CERAMIC CHIP	220PF 5.00% 50V
C232	1-104-665-11	ELECT	100uF 20.00% 16V	C391	1-164-230-11	CERAMIC CHIP	220PF 5.00% 50V
C233	1-130-495-00	MYLAR	0.1uF 5% 50V	C392	1-164-230-11	CERAMIC CHIP	220PF 5.00% 50V
C250	1-162-927-11	CERAMIC CHIP	100PF 5% 50V (AEP,UK)	C393	1-164-230-11	CERAMIC CHIP	220PF 5.00% 50V
C251	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V (AEP,UK)	C394	1-164-230-11	CERAMIC CHIP	220PF 5.00% 50V
C301	1-126-955-11	ELECT	4700uF 20.00% 35V	C395	1-164-230-11	CERAMIC CHIP	220PF 5.00% 50V
C302	1-126-955-11	ELECT	4700uF 20.00% 35V	C397	1-126-963-11	ELECT	4.7uF 20.00% 50V
C303	1-115-339-11	CERAMIC CHIP	0.1uF 10.00% 50V	C398	1-163-227-11	CERAMIC CHIP	10PF 0.50PF 50V
C304	1-115-339-11	CERAMIC CHIP	0.1uF 10.00% 50V	C399	1-162-963-11	CERAMIC CHIP	680PF 10% 50V (AEP,UK)
C305	1-126-941-11	ELECT	470uF 20.00% 16V	C400	1-163-227-11	CERAMIC CHIP	10PF 0.50PF 50V
C306	1-126-767-11	ELECT	1000uF 20.00% 16V	C601	1-125-891-11	CERAMIC CHIP	0.47uF 10.00% 10V
C307	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V	C602	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C311	1-104-665-11	ELECT	100uF 20.00% 16V	C603	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V
C312	1-126-942-61	ELECT	1000uF 20.00% 25V	C801	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C313	1-126-944-11	ELECT	3300uF 20.00% 25V	C802	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C314	1-104-666-11	ELECT	220uF 20.00% 16V	C803	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C315	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V	C804	1-164-160-11	CERAMIC CHIP	20PF 5.00% 50V
C316	1-104-666-11	ELECT	220uF 20.00% 16V	C805	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C317	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V	C806	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V
C320	1-126-941-11	ELECT	470uF 20.00% 16V	C807	1-104-665-11	ELECT	100uF 20.00% 16V
				C810	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V
				C811	1-107-826-11	CERAMIC CHIP	0.1uF 10.00% 16V
				C812	1-126-947-11	ELECT	47uF 20.00% 16V
				C813	1-115-456-21	CAPACITOR	0.22F 5.5V

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C815	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V (AEP,UK)	IC305	8-759-584-40	IC KA7908	
C816	1-126-947-11	ELECT 47uF 20.00%	16V (AEP,UK)	IC308	8-749-016-00	IC HVE0024 (CD DIGITAL OUT OPTICAL)	
C817	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V (AEP,UK)	IC311	8-759-646-54	IC KIA7808API	
C818	1-164-185-11	CERAMIC CHIP 13PF 5.00%	50V (AEP,UK)	IC601	6-800-361-01	IC M30622MGA-A67FP	
C821	1-162-961-11	CERAMIC CHIP 330PF 10%	50V (AEP,UK)	IC602	8-759-153-90	IC uPD7225GB-3B7	
C822	1-126-961-11	ELECT 2.2uF 20.00%	50V (AEP,UK)	IC603	8-759-557-36	IC BU1924F-E2 (AEP,UK)	
C823	1-164-185-11	CERAMIC CHIP 13PF 5.00%	50V (AEP,UK)	IC604	8-759-637-58	IC PST592C-T	
C824	1-164-739-11	CERAMIC CHIP 560PF 5.00%	50V (AEP,UK)	IC606	6-700-176-01	IC MC74VHCT04ADTR2	
C888	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V	< JUMPER RESISTOR >			
< CONNECTOR >				JR304	1-216-864-11	METAL CHIP 0 5% 1/16W	
CN302	1-569-928-11	SOCKET, CONNECTOR 11P		JR307	1-216-864-11	METAL CHIP 0 5% 1/16W	
CN303	1-569-928-11	SOCKET, CONNECTOR 11P		JR308	1-216-864-11	METAL CHIP 0 5% 1/16W	
CN304	1-569-937-11	SOCKET, CONNECTOR 21P		JR310	1-216-864-11	METAL CHIP 0 5% 1/16W	
CN307	1-506-469-11	PIN, CONNECTOR 4P		< COIL >			
* CN313	1-568-939-11	PIN, CONNECTOR 12P		L101	1-422-009-13	COIL, AIR-CORE (AEP,UK)	
CN801	1-793-600-11	CONNECTOR, FFC/FPC (ZIF) 17P		L102	1-410-750-41	INDUCTOR 0.47uH	
CN803	1-793-602-11	CONNECTOR, FFC/FPC (ZIF) 21P		L201	1-422-009-13	COIL, AIR-CORE (AEP,UK)	
CN805	1-568-834-11	SOCKET, CONNECTOR 15P		< TRANSISTOR >			
* CN806	1-569-934-11	SOCKET, CONNECTOR 17P		Q110	8-729-920-31	TRANSISTOR DTC343TK-T-146	
* CN809	1-506-984-11	PIN, CONNECTOR (PC BOARD) 2P		Q150	8-729-920-31	TRANSISTOR DTC343TK-T-146	
* CN810	1-506-984-11	PIN, CONNECTOR (PC BOARD) 2P		Q210	8-729-920-31	TRANSISTOR DTC343TK-T-146	
< DIODE >				Q250	8-729-920-31	TRANSISTOR DTC343TK-T-146	
D309	8-719-109-97	DIODE MTZJ-T-77-6.8C (EXCEPT E51)		Q303	8-729-038-55	TRANSISTOR KRA103S	
D309	8-719-921-63	DIODE MTZJ-T-77-7.5B (E51)		Q304	8-729-038-67	TRANSISTOR KRC102S	
D314	8-719-109-89	DIODE MTZJ-T-77-5.6B		Q305	8-729-900-53	TRANSISTOR DTC114EKA-T146	
D319	8-719-921-63	DIODE MTZJ-T-77-7.5B		Q310	8-729-019-00	TRANSISTOR KTC2026	
D321	8-719-110-31	DIODE MTZJ-T-77-12B		Q311	8-759-068-54	TRANSISTOR KRA102S	
D323	8-719-110-14	DIODE MTZJ-T-77-9.1C		Q312	8-729-038-68	TRANSISTOR KRC103S	
D350	8-719-109-89	DIODE MTZJ-T-77-5.6B		Q314	8-729-028-54	TRANSISTOR KTC3205-Y-AT	
D805	8-719-982-11	DIODE MTZJ-T-77-4.3B (AEP,UK)		Q315	8-759-068-54	TRANSISTOR KRA102S	
D806	8-719-991-33	DIODE 1SS133T-77		Q316	8-729-038-68	TRANSISTOR KRC103S	
D807	8-719-991-33	DIODE 1SS133T-77		Q330	8-729-038-68	TRANSISTOR KRC103S	
D808	8-719-991-33	DIODE 1SS133T-77		Q350	8-729-019-00	TRANSISTOR KTC2026	
D809	8-719-200-82	DIODE 11ES2-TA1B		Q360	8-729-028-54	TRANSISTOR KTC3205-Y-AT	
D810	8-719-200-82	DIODE 11ES2-TA1B		Q361	8-729-202-56	TRANSISTOR 2SA950-Y-TPE2	
D825	8-719-991-33	DIODE 1SS133T-77		Q362	8-729-038-68	TRANSISTOR KRC103S	
D827	8-719-991-33	DIODE 1SS133T-77		Q364	8-729-202-56	TRANSISTOR 2SA950-Y-TPE2	
< GROUND TERMINAL >				Q365	8-729-038-68	TRANSISTOR KRC103S	
GP301	1-537-770-21	TERMINAL BOARD, GROUND		Q366	8-729-202-56	TRANSISTOR 2SA950-Y-TPE2	
GP302	1-537-770-21	TERMINAL BOARD, GROUND		Q367	8-729-038-68	TRANSISTOR KRC103S	
< IC >				Q801	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R (AEP,UK)	
IC101	8-759-584-38	IC TDA7296		Q802	8-729-037-02	TRANSISTOR KTA1266Y-AT	
IC201	8-759-584-38	IC TDA7296		Q803	8-729-038-67	TRANSISTOR KRC102S	
IC301	6-700-261-01	IC BD3861FS		Q804	8-729-038-67	TRANSISTOR KRC102S	
IC303	8-759-359-49	IC NJM3414AV(Te2)		Q805	8-729-037-02	TRANSISTOR KTA1266Y-AT	
IC304	8-759-646-54	IC KIA7808API		Q806	8-729-038-67	TRANSISTOR KRC102S	
< RESISTOR >				Q808	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R	
R101	1-216-821-11	METAL CHIP 1K 5% 1/16W		Q830	8-729-037-02	TRANSISTOR KTA1266Y-AT	
R102	1-216-821-11	METAL CHIP 1K 5% 1/16W		Q831	8-729-038-67	TRANSISTOR KRC102S	
R104	1-216-833-11	METAL CHIP 10K 5% 1/16W		< RESISTOR >			
R105	1-216-829-11	METAL CHIP 4.7K 5% 1/16W		R101	1-216-821-11	METAL CHIP 1K 5% 1/16W	
				R102	1-216-821-11	METAL CHIP 1K 5% 1/16W	
				R104	1-216-833-11	METAL CHIP 10K 5% 1/16W	
				R105	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	

HCD-CP333

MAIN

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
R106	1-216-833-11	METAL CHIP	10K	5%	1/16W		R359	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R107	1-216-832-11	METAL CHIP	8.2K	5%	1/16W		R360	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R108	1-216-827-11	METAL CHIP	3.3K	5%	1/16W		R361	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R109	1-216-821-11	METAL CHIP	1K	5%	1/16W		R390	1-249-414-11	CARBON	560	5%	1/4W F	
R112	1-216-827-11	METAL CHIP	3.3K	5%	1/16W		R394	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	(US,CND,E51)
R119	1-216-841-11	METAL CHIP	47K	5%	1/16W								
R121	1-216-808-11	METAL CHIP	82	5%	1/16W		R394	1-216-864-11	METAL CHIP	0	5%	1/16W	(AEP,UK)
R123	1-216-818-11	METAL CHIP	560	5%	1/16W		R513	1-216-846-11	METAL CHIP	120K	5%	1/16W	
R124	1-216-839-11	METAL CHIP	33K	5%	1/16W		R517	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R125	1-216-841-11	METAL CHIP	47K	5%	1/16W		R518	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R126	1-216-845-11	METAL CHIP	100K	5%	1/16W		R519	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R127	1-249-389-11	CARBON	4.7	5%	1/4W F		R520	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R130	1-216-821-11	METAL CHIP	1K	5%	1/16W		R522	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R131	1-216-817-11	METAL CHIP	470	5%	1/16W		R523	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R133	1-216-821-11	METAL CHIP	1K	5%	1/16W		R524	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R201	1-216-821-11	METAL CHIP	1K	5%	1/16W		R526	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R202	1-216-821-11	METAL CHIP	1K	5%	1/16W		R527	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R204	1-216-833-11	METAL CHIP	10K	5%	1/16W		R603	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R205	1-216-829-11	METAL CHIP	4.7K	5%	1/16W		R604	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R206	1-216-833-11	METAL CHIP	10K	5%	1/16W		R605	1-216-809-11	METAL CHIP	100	5%	1/16W	
R207	1-216-832-11	METAL CHIP	8.2K	5%	1/16W		R606	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R208	1-216-827-11	METAL CHIP	3.3K	5%	1/16W		R607	1-216-809-11	METAL CHIP	100	5%	1/16W	
R209	1-216-821-11	METAL CHIP	1K	5%	1/16W		R609	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R212	1-216-827-11	METAL CHIP	3.3K	5%	1/16W		R616	1-249-398-11	CARBON	27	5%	1/4W F	(AEP,UK)
R219	1-216-841-11	METAL CHIP	47K	5%	1/16W		R616	1-249-401-11	CARBON	47	5%	1/4W F	(US,CND,E51)
R221	1-216-808-11	METAL CHIP	82	5%	1/16W								
R223	1-216-818-11	METAL CHIP	560	5%	1/16W		R617	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R224	1-216-839-11	METAL CHIP	33K	5%	1/16W		R618	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R225	1-216-841-11	METAL CHIP	47K	5%	1/16W		R619	1-216-809-11	METAL CHIP	100	5%	1/16W	
R226	1-216-845-11	METAL CHIP	100K	5%	1/16W		R620	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R227	1-249-389-11	CARBON	4.7	5%	1/4W F		R621	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R230	1-216-821-11	METAL CHIP	1K	5%	1/16W		R622	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R231	1-216-817-11	METAL CHIP	470	5%	1/16W		R623	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R233	1-216-821-11	METAL CHIP	1K	5%	1/16W		R624	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R303	1-216-805-11	METAL CHIP	47	5%	1/16W		R625	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R310	1-216-805-11	METAL CHIP	47	5%	1/16W		R626	1-216-849-11	METAL CHIP	220K	5%	1/16W	
R314	1-216-817-11	METAL CHIP	470	5%	1/16W		R627	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R317	1-216-821-11	METAL CHIP	1K	5%	1/16W		R628	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R318	1-216-805-11	METAL CHIP	47	5%	1/16W		R629	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R325	1-216-841-11	METAL CHIP	47K	5%	1/16W		R630	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R326	1-216-841-11	METAL CHIP	47K	5%	1/16W		R632	1-216-809-11	METAL CHIP	100	5%	1/16W	
R334	1-216-829-11	METAL CHIP	4.7K	5%	1/16W		R633	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R335	1-216-833-11	METAL CHIP	10K	5%	1/16W		R634	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R336	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	(US,CND,E51)	R635	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R336	1-216-833-11	METAL CHIP	10K	5%	1/16W	(AEP,UK)	R636	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R343	1-216-841-11	METAL CHIP	47K	5%	1/16W		R637	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R345	1-216-843-11	METAL CHIP	68K	5%	1/16W		R638	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R346	1-216-843-11	METAL CHIP	68K	5%	1/16W		R639	1-216-809-11	METAL CHIP	100	5%	1/16W	
R347	1-216-841-11	METAL CHIP	47K	5%	1/16W		R640	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R348	1-216-841-11	METAL CHIP	47K	5%	1/16W		R641	1-216-809-11	METAL CHIP	100	5%	1/16W	
R350	1-216-833-11	METAL CHIP	10K	5%	1/16W		R642	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R351	1-216-817-11	METAL CHIP	470	5%	1/16W		R643	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R353	1-216-829-11	METAL CHIP	4.7K	5%	1/16W		R644	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R356	1-216-825-11	METAL CHIP	2.2K	5%	1/16W		R645	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R357	1-216-827-11	METAL CHIP	3.3K	5%	1/16W		R646	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R358	1-216-827-11	METAL CHIP	3.3K	5%	1/16W		R647	1-216-821-11	METAL CHIP	1K	5%	1/16W	
							R648	1-216-821-11	METAL CHIP	1K	5%	1/16W	

MAIN

MOTOR

POWER

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R649	1-216-821-11	METAL CHIP	1K 5% 1/16W	R865	1-216-841-11	METAL CHIP	47K 5% 1/16W (AEP,UK)
R650	1-216-821-11	METAL CHIP	1K 5% 1/16W	R866	1-216-809-11	METAL CHIP	100 5% 1/16W
R651	1-216-821-11	METAL CHIP	1K 5% 1/16W	R867	1-216-843-11	METAL CHIP	68K 5% 1/16W (AEP,UK)
R653	1-216-821-11	METAL CHIP	1K 5% 1/16W	R869	1-216-833-11	METAL CHIP	10K 5% 1/16W
R655	1-216-821-11	METAL CHIP	1K 5% 1/16W	R870	1-216-841-11	METAL CHIP	47K 5% 1/16W
R656	1-216-821-11	METAL CHIP	1K 5% 1/16W	R871	1-216-841-11	METAL CHIP	47K 5% 1/16W
R657	1-216-821-11	METAL CHIP	1K 5% 1/16W	R872	1-216-837-11	METAL CHIP	22K 5% 1/16W
R658	1-216-821-11	METAL CHIP	1K 5% 1/16W	R873	1-216-837-11	METAL CHIP	22K 5% 1/16W
R659	1-216-821-11	METAL CHIP	1K 5% 1/16W	R874	1-216-837-11	METAL CHIP	22K 5% 1/16W
R660	1-216-821-11	METAL CHIP	1K 5% 1/16W	R875	1-216-815-11	METAL CHIP	330 5% 1/16W
R661	1-216-821-11	METAL CHIP	1K 5% 1/16W	R876	1-216-841-11	METAL CHIP	47K 5% 1/16W
R663	1-216-821-11	METAL CHIP	1K 5% 1/16W	R877	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R665	1-216-821-11	METAL CHIP	1K 5% 1/16W	R878	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R666	1-216-821-11	METAL CHIP	1K 5% 1/16W	R879	1-249-408-11	CARBON	180 5% 1/4W F
R667	1-216-821-11	METAL CHIP	1K 5% 1/16W	R880	1-249-408-11	CARBON	180 5% 1/4W F
R668	1-216-821-11	METAL CHIP	1K 5% 1/16W	R881	1-216-841-11	METAL CHIP	47K 5% 1/16W
R669	1-216-821-11	METAL CHIP	1K 5% 1/16W	R882	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R670	1-216-821-11	METAL CHIP	1K 5% 1/16W	R890	1-216-841-11	METAL CHIP	47K 5% 1/16W
R671	1-216-821-11	METAL CHIP	1K 5% 1/16W	R891	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R672	1-216-821-11	METAL CHIP	1K 5% 1/16W			< TERMINAL >	
R673	1-216-821-11	METAL CHIP	1K 5% 1/16W	SJ301	1-694-820-11	TERMINAL BOARD (L/R SPEAKER IMPEADANCE USE 6~16 Ω)	
R674	1-216-821-11	METAL CHIP	1K 5% 1/16W			< VIBRATOR >	
R675	1-216-821-11	METAL CHIP	1K 5% 1/16W	X801	1-567-098-41	VIBRATOR, CRYSTAL 32.768kHz	
R676	1-216-821-11	METAL CHIP	1K 5% 1/16W	X802	1-781-107-21	VIBRATOR, SERAMIC 16MHZ	
R677	1-216-821-11	METAL CHIP	1K 5% 1/16W	X803	1-579-242-41	VIBRATOR, CRYSTAL 4.332MHZ (AEP,UK)	
R678	1-216-821-11	METAL CHIP	1K 5% 1/16W			*****	
R679	1-216-821-11	METAL CHIP	1K 5% 1/16W		1-678-461-11	MOTOR BOARD	
R680	1-216-821-11	METAL CHIP	1K 5% 1/16W			*****	
R681	1-216-821-11	METAL CHIP	1K 5% 1/16W			< CAPACITOR >	
R682	1-216-821-11	METAL CHIP	1K 5% 1/16W	C721	1-162-306-11	CERAMIC	0.01uF 30.00% 16V
R683	1-216-821-11	METAL CHIP	1K 5% 1/16W			*****	
R684	1-216-821-11	METAL CHIP	1K 5% 1/16W		1-681-015-12	POWER BOARD (AEP,UK,E51)	
R685	1-216-821-11	METAL CHIP	1K 5% 1/16W		1-681-015-22	POWER BOARD (US,CND)	
R686	1-216-821-11	METAL CHIP	1K 5% 1/16W			*****	
R687	1-216-821-11	METAL CHIP	1K 5% 1/16W			< CAPACITOR >	
R688	1-216-821-11	METAL CHIP	1K 5% 1/16W	C907	1-101-005-00	CERAMIC	22000PF 50V
R689	1-216-821-11	METAL CHIP	1K 5% 1/16W	C908	1-101-005-00	CERAMIC	22000PF 50V
R690	1-216-821-11	METAL CHIP	1K 5% 1/16W	C909	1-101-005-00	CERAMIC	22000PF 50V
R691	1-216-821-11	METAL CHIP	1K 5% 1/16W	C910	1-101-005-00	CERAMIC	22000PF 50V
R692	1-216-821-11	METAL CHIP	1K 5% 1/16W	C911	1-161-494-00	CERAMIC	0.022uF 25V
R693	1-216-821-11	METAL CHIP	1K 5% 1/16W	C912	1-161-494-00	CERAMIC	0.022uF 25V
R694	1-216-821-11	METAL CHIP	1K 5% 1/16W	C913	1-161-494-00	CERAMIC	0.022uF 25V
R695	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	C914	1-161-494-00	CERAMIC	0.022uF 25V
R696	1-216-821-11	METAL CHIP	1K 5% 1/16W	C925	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V (AEP,UK)
R697	1-216-825-11	METAL CHIP	2.2K 5% 1/16W (US,CND,E51)	C927	1-126-767-11	ELECT	1000uF 20.00% 16V
R698	1-216-821-11	METAL CHIP	1K 5% 1/16W	C928	1-104-666-11	ELECT	220uF 20.00% 16V
R699	1-216-864-11	METAL CHIP	0 5% 1/16W (AEP,UK)	C930	1-104-665-11	ELECT	100uF 20.00% 16V
R854	1-216-818-11	METAL CHIP	560 5% 1/16W				
R860	1-216-829-11	METAL CHIP	4.7K 5% 1/16W (AEP,UK)				
R861	1-216-853-11	METAL CHIP	470K 5% 1/16W (AEP,UK)				
R862	1-216-845-11	METAL CHIP	100K 5% 1/16W (AEP,UK)				
R863	1-216-821-11	METAL CHIP	1K 5% 1/16W (AEP,UK)				
R864	1-216-814-11	METAL CHIP	270 5% 1/16W (AEP,UK)				

HCD-CP333

POWER

TC

Ref. No.	Part No.	Description	Remarks
< CONNECTOR >			
CN901	1-564-321-00	PIN, CONNECTOR(3.96mm PITCH)2P	
CN902	1-766-282-11	PIN, CONNECTOR (PC BOARD) 9P	
< DIODE >			
D901	8-719-991-33	DIODE 1SS133T-77	
D903	6-500-522-01	DIODE 10EDB40-TA1B2	
D904	6-500-522-01	DIODE 10EDB40-TA1B2	
D905	6-500-522-01	DIODE 10EDB40-TA1B2	
D906	6-500-522-01	DIODE 10EDB40-TA1B2	
D907	8-719-902-17	DIODE 1N5401	
D908	8-719-902-17	DIODE 1N5401	
D909	8-719-902-17	DIODE 1N5401	
D910	8-719-902-17	DIODE 1N5401	
D911	8-719-046-07	DIODE 2A02M	
D912	8-719-046-07	DIODE 2A02M	
D913	8-719-046-07	DIODE 2A02M	
D914	8-719-046-07	DIODE 2A02M	
D915	8-719-109-97	DIODE MTZJ-T-77-6.8C	
D920	6-500-522-01	DIODE 10EDB40-TA1B2	
< FUSE HOLDER >			
FH901	1-533-313-11	FUSE HOLDER (E51)	
FH902	1-533-313-11	FUSE HOLDER (E51)	
FH903	1-533-313-11	FUSE HOLDER (E51)	
FH904	1-533-313-11	FUSE HOLDER (E51)	
FH905	1-533-313-11	FUSE HOLDER	
FH906	1-533-313-11	FUSE HOLDER	
FH907	1-533-313-11	FUSE HOLDER	
FH908	1-533-313-11	FUSE HOLDER	
FH909	1-533-313-11	FUSE HOLDER	
FH910	1-533-313-11	FUSE HOLDER	
< GROUND TERMINAL >			
G901	1-537-770-21	TERMINAL BOARD, GROUND (US,CND)	
< TRANSISTOR >			
Q901	8-729-028-54	TRANSISTOR KTC3205-Y-AT	
Q902	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q903	8-729-028-54	TRANSISTOR KTC3205-Y-AT	
< RESISTOR >			
△ R901	1-219-237-11	SOLID 3.3M 20% 1/2W (US,CND)	
R913	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R914	1-249-437-11	CARBON 47K 5% 1/4W	
R916	1-249-417-11	CARBON 1K 5% 1/4W F	
< RELAY >			
△ RY901	1-755-332-11	RELAY	
<SWITCH>			
△ S901	1-786-152-11	SWITCH, SLIDE (VOLTAGE SELECTOR) (E51)	
< TRANSFORMER >			
△ T902	1-437-253-11	TRANSFORMER, POWER (SUB) (E51)	
△ T902	1-437-730-11	TRANSFORMER, POWER (SUB) (AEP,UK)	
△ T902	1-437-731-11	TRANSFORMER, POWER (SUB) (US,CND)	

Ref. No.	Part No.	Description	Remarks
A-2007-972-A TC BOARD, COMPLETE			

< CAPACITOR >			
C401	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C402	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C403	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C404	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C405	1-130-486-00	MYLAR 0.018uF 10% 50V	
C406	1-126-934-11	ELECT 220uF 20.00% 10V	
C407	1-126-947-11	ELECT 47uF 20.00% 16V	
C408	1-130-486-00	MYLAR 0.018uF 10% 50V	
C409	1-126-934-11	ELECT 220uF 20.00% 10V	
C410	1-126-961-11	ELECT 2.2uF 20.00% 50V	
C411	1-126-947-11	ELECT 47uF 20.00% 16V	
C412	1-104-665-11	ELECT 100uF 20.00% 16V	
C413	1-126-963-11	ELECT 4.7uF 20.00% 50V	
C414	1-126-947-11	ELECT 47uF 20.00% 16V	
C415	1-126-963-11	ELECT 4.7uF 20.00% 50V	
C416	1-126-947-11	ELECT 47uF 20.00% 16V	
C417	1-126-963-11	ELECT 4.7uF 20.00% 50V	
C418	1-126-963-11	ELECT 4.7uF 20.00% 50V	
C419	1-126-964-11	ELECT 10uF 20.00% 50V	
C420	1-126-964-11	ELECT 10uF 20.00% 50V	
C421	1-162-963-11	CERAMIC CHIP 680PF 10% 50V	
C422	1-162-963-11	CERAMIC CHIP 680PF 10% 50V	
C423	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C424	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C425	1-104-665-11	ELECT 100uF 20.00% 16V	
C426	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C427	1-130-481-00	MYLAR 0.0068uF 5% 50V	
C428	1-126-947-11	ELECT 47uF 20.00% 16V	
C429	1-130-483-00	MYLAR 0.01uF 5% 50V	
C430	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C431	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C432	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C436	1-126-961-11	ELECT 2.2uF 20.00% 50V	
C438	1-128-551-11	ELECT 22uF 20.00% 25V	
< CONNECTOR >			
CN401	1-569-928-11	SOCKET, CONNECTOR 11P	
< IC >			
IC401	8-759-242-58	IC TA8189N	
IC402	8-759-508-69	IC BA3126N	
< TRANSISTOR >			
Q401	8-729-028-54	TRANSISTOR KTC3205-Y-AT	
Q402	8-729-037-02	TRANSISTOR KTA1266Y-AT	
Q403	8-729-038-67	TRANSISTOR KRC102S	
Q404	8-729-920-31	TRANSISTOR DTC343TK-T-146	
Q405	8-729-920-31	TRANSISTOR DTC343TK-T-146	
Q406	8-729-920-31	TRANSISTOR DTC343TK-T-146	
Q410	8-729-038-67	TRANSISTOR KRC102S	
Q413	8-729-920-31	TRANSISTOR DTC343TK-T-146	
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.			
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.			

TC

TRAY SENSOR

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
< RESISTOR >						1-678-457-11 TRAY SENSOR BOARD *****					
R401	1-216-821-11	METAL CHIP	1K	5%	1/16W	< CAPACITOR >					
R402	1-216-821-11	METAL CHIP	1K	5%	1/16W						
R403	1-216-821-11	METAL CHIP	1K	5%	1/16W						
R404	1-216-821-11	METAL CHIP	1K	5%	1/16W	C731	1-164-159-11	CERAMIC	0.1uF	50V	
R405	1-216-809-11	METAL CHIP	100	5%	1/16W	< IC >					
R406	1-216-848-11	METAL CHIP	180K	5%	1/16W	IC731	8-749-016-76	IC	RPI-321		
R407	1-218-867-11	METAL CHIP	6.8K	5%	1/10W	IC732	8-749-016-76	IC	RPI-321		
R409	1-216-833-11	METAL CHIP	10K	5%	1/16W	IC733	8-749-016-76	IC	RPI-321		
R410	1-216-833-11	METAL CHIP	10K	5%	1/16W	< RESISTOR >					
R411	1-216-848-11	METAL CHIP	180K	5%	1/16W						
R412	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	R731	1-247-876-11	CARBON	75K	5%	1/4W
R413	1-216-851-11	METAL CHIP	330K	5%	1/16W	R732	1-249-408-11	CARBON	180	5%	1/4W F
R415	1-216-857-11	METAL CHIP	1M	5%	1/16W	R733	1-247-876-11	CARBON	75K	5%	1/4W
R416	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R734	1-249-408-11	CARBON	180	5%	1/4W F
R417	1-216-833-11	METAL CHIP	10K	5%	1/16W	R735	1-247-876-11	CARBON	75K	5%	1/4W
R418	1-216-815-11	METAL CHIP	330	5%	1/16W	R736	1-249-408-11	CARBON	180	5%	1/4W F
R419	1-216-815-11	METAL CHIP	330	5%	1/16W	*****					
R422	1-218-867-11	METAL CHIP	6.8K	5%	1/10W	MISCELLANEOUS					
R423	1-216-848-11	METAL CHIP	180K	5%	1/16W	*****					
R424	1-216-809-11	METAL CHIP	100	5%	1/16W						
R426	1-216-848-11	METAL CHIP	180K	5%	1/16W	6	1-796-078-11	DECK, MECH			
R427	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	7	1-757-707-11	CABLE, FLEXIBLE FLAT (11 CORE)			
R428	1-216-851-11	METAL CHIP	330K	5%	1/16W	10	1-757-705-11	CABLE, FLEXIBLE FLAT (11 CORE)			
R429	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	62	1-418-692-32	INDICATOR BLOCK, LED			
R430	1-216-833-11	METAL CHIP	10K	5%	1/16W	63	1-418-693-32	INDICATOR BLOCK, LED			
R431	1-216-809-11	METAL CHIP	100	5%	1/16W	69	1-757-702-11	CABLE, FLEXIBLE FLAT (17 CORE)			
R432	1-216-836-11	METAL CHIP	18K	5%	1/16W	70	1-757-703-11	CABLE, FLEXIBLE FLAT (21 CORE)			
R433	1-216-836-11	METAL CHIP	18K	5%	1/16W	74	1-757-704-11	CABLE, FLEXIBLE FLAT (15 CORE)			
R434	1-216-841-11	METAL CHIP	47K	5%	1/16W	75	1-757-706-11	CABLE, FLEXIBLE FLAT (17 CORE)			
R435	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	△ 104	1-696-169-51	CORD, POWER (AEP,UK)			
R436	1-216-797-11	METAL CHIP	10	5%	1/16W	△ 104	1-783-531-72	CORD, POWER (US,CND)			
R437	1-216-833-11	METAL CHIP	10K	5%	1/16W	525	1-757-055-11	WIRE, PARALLEL (FFC) (16 CORE)			
R438	1-216-805-11	METAL CHIP	47	5%	1/16W	526	1-757-708-11	CABLE, FLEXIBLE FLAT (21 CORE)			
R439	1-216-805-11	METAL CHIP	47	5%	1/16W	532	1-471-035-11	MAGNET ASSY			
R440	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	△ 601	A-4735-357-A	BASE ASSY, OP (KSM-213D)			
R441	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	△ F901	1-533-466-11	FUSE, GLASS TUBE (T1.25AL/250V) (E51)			
R442	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	△ F902	1-533-464-11	FUSE, GLASS TUBE (T800mAL/250V) (E51)			
R443	1-218-446-11	METAL CHIP	1	5%	1/10W	△ F903	1-533-468-11	FUSE, GLASS TUBE (DIA.5) (T2AL/250V)	(AEP,UK,E51)		
R444	1-216-837-11	METAL CHIP	22K	5%	1/16W	△ F903	1-576-375-11	FUSE, GLASS TUBE (3.15A/125V) (US,CND)			
R445	1-216-805-11	METAL CHIP	47	5%	1/16W	△ F904	1-533-468-11	FUSE, GLASS TUBE (DIA.5) (T2AL/250V)	(AEP,UK,E51)		
R446	1-216-833-11	METAL CHIP	10K	5%	1/16W	△ F904	1-576-375-11	FUSE, GLASS TUBE (3.15A/125V)	(US,CND,E51)		
R447	1-216-837-11	METAL CHIP	22K	5%	1/16W	△ F905	1-533-464-11	FUSE, GLASS TUBE (DIA.5) (T800mAL/250V)	(AEP,UK)		
R448	1-216-809-11	METAL CHIP	100	5%	1/16W	△ F905	1-576-374-11	FUSE, GLASS TUBE (1.25A/125V) (US,CND)			
R449	1-216-809-11	METAL CHIP	100	5%	1/16W	M102	X-2625-769-1	GEAR ASSY (MB) (RP), MOTOR (SLED)			
R450	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	M721	1-541-632-12	MOTOR, DC (ELEVATOR)			
R451	1-216-295-91	SHORT CHIP	0			△ T901	1-437-248-21	TRANSFORMER, POWER (MAIN) (AEP,UK)			
R455	1-216-841-11	METAL CHIP	47K	5%	1/16W	△ T901	1-437-249-11	TRANSFORMER, POWER (MAIN) (US,CND)			
R456	1-216-841-11	METAL CHIP	47K	5%	1/16W	△ T901	1-437-250-31	TRANSFORMER, POWER (E51)			
R457	1-216-833-11	METAL CHIP	10K	5%	1/16W	< TRANSFORMER >					
R458	1-216-825-11	METAL CHIP	2.2K	5%	1/16W						
T401	1-433-372-31	TRANSFORMER, BIAS OSCILLATION									
T402	1-419-080-11	COIL									
T403	1-419-080-11	COIL									

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]

SS-CCP333

SERVICE MANUAL

Ver 1.0 2003.02



*US Model
Canadian Model
AEP Model
UK Model
E Model*

- SS-CCP333 is the speaker system in CMT-CP333.

SPECIFICATIONS

Speaker system	Two-way, bass reflex system
Speaker units	13 cm dia., cone type woofer 2.5 cm dia., semi-dome-type tweeter
Rated impedance	6 ohms
Dimensions (w/h/d) (CMT-CP333)	Approx. 170 × 275 × 280 mm
Mass	Approx. 3.0 kg net per speaker

Design and specifications are subject to change without notice.

SPEAKER SYSTEM

9-877-052-01
2003B1600-1
© 2003.02

Sony Corporation
Home Audio Company
Published by Sony Engineering Corporation

SONY®


EXPLODED VIEW AND PARTS LIST

- NOTE:
- XX, -X mean standardized parts, so they may have some differences from the original one.

Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The mechanical parts with no reference number in the exploded views are not supplied.

R-CH

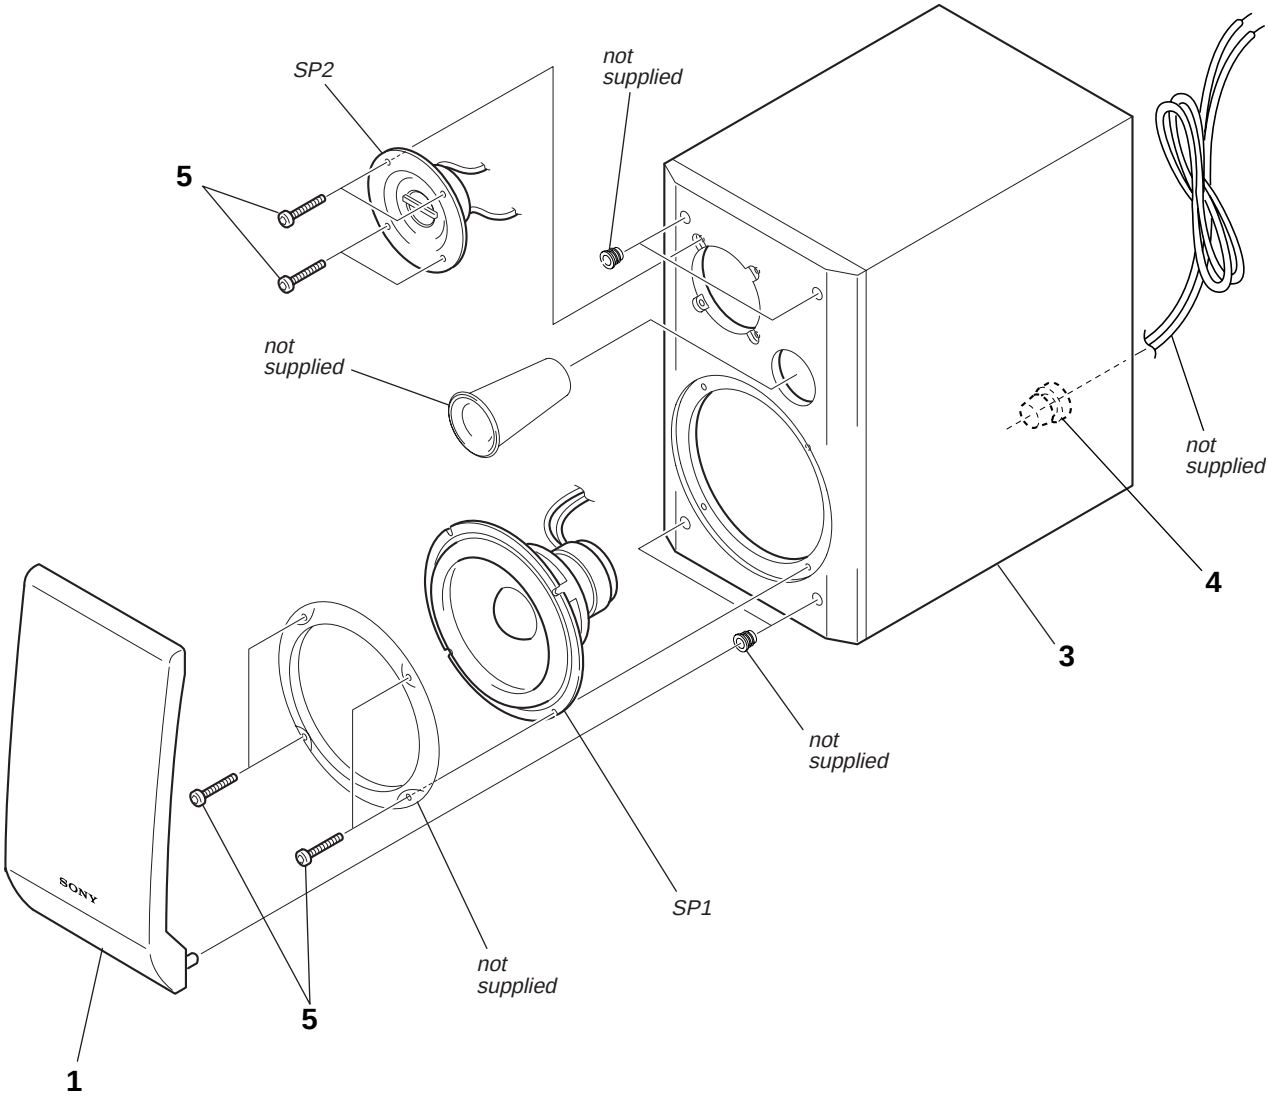

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	X-4955-463-1	NET ASSY, SPEAKER		5	4-932-425-01	SCREW (3.5X20)	
3	4-245-479-01	BOX (R), SPEAKER		SP1	1-825-504-11	SPEAKER (13cm)	
3	4-245-481-01	BOX (L), SPEAKER		SP2	1-544-866-11	SPEAKER (2.5cm)	
4	3-915-975-01	CLIPPER, CODE					

MEMO

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]